

- 4=5/16 X 1 BOLTS-A
- 26=5/16 USS WASHERS-B
- 16=5/16 LOCK NUTS-C
- 10=5/16X1 CARRIAGE HEAD BOLTS (MATTE BLACK)-D
- 2=SPACER #8-E
- 2=5/16 X 2 3/4 BOLTS-F





#BG-42

POLARIS RANGER XP900

- 4=5/16 X 1 1/4 BOLTS
- 4=8MM X 30MM BOLTS

USED ONLY TO MOUNT THE WINCH TO THE BUMPER.

1ST STEP MOUNT THE 1/4 MOUNTING BRACKET TO THE BUMPER OFF THE MACHINE. GO AHEAD MOUNT THE BAR ON TOP OF THE BUMPER ALSO. IF WINCH IS AVAILABLE MOUNT IT ALSO ON THE BUMPER.

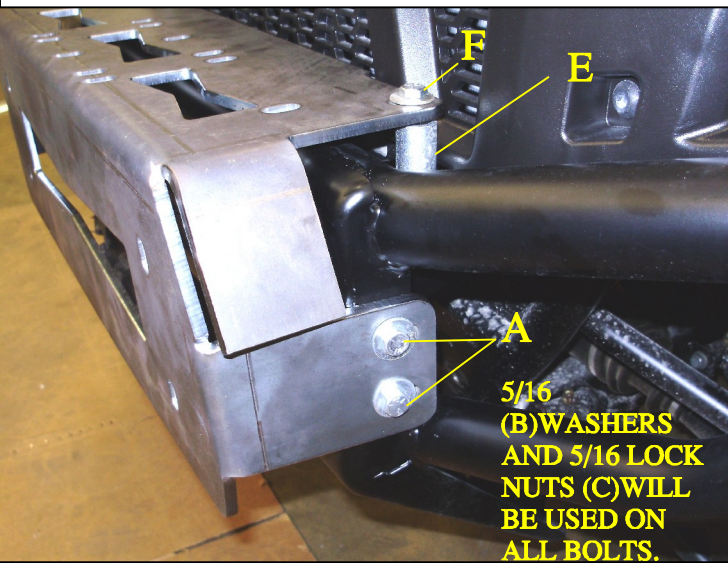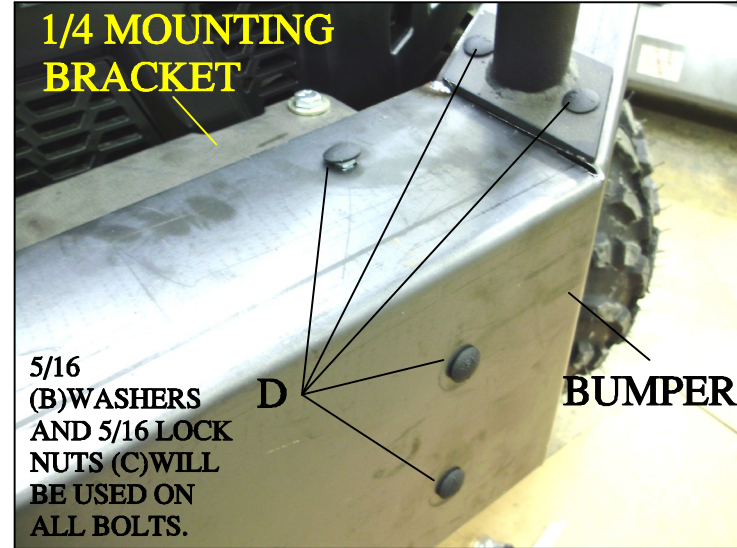

LAST STEP MOUNT MOUNTING BRACKET WITH THE BUMPER ALREADY SECURED TO THE BRACKET TO THE UNIT AS SHOWN HERE. MOUNTS TO THE FRONT STOCK ROUND BUMPER.

THIS IS WHAT THE BUMPER LOOKS LIKE AFTER IT HAS BEEN MOUNTED TO THE UNIT. (WE DID NOT USE ANY BOLTS IN THIS PIC ITS JUST FOR A VIEW OF IT INSTALLED.)

