

- 26=5/16 USS WASHERS-A
- 18=5/16 LOCK NUTS-B
- 10=5/16 X 1 CARRIAGE HEAD BOLTS-C
- 4=5/16 X 2 3/4 BOLTS-D
- 2=5/16 X 1 U-BOLTS-E




#BG-43W

KAWASAKI TERYX 800 4X4 2014

- 4=5/16 X 1 1/4 BOLTS
 - 4=8MM X 30MM BOLTS
- USED ONLY TO MOUNT THE WINCH TO THE BUMPER.

1ST STEP MOUNT THE MAIN BRACKET TO THE FRONT BUMPER. MUST CENTER THE BRACKET FOR THE BUMPER TO MOUNT CORRECT. THIS PICTURE WILL SHOW HOW TO SECURE THE BRACKET WITH THE U-BOLTS.

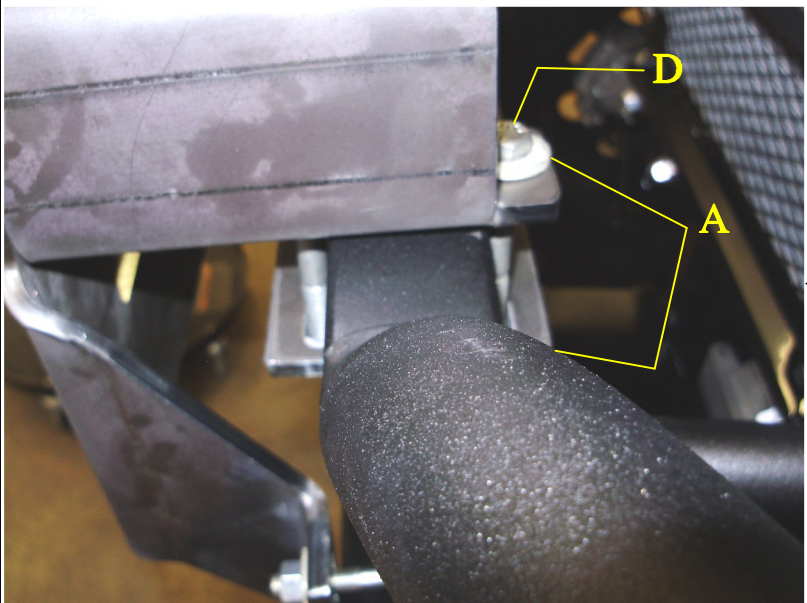

2ND STEP USE THE FLAT BAR FOUR HOLE STRAP AND SLIDE IT UNDER THE SQUARE TUBE OF STOCK BUMPER. USE THE 5/16 X 2 3/4 BOLTS WASHERS AND LOCK NUTS TO SECURE TO THE BUMPER.

LAST STEP SLIDE THE BUMPER OVER THE BRACKET AND SECURE IT TO THE BRACKET WITH 5/16 CARRIAGE HEAD BOLTS 5/16 WASHER AND LOCK NUTS. YOU SHOULD USE SIX TOTAL PLACE THEM INTO THE SQUARE HOLES.

