


4=5/16X1 U-BOLTS
18=5/16 LOCK NUTS
18=5/16 USS WASHERS
10=5/16X1 PAINTED CARRIAGE
HEAD BOLTS.



#BG-48W

HONDA PIONEER 500 FRONT BUMPER

PLACE THE MAIN MOUNTING BRACKET
ONTO THE FRONT BUMPER INSERT THE
UBOLTS WITH WASHERS AND LOCK NUTS.
CENTER THE BRACKET.

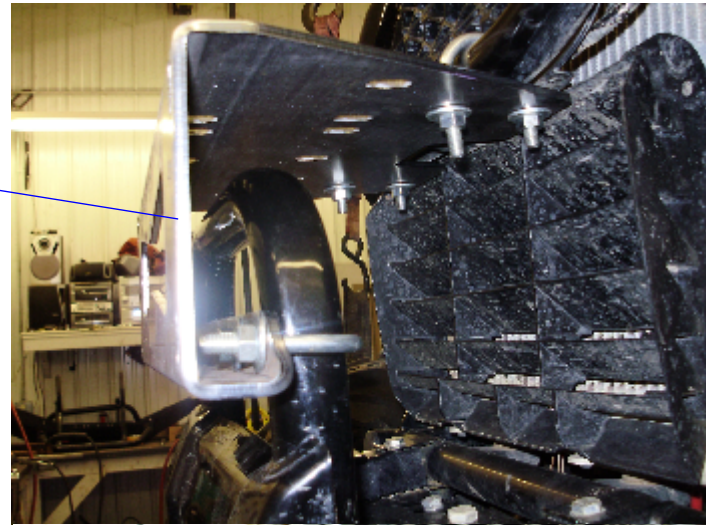

USE A LEVEL TO LEVEL THE TOP BRACKET
AS BEST YOU CAN THIS WILL MAKE THE BUMPER
LOOK BETTER ONCE MOUNTED.



SLIDE THE BUMPER OVER MAIN BRACKET AND SECURE IT WITH THE 5/16X1 CARRIAGE
HEAD BOLTS 5/16 LOCK NUTS AND 5/16 USS WASHERS. THE GRAB BAR WILL ALSO USE
THE SAME HARDWARE. THE WINCH WILL HAVE ITS OWN HARDWARE FOR MOUNTING.

