



2= 10MMX1.25X80MM BOLTS
 2=10MMX1.25 NUTS
 6=1" CARRIAGE HEAD PAINTED BOLTS
 8=5/16X1 BOLTS
 22=5/16USS WASHERS
 14=5/16 LOCK NUTS

REMOVE STOCK BUMPER. PLACE THE 1/4 NAME PLATE ON FRONT USE 5/16X1 BOLTS WASHERS AND LOCK NUTS TO SECURE THE BOTTOM.



BG-50W

CAN AM MAVERICK 1000R FRONT BUMPER

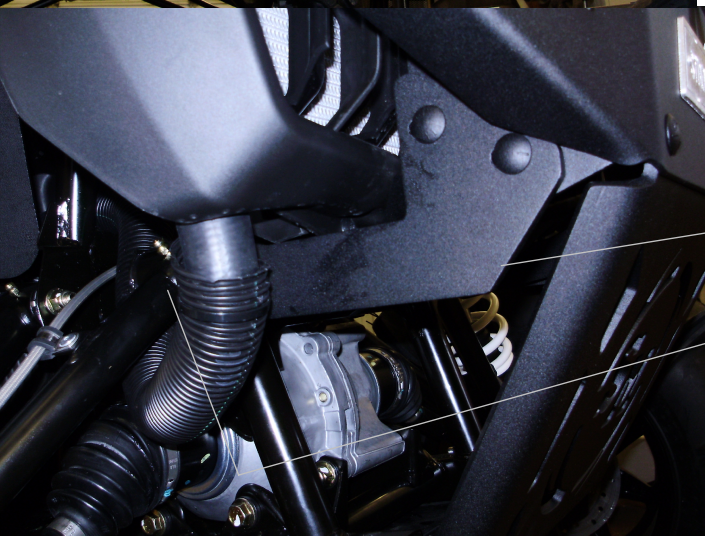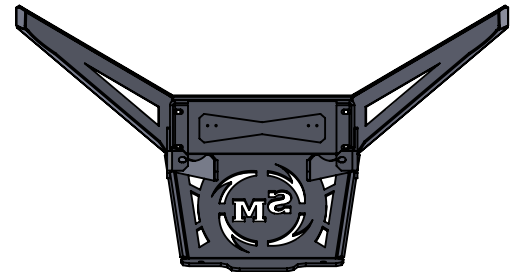

INSTALL THE OUTER SIDE BRACKETS ON LEAVE ALL HARDWARE LOOSE. THERE IS A RIGHT AND LEFT WHEN MOUNTING THE BRACKETS. USE THE 5/16 BOLTS WASHERS LOCK NUTS. ALSO REMOVE THE TOP CONTROL ARM BOLT REPLACE IT WITH THE SUPPLIED 80MM BOLT AND LOCK NUT.

REMOVE STOCK CONTROL ARM BOLT AND REPLACE IT WITH THE 80MM AND 10MM LOCK NUT.

INSTALL THE INNER BRACKETS ON LEAVE ALL HARDWARE LOOSE. THERE IS A RIGHT AND LEFT WHEN MOUNTING THE BRACKETS. USE CARRIAGE HEAD BOLT WASHERS AND LOCK NUTS. TIGHTEN ALL HARDWARE.

