



- 2=1/4 X 3/4 U-BOLTS
- 2=1/4 X 1/2 U-BOLTS
- 8=1/4 USS WASHERS
- 8=1/4 LOCK NUTS

8=1/4 ROD CAPS(USED ON EXISTING THREADS OF U-BOLTS)
 4=1 1/2" ROUND PLUGS THESE WILL INSERT INTO THE ENDS
 OF THE 1 1/2" ROUND PIPE.


RBG-38

2012 HONDA FOREMAN 500


TOP OF THE BRACKET.

USE THE 1/4 X 1/2 U-BOLTS
 AND 1/4 USS WASHERS AND
 1/4 LOCK NUTS TO MOUNT THE
 TOP OF THE BUMPER TO THE ATV.

- 1/4 X 1/2 U-BOLT
- 1/4 USS WASHERS
- 1/4 LOCK NUTS

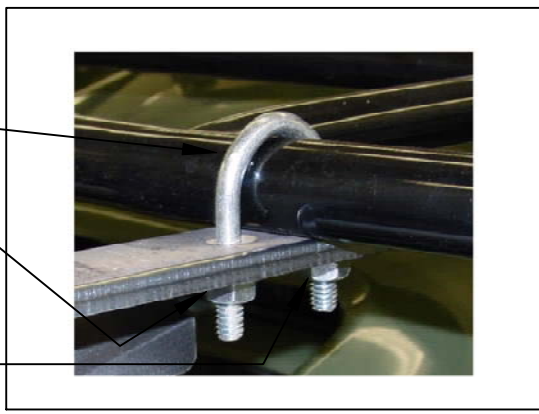

USE THE 1/4 X 3/4 U-BOLTS
 AND 1/4 USS WASHERS AND
 1/4 LOCK NUTS TO MOUNT THE
 BOTTOM PART OF THE BUMPER BRACKET
 TO THE REAR RACK OF TO THE ATV.

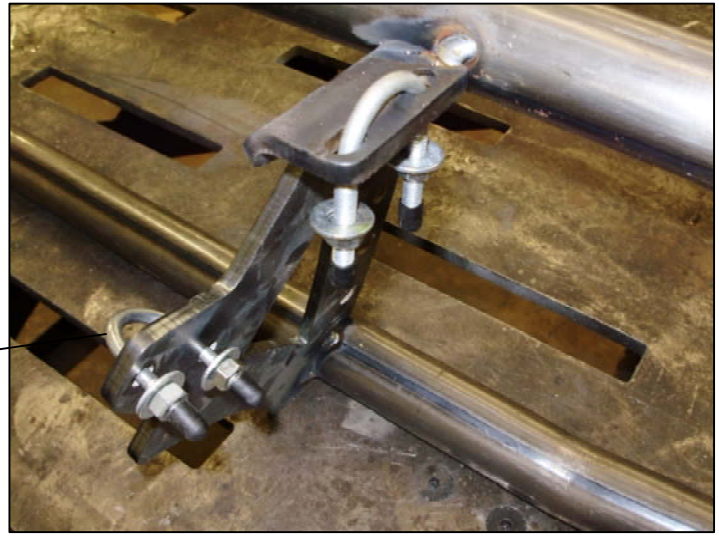

WHEN INSTALLING USE THE 1/4 X 1/2
 U-BOLTS ON TOP OF REAR RACK.

WHEN INSTALLING USE THE 1/4 X 3/4
 U-BOLTS ON BOTTOM OF REAR RACK.

REPEAT FOR BOTH SIDES WHEN
 MOUNTING.

