


- 16=1/4x7/8 BOLTS-A
- 14=1/4X3/4 BOLTS-B
- 60=1/4 USS WASHERS-C
- 30=1/4 LOCK NUTS-D
- 2=2" TAPE CUT TO 36 3/16" LONG.
- 1=1" TAPE CUT TO 152" LONG.
- 8=3/16 FLAT EDGE BENT
- U CLAMPS-E
- 8=(CTL354) STRAPS CUT TO 4 1/2" LONG.

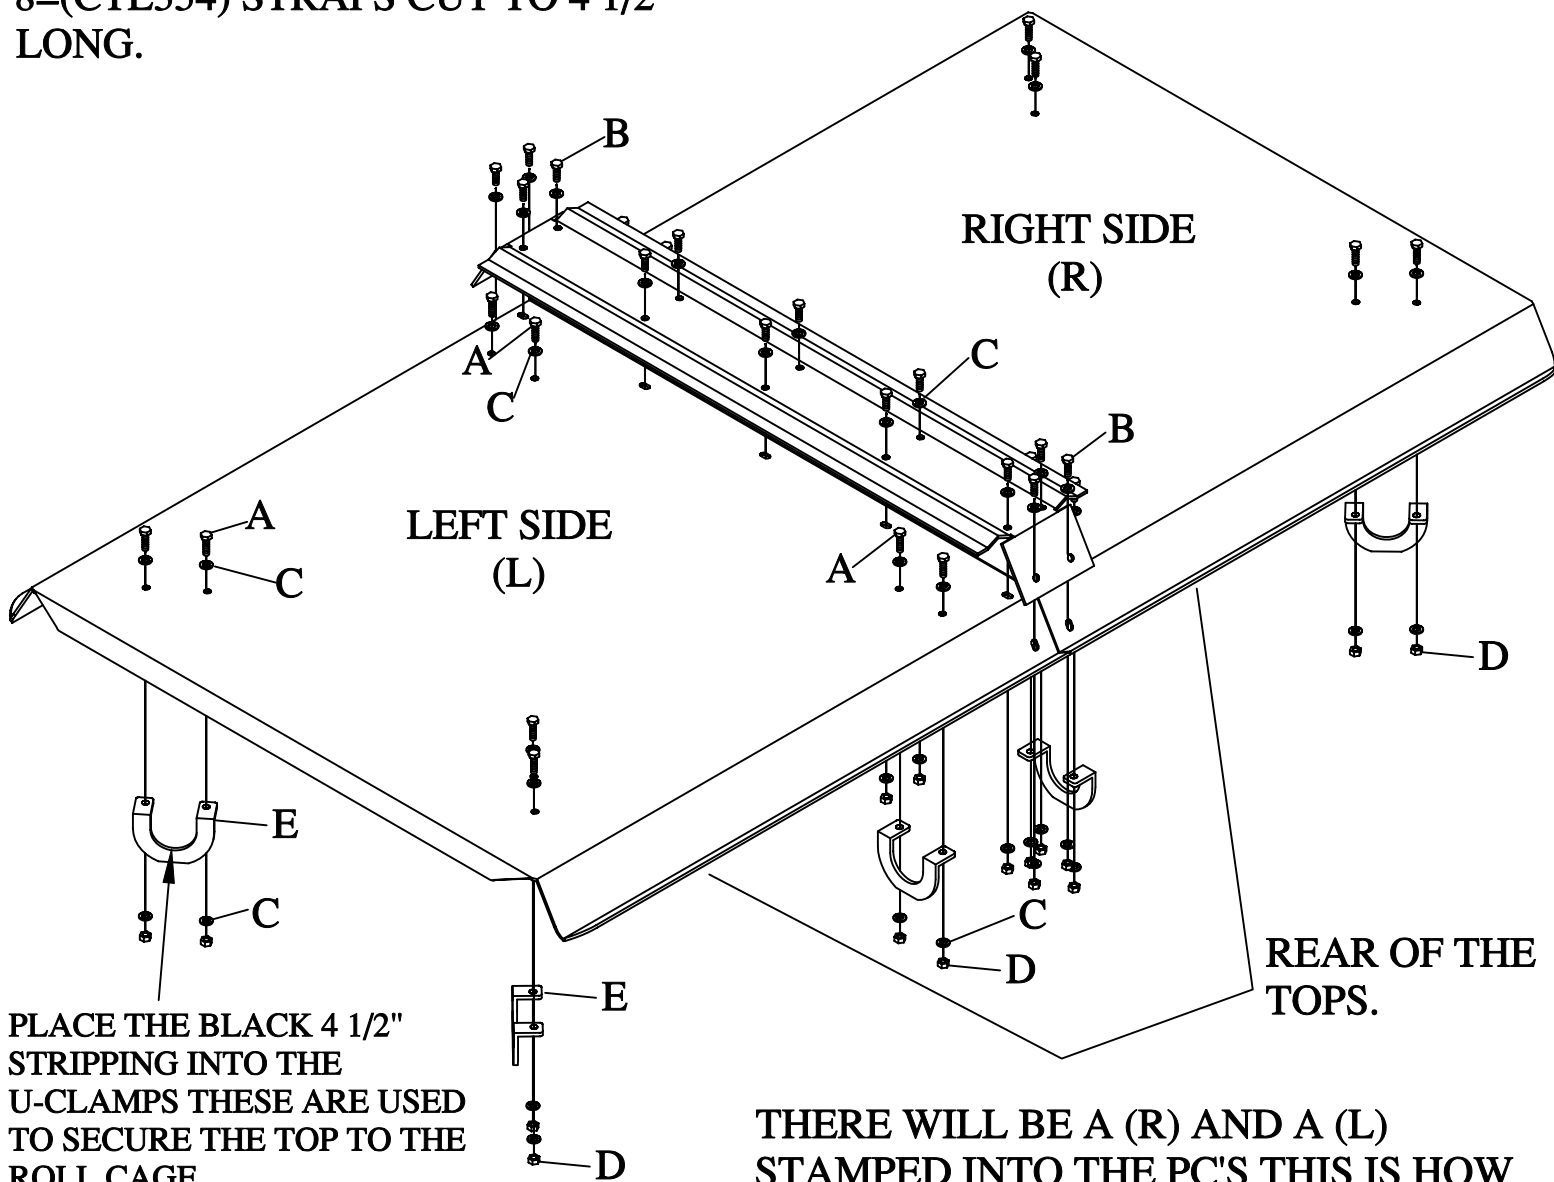

CT106

POLARIS RANGERS 4X4 2X4'S



PLACE THE BLACK 4 1/2" STRIPPING INTO THE U-CLAMPS THESE ARE USED TO SECURE THE TOP TO THE ROLL CAGE.

THERE WILL BE A (R) AND A (L) STAMPED INTO THE PC'S THIS IS HOW THEY ARE MOUNTED ONTO THE ROLL CAGE. THIS IS A PIC. LOOKING AT IT STANDING IN THE BED OF THE RANGER LOOKING DOWN.

THERE IS 152" OF BLACK 1" FOAM TAPE SUPPLIED IN THE HARDWARE THIS IS TO BE PLACED ON THE TOP OF THE ROLL CAGE ALL THE WAY AROUND IT. THIS IS TO BE DONE BEFORE THE TOP IS MOUNTED TO THE CAGE.