

- 4=1/4 X 7/8 BOLTS-A
- 4=1/4 LOCK NUTS-B
- 14=1/4 USS WASHERS-C
- 6=6MM X 25MM X 1.00 BOLTS-D
- 1=1" FOAM TAPE 34" LONG.
- 1=1" FOAM TAPE 40" LONG.



CT109

ARCTIC CAT PROWLER
BLACK MATTE
ALUMINUM TOP.

PLACE THE 1" FOAM TAPE ONTO THE TOP OF THE ROLL CAGE. PLACE THE TAPE ON THE FRONT AND REAR OF CAGE FOR VIBRATION.




PLACE THE 40" PIECE OF TAPE ALONG THE FRONT EDGE OF THE ROLL CAGE .



PLACE THE 34" PIECE OF TAPE ALONG THE TOP REAR OF THE ROLL CAGE . CUT THEM TO FIT HERE.



MOUNT THE FRONT MOUNTING BRACKETS TO THE FRONT OF THE ROLL CAGE. USE TWO OF THE 6MM BOLTS AND 1/4 USS WASHERS HERE.

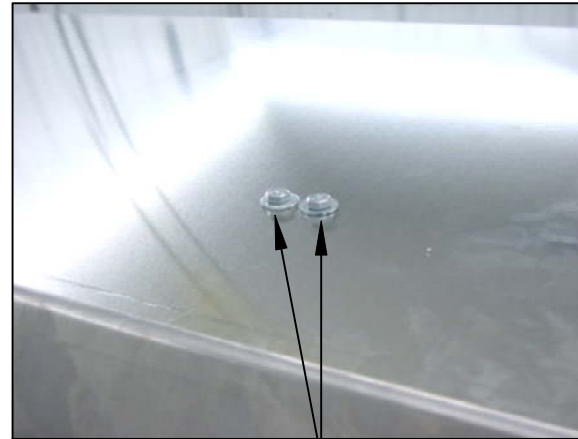

MOUNT THE FRONT OF THE TOP TO THE FRONT MOUNTING BRACKETS USING TWO OF THE 1/4 X 7/8 BOLTS FOUR 1/4 USS WASHERS USE TWO ON TOP AND TWO ON BOTTOM AND TWO OF THE 1/4 LOCK NUTS. REPEAT THE PROCESS FOR THE OPPOSITE SIDE.

MOUNT THE REAR OF THE TOP TO THE ROLL CAGE USING FOUR OF THE 6MM X 25MM X 1.00 BOLTS FOUR 1/4 USS WASHERS HERE.

