


- 8=1/4 X 1 BOLTS-A
- 16=1/4 USS WASHERS-B
- 8=1/4 LOCK NUTS-C
- 4=3/16 FLAT EDGE U-CLAMPS-D
- 4=(CTL354) STRAPS CUT TO 4 1/2" LONG.
- 1= 110" PIECE OF 1" FOAM TAPE.



CT110
POLARIS RZR 800
1/8" DIAMOND TOP

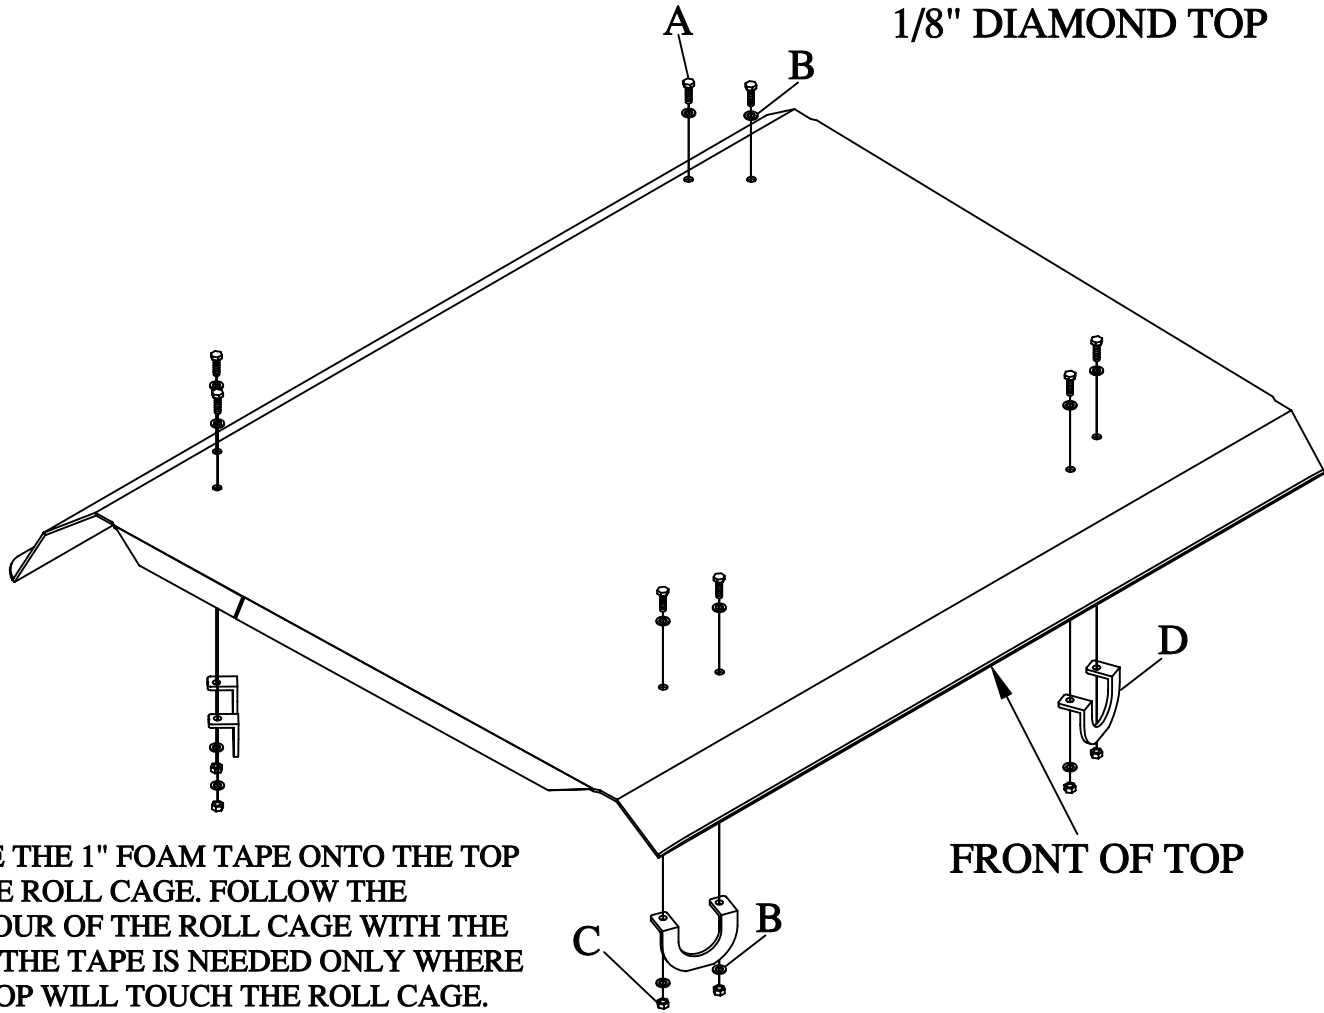

PLACE THE 1" FOAM TAPE ONTO THE TOP OF THE ROLL CAGE. FOLLOW THE CONTOUR OF THE ROLL CAGE WITH THE TAPE. THE TAPE IS NEEDED ONLY WHERE THE TOP WILL TOUCH THE ROLL CAGE.

FRONT OF TOP

THE TOP MOUNTED ON CAGE.

