


- 8=1/4 X 1 BOLTS-A
- 16=1/4 USS WASHERS-B
- 8=1/4 LOCK NUTS-C
- 4=3/16 FLAT EDGE U-CLAMPS-D
- 4=(CTL354) STRAPS CUT TO 4 1/2" LONG. THESE STRAPS FIT INTO THE U CLAMPS.
- 1= 110" PIECE OF 1" FOAM TAPE.



CT111
POLARIS RZR 800
BLACK MATTE

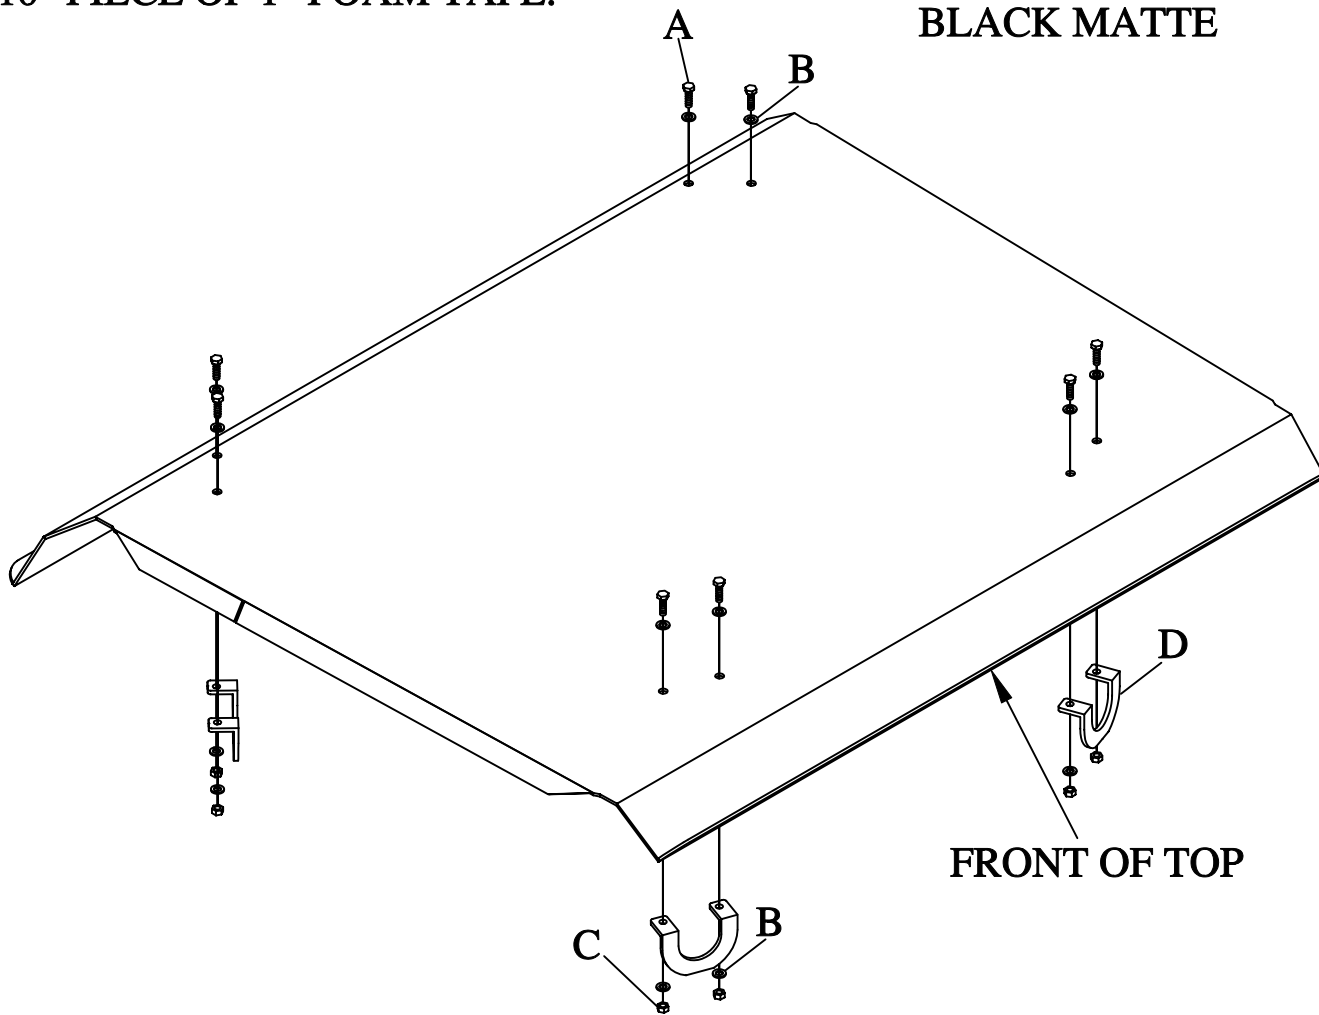

PLACE THE 1" FOAM TAPE ONTO THE TOP OF THE ROLL CAGE. FOLLOW THE CONTOUR OF THE ROLL CAGE WITH THE TAPE. THE TAPE IS NEEDED ONLY WHERE THE TOP WILL TOUCH THE ROLL CAGE.