

6=1/4 X 1 BOLTS
6=1/4 LOCK NUTS
12=1/4 USS WASHERS
13FT=1" FOAM TAPE
2=SMALL L SHAPED BRACKETS




CT113

CAB TOP FOR POLARIS
RANGER 800 4X4

PLACE 1" FOAM TAPE ON TOP OF THE ROLL CAGE EVERYWHERE THE ALUM. TOP WILL CONTACT THE ROUND BARS.

SECURE THE REAR OF THE TOP WITH FOUR 1/4 X 1 BOLTS, FOUR 1/4 LOCK NUTS AND EIGHT OF THE 1/4 USS WASHERS. THE TOP WILL BOLT THROUGH THE HOLES THAT ARE PROVIDED ON THE REAR OF THE ROLL CAGE.

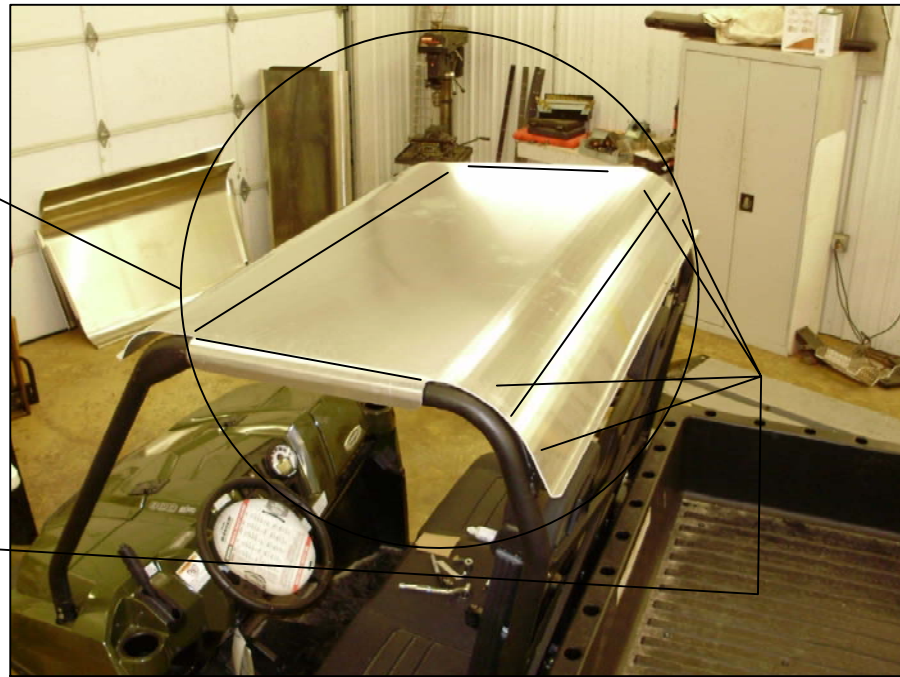

SECURE THE FRONT OF THE TOP WITH THE BRACKETS AND USE TWO OF THE 1/4 X 1 BOLTS, TWO 1/4 LOCK NUTS AND FOUR 1/4 USS WASHERS. THE BRACKETS WILL MOUNT TO THE CAGE ON ONE OF THE STOCK BOLTS THAT HOLD THE CAGE TOGETHER.

