


4 = 5/16 x 1 ¼ Bolts  
4 = 5/16 (S.A.E.) Small Flat Washers

## FG 108

You have to remove the headlights. Then put this part of the grill between the light and the frame. Reinstall the lights back in place and readjust them.

### Polaris Front Grill

Sportsman 500  
Xplorer 500  
Xplorer 400L  
Xplorer 300

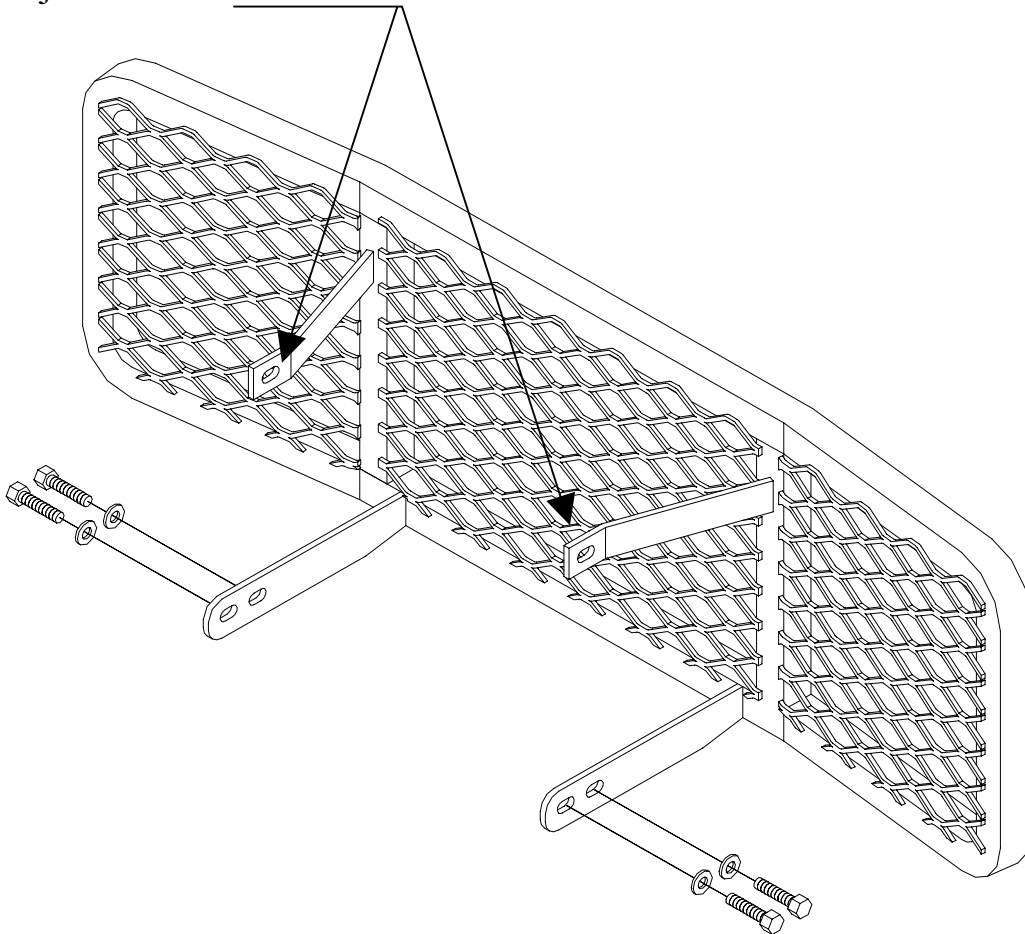

Take a look at us at  
[www.savantmfg.com](http://www.savantmfg.com)