




# FG109

- 2 = 5/16 x 1 Bolts (REPLACES ORIGINAL BOLTS ON BIKE)
- 4 = 5/16 x 1 3/4 Bolt
- 6 = 5/16 SAE Flat Washers (Small)
- 4 = 5/16 Lock Nuts
- 2 = 5/16 USS Flat Washers (Large) = A
- 2 = 3/8 ID x 1 1/4 OD x 3/16 Washer = B
- 2 = 3/16 x 1 Flat Bar L Brackets
- 2 = 1" Plugs

## Polaris Front Grill

- Sportsman 500
- Xplorer 500
- Xplorer 400L
- Xplorer 300

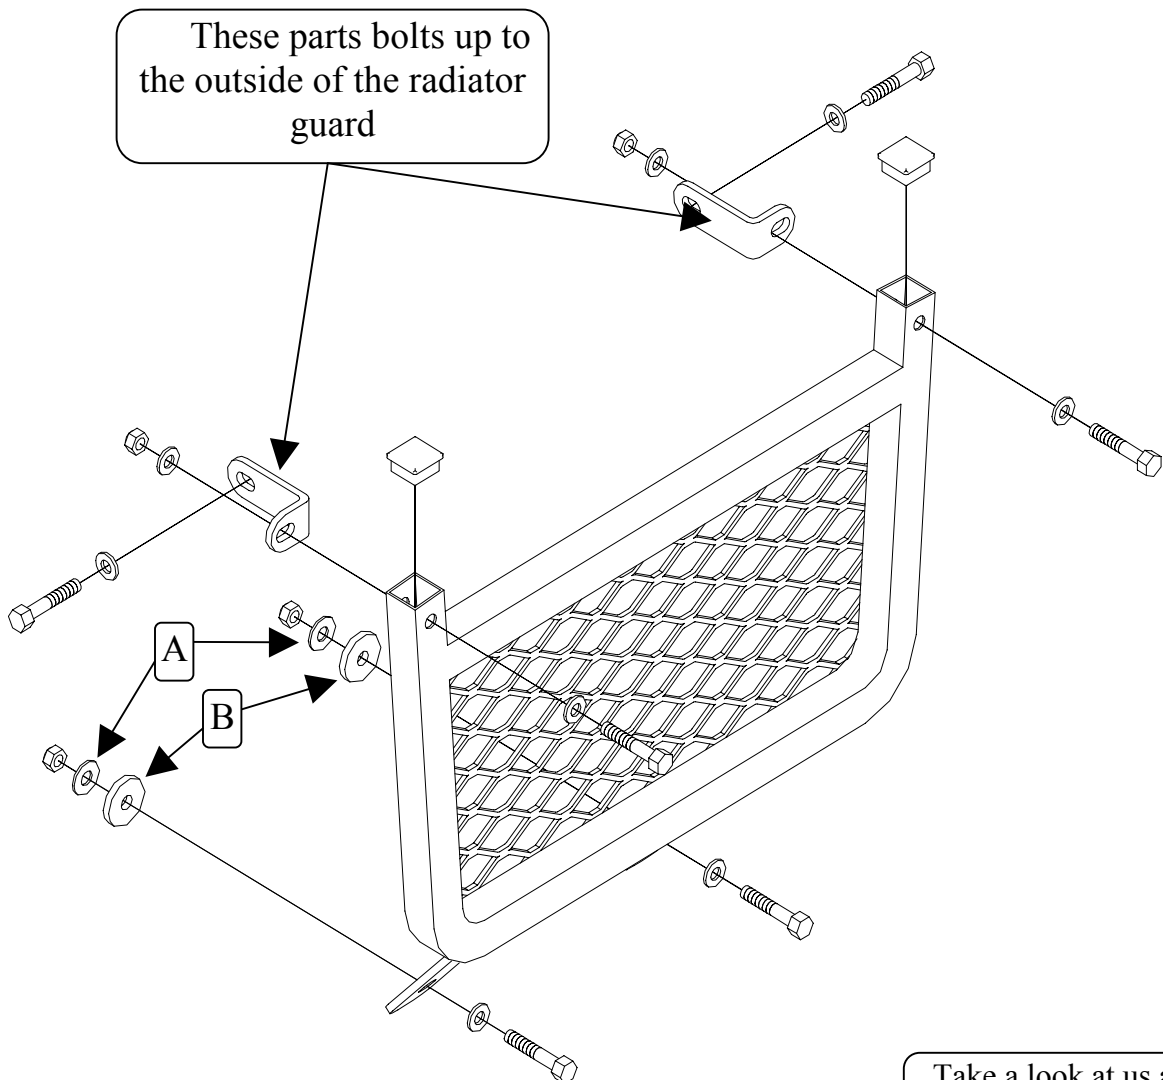

Take a look at us at  
[www.savantmfg.com](http://www.savantmfg.com)