


- 8=1/4 LOCK NUTS-A
- 8=1/4 SAE WASHERS-B
- 4=1/4 X 3/4 U-BOLTS-C
- 2=5/16 X 4 1/2 BOLTS-D
- 6=5/16 USS WASHERS-E
- 2=1/4 GALV. SPACERS 1 3/16 LONG-F
- 2=3/16 X 1 X 1 RC-G
- 2=5/16 SAE WASHERS-H
- 8=1/4 ROD CAPS-I
- 2=5/16 LOCK NUTS-J

SMI SAVANT MFG., INC.

FG116 HONDA 500 RUB. 4X4



THE FG116 WILL U-BOLT TO THE INSIDE OF THE ORIGINAL EQUIP. BUMPER AS DIAGRAM SHOWS...

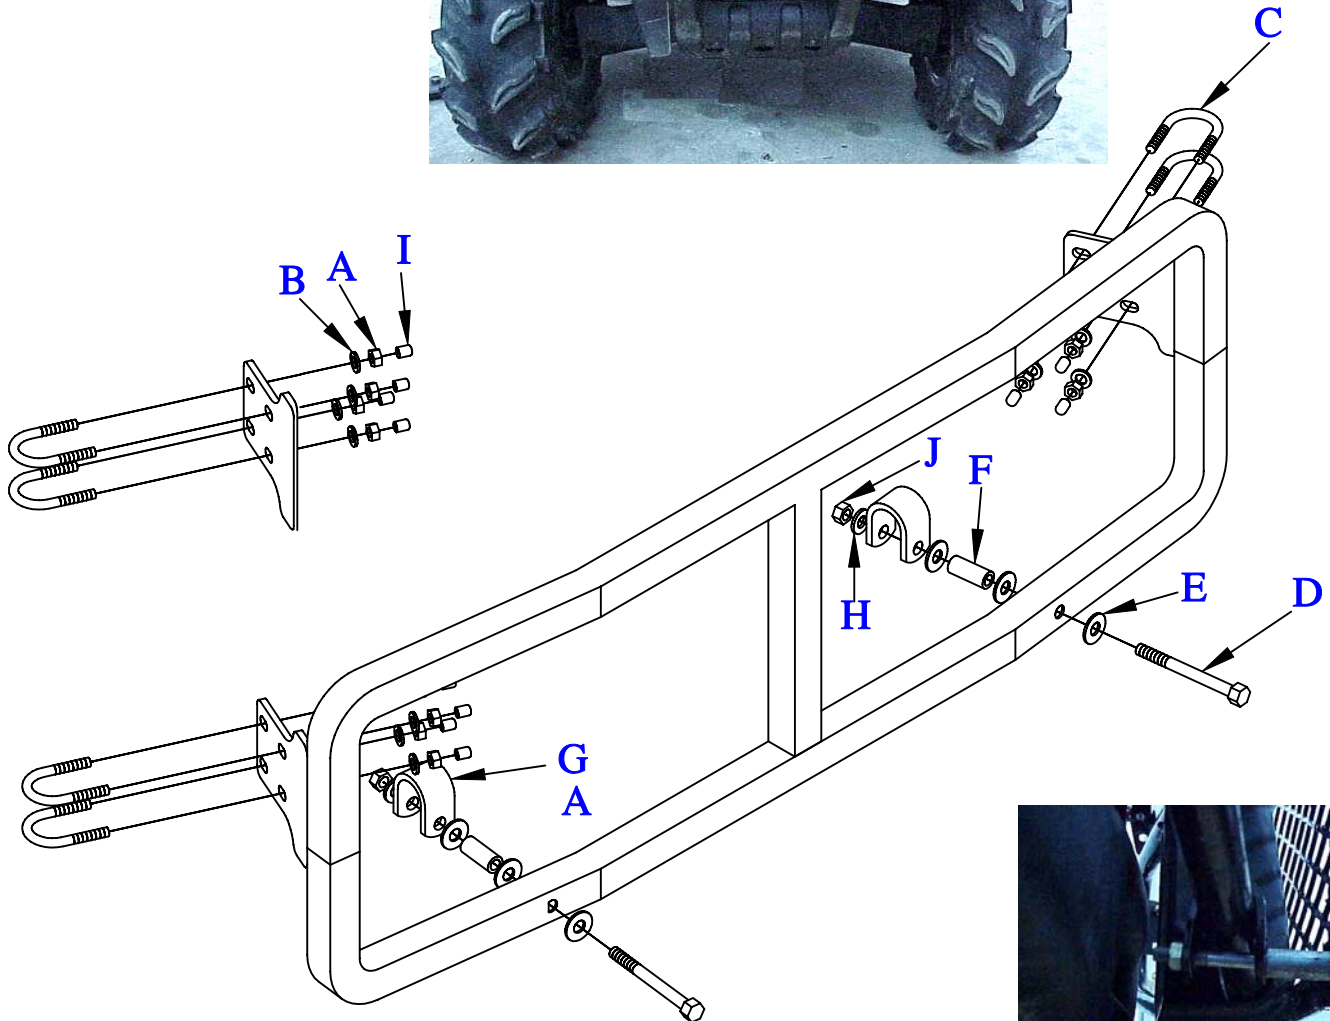

PICTURE ILLUSTRATES HOW TO MOUNT THE BOTTOM OF THE FG116 TO THE ORIGINAL BUMPER..