


- 4=5/16 LOCK NUTS-A
- 8=5/16 USS WASHERS-B
- 4=5/16 X 1 3/4 BOLTS-C
- 4=1/4 X 1 1/4 BOLTS-D
- 4=1/4 LOCK NUTS-E
- 8=1/4 SAE WASHERS-F
- 4=RUBBER SNUBBERS-G



GR145

POLARIS RANGER XP900 4X4

MOUNT THE BRACKET TO THE ROLL CAGE ON THE X PART OF THE CAGE. USE THE 5/16 BOLTS, WASHERS AND NUTS. USE (4) 5/16 WASHERS ON THE INSIDE OF THE BRACKET ALSO.

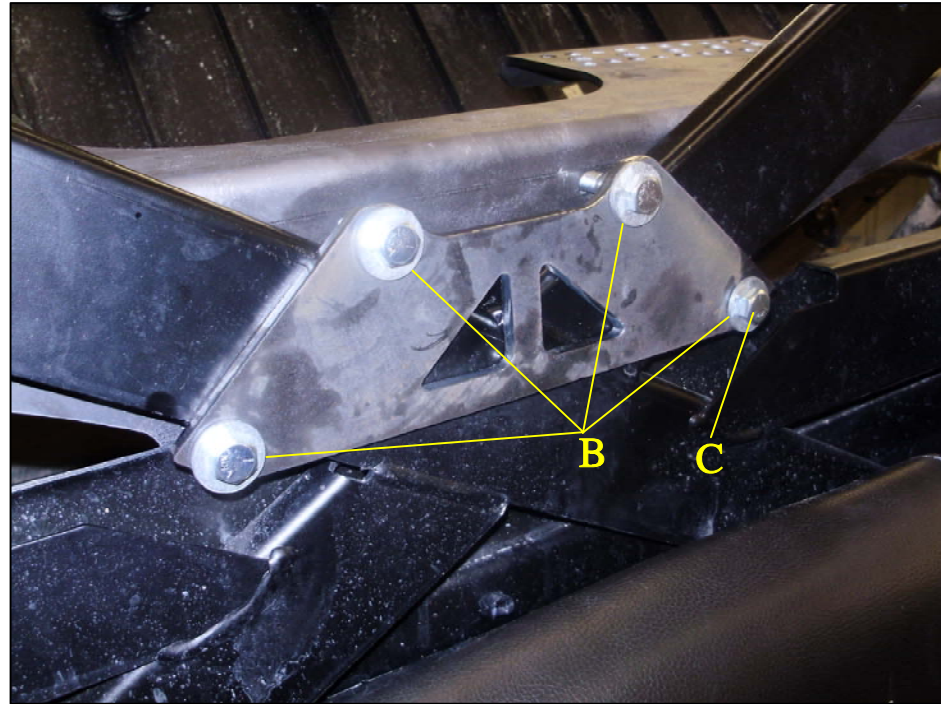

USE THE 1/4 BOLTS WASHERS AND LOCK NUTS, TO SECURE THE CLIPS TO THE BRACKET.

