

- 4=5/16X2 BOLTS
- 4=5/16 LOCK NUTS
- 4=1" PLUGS
- 8=5/16 USS WASHERS
- 2= L SHAPED BRACKETS  
LEFT AND A RIGHT.
- 2= FLAT SQUARE WASHERS




# # 566

## REAR RACK RUFF & TUFF

THE REAR OF THE RACK WILL MOUNT WITH THE L SHAPED BRACKETS. ONE IS FOR THE RIGHT SIDE AND ONE IS FOR THE LEFT SIDE.

MOUNT THE BRACKETS TO THE FRAME CHANNEL WITH THE STOCK HARDWARE.

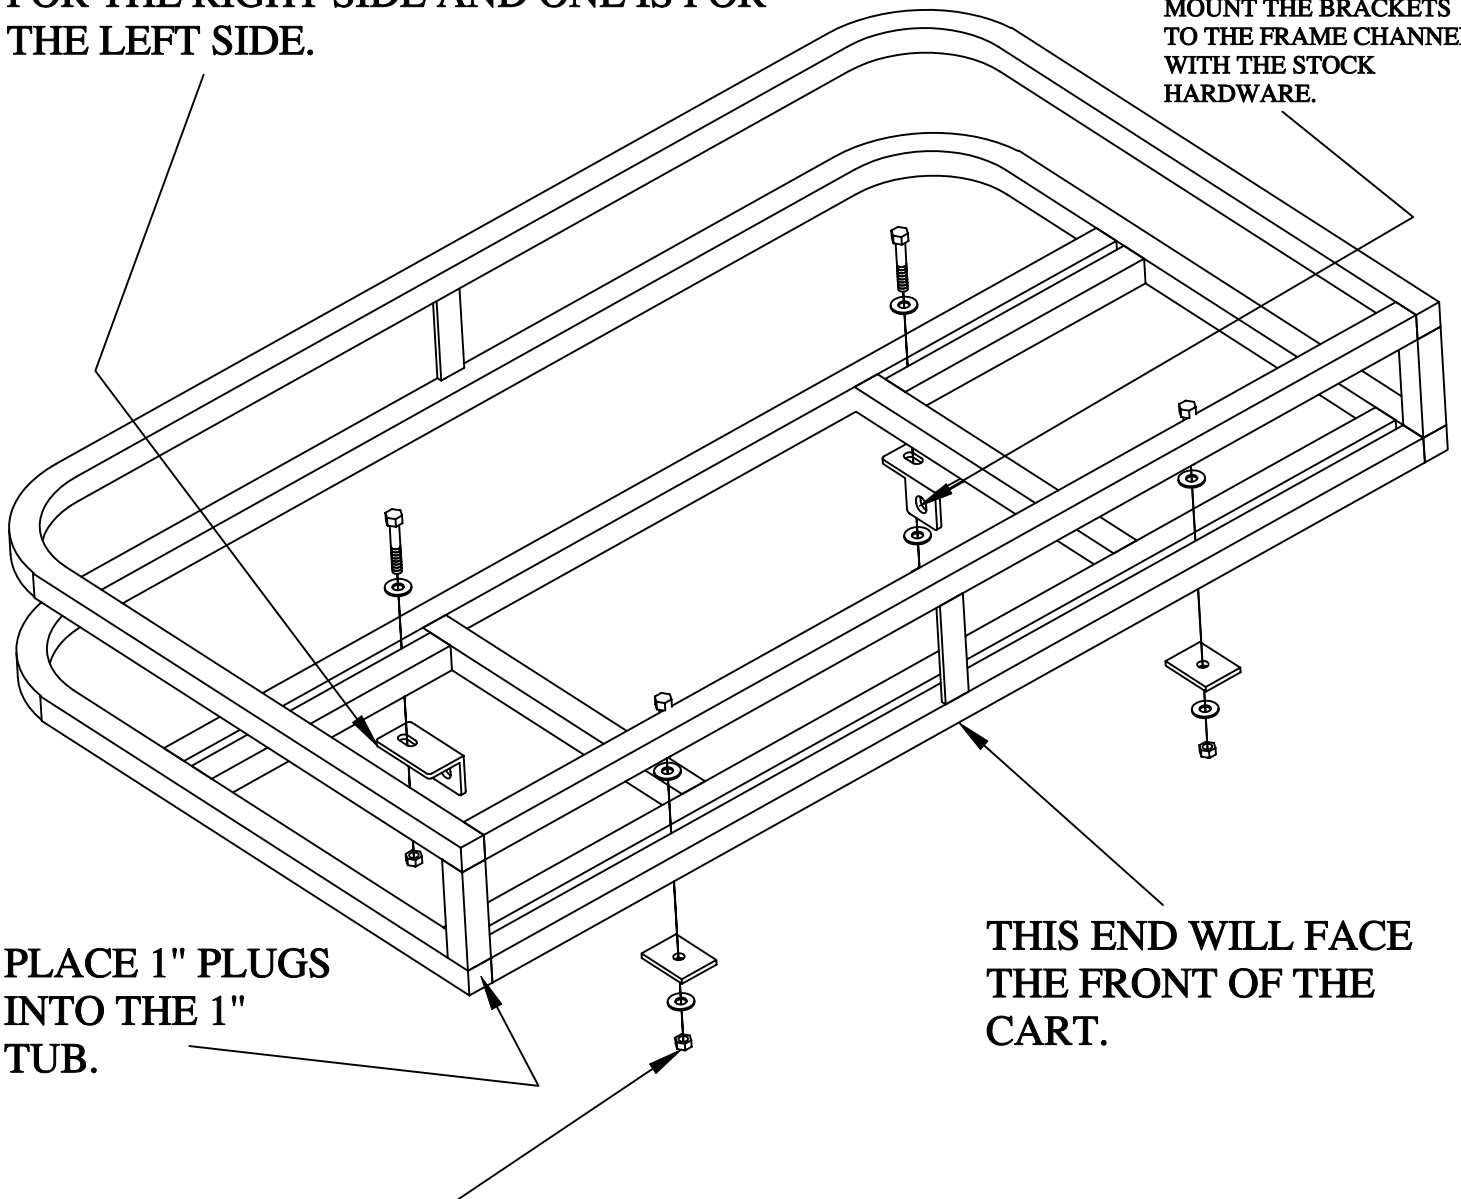

PLACE 1" PLUGS INTO THE 1" TUB.

THIS END WILL FACE THE FRONT OF THE CART.

THE FRONT OF THE RACK WILL MOUNT IN THE 1" ROUND HOLES OF THE CHANNEL IRONS. PLACE THE SQUARE WASHERS UNDER THE CHANNEL IRONS.