

- 8=Gr. 5 (5/16) USS WASHERS-A
- 4=5/16 X 1 1/2 BOLTS -B
- 2=1" PLUGS-C
- 6=5/16 X 3 1/2 FLAT HEAD COUNTERSINK BOLTS-D
- 2=5/16 U NUT CLIPS-E




569-BO'S

# # 569-W

## 2011 POLARIS SPORTSMAN REAR RACK

**MAKE SURE THE COUNTERSINK HOLES A FACING UP WHEN MOUNTING TO THE FACTORY RACK.**

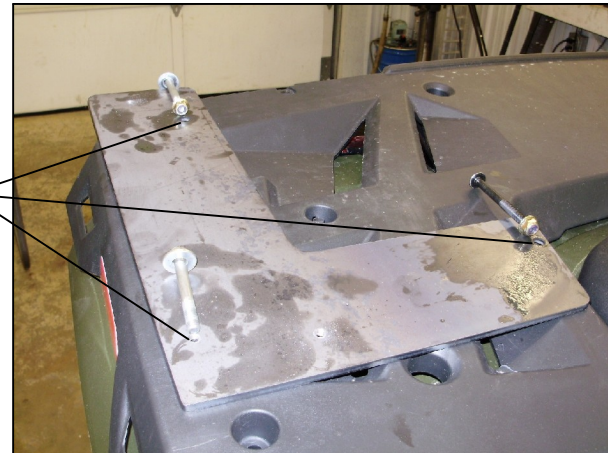

**PLACE THE 569 BRACKETS ONTO THE REAR RACK. WILL HAVE TO REMOVE THE STOCK BOLTS ON THE REAR RACK WHERE THE HOLES FALL. CAUTION: THERE IS SPACERS UNDER THE RACK ON TOP OF THE FENDER MUST USE THESE TO MOUNT BRACKETS. REPLACE THE STOCK BOLTS WITH THE SUPPLIED COUNTERSINK BOLTS. REFER TO DRAWING FOR BOLT PLACEMENT.**

**ONCE THE BRACKETS ARE MOUNTED TO THE ORIGINAL RACK. PROCEED TO MOUNT THE RACK TO THE BRACKETS WITH SUPPLIED HARDWARE. REFER TO THE DRAWING FOR BOLT PLACEMENT.**

