


4=1/4 X 5 CARRIAGE HEAD BOLTS
4=1/4 LOCK NUTS




570

REAR FLAT RACK RENEGADE 500/800

1ST REMOVE THE REAR TRUNK BY REMOVING THESE TWO BOLTS ON THE GRAB BAR. ONE ON EACH SIDE. ONCE REMOVED PULL FORWARD AND THE BOX WILL SLIDE OUT.

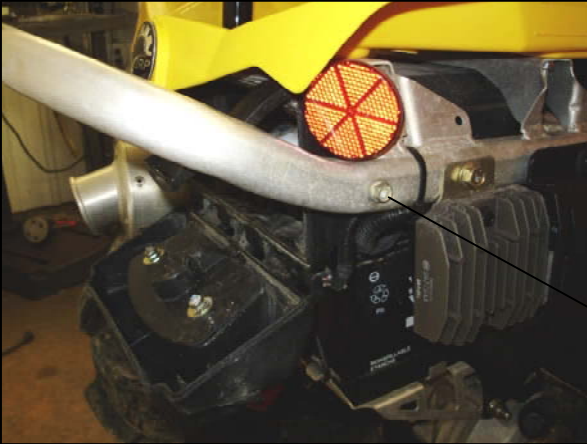

THEN REMOVE THE TIE BRACKETS ON THE REAR RACK. THESE CAN BE INSTALLED IN MANY PLACES ON THE NEW FLAT RACK...

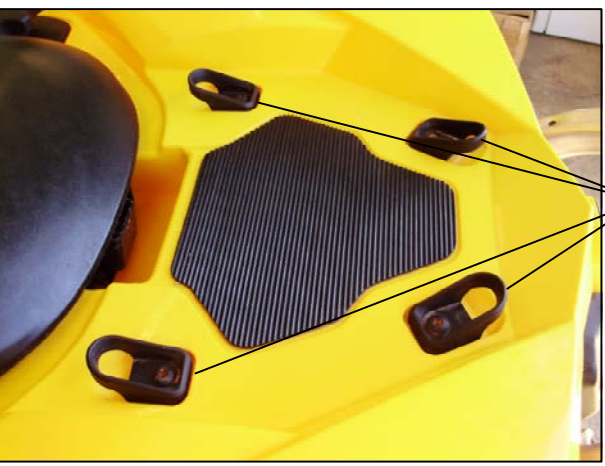

LAST INSTALL THE REAR RACK TO THE FENDER WITH THE CARRIAGE HEAD SCREWS. THERE WILL BE FOUR SQUARE HOLES IN THE PLATE FOR THIS. SECURE WITH THE LOCK NUTS.

