

- 10=5/16 USS WASHERS-A
- 2=5/16X1 3/4 BOLTS-B
- 2=5/16X1 BOLTS-C
- 6=5/16 LOCK NUTS-D
- 2= 225 (1 1/2) BLACK FLAT WASHER-E BIN(58)
- 2=5/16X2 3/4 BOLTS-F
- 4=1" PLUGS-G
- 3=1/4X3/4 U-BOLTS-H
- 6=1/4 USS WASHERS-I
- 6=1/4 LOCK NUTS-J




# #558M MINI DROP RACK

FITS UP TO 2003 YEARS.


- 1=1/4X2 BOLTS
- 1=1/4 LOCK NUTS
- 2=1/4 USS WASHERS

**Caution: DO NOT USE AIR TOOLS** to install, may result to injury.

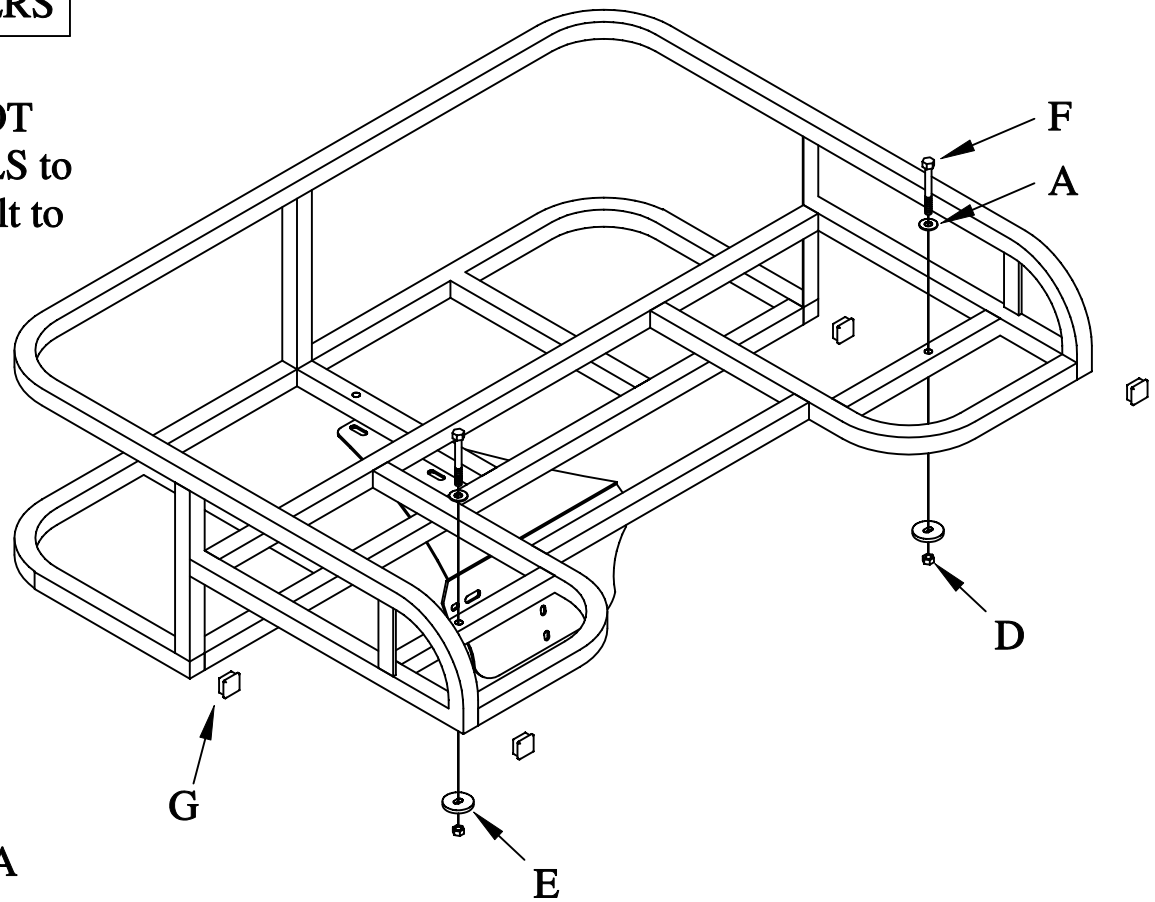

THIS HARDWARE IS ONLY TO BOLT THE BRACKET TO THE RACK WHEN PACKING.

THERE WILL BE 3=1/4X3/4 U-BOLTS(H) AND 6=1/4USS WASHERS(I) AND 6=1/4 LOCK NUTS(J) SUPPLIED FOR THE OLDER MODELS WITH THE ROUND BARS. THESE WILL BOLT IN THE OTHER HOLES IN THE PLATE.

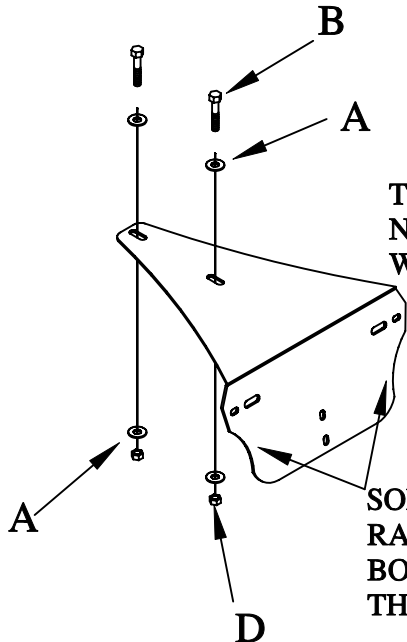

SOME OF THE NEWER MODELS OF POLARIS ARE COMING WITH SQUARE REAR RACK SUPPORTS IF YOUR ATV IS EQUIPPED WITH THIS, USE THE 2=5/16X1 BOLTS(C) 4=5/16 USS WASHERS(A) AND 2=5/16 LOCK NUTS(D). AND BOLT IN THESE LARGE OVAL HOLES.