


- 2=5/16" X 3/4" BOLTS-A
- 4=5/16" SAE WASHERS-B
- 2=5/16" LOCK NUTS-C
- 2=3/8" LOCK NUTS-D
- 4=3/8" SAE WASHERS-E
- 2=3/8"X 2 BOLTS-F

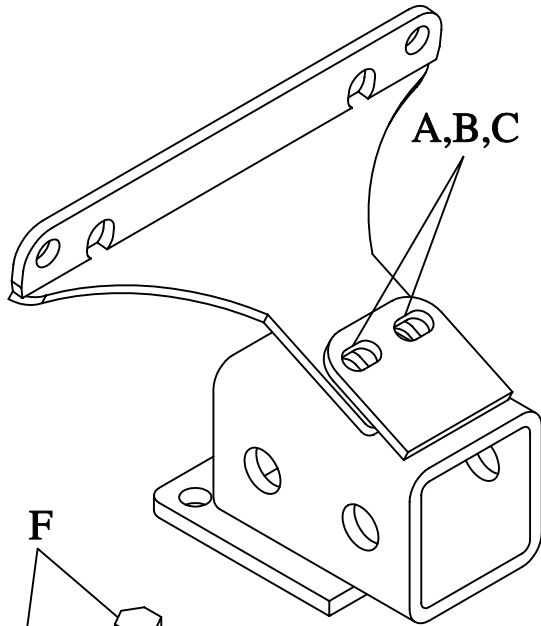


#RH103

HONDA RINCON 650 4X4



MUST BEND THE SMALL TIT DOWN TO INSTALL THE RH103.

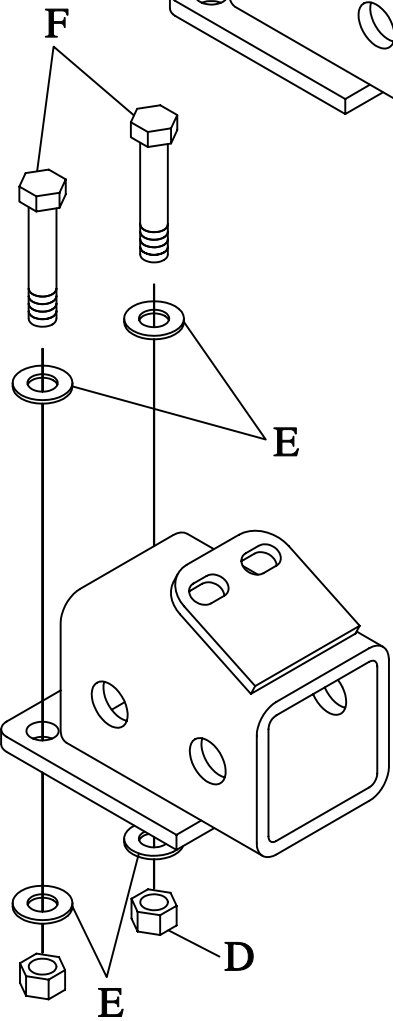

REMOVE THE REAR TOP ARM NUTS
PLACE THE PLATE
AND BOLT PLATE
BACK ON WITH THE
ORIGINAL NUTS.



SOME RECEIVERS
ARE LONGER SO
YOU MAY HAVE TO
TRIM THE END SO
THERE IS NO
RUBBING ON THE
REAR DIFFER.

