

- 1=5/16 X 1 BOLTS-A
- 1=5/16 X 1 1/4 BOLTS-B
- 2=5/16 LOCK NUTS-C
- 3=5/16 USS LARGE WASHERS-D
- 1=5/16 SAE SMALL WASHER-E
- 5=3/8 SAE WASHER-F
- 1=10MM X 1.25 X 75MM BOLT (MHHB-M10-1.25 75)-G
- 1=SPACER .546ID X .840OD 1/2" LONG -H



# #RH115

## HONDA FOREMAN 500 2012 4X4


THIS RECEIVER HITCH WILL USE ANY 2" INSERT OFF OF ANY AUTOMOBILE RECEIVER HITCH.

### (CAUTION)

ONCE INSTALLED MAKE SURE THE TUBE THAT IS TO BE INSERTED INTO THE #RH115 DOES NOT EXCEED PASS THE END OF THE #RH115. THIS IS SO NOTHING WILL HIT THE SHOCK AS THE TRAVEL MOVES ON THE REAR AXLE OF THE ATV.

SLIDE TWO 3/8 WASHERS OVER EACH OF THE DIFF. STUDS SLIDE BRACKET OVER STUDS APPLY LOCK TIGHT REUSE THE STOCK NUTS AND TIGHTEN.

MUST REMOVE YOU STOCK TRAILER HITCH TO INSTALL THE #RH115.

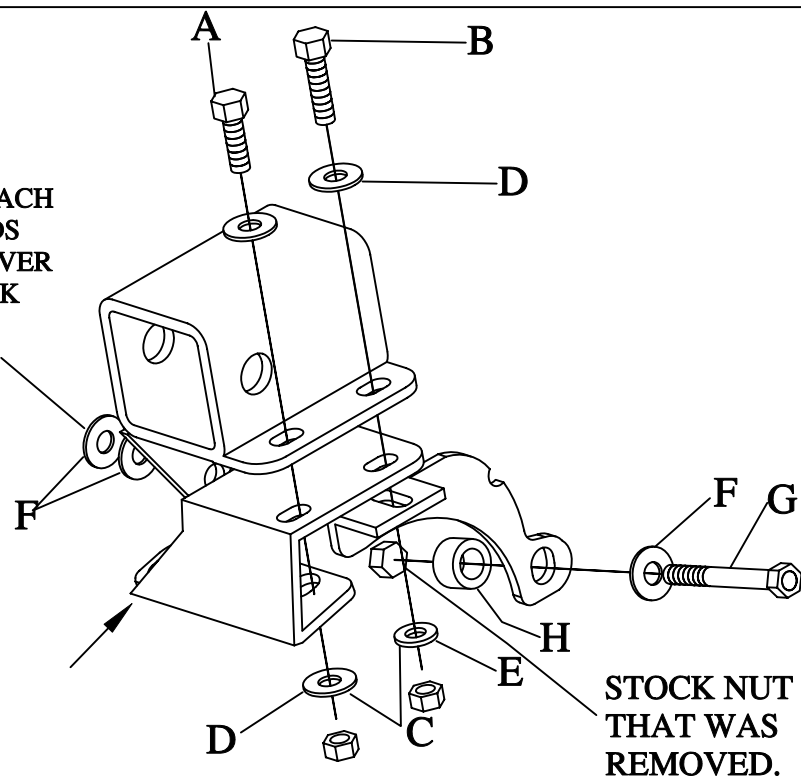

MAKE SURE TO PLACE TWO 3/8 WASHERS ON EACH STUD BEFORE MOUNTING THE BRACKET TO THE REAR DIFF...

USE YOUR ORIGINAL HITCH NUTS AND BOLTS HERE.

