

## 18=1/4 X 1 TORX SCREWS

THIS PROCESS IS MUCH EASIER IF THE FRONT OF THE MACHINE IS LIFTED. CAREFUL WHEN LIFTING MACHINE USE PROPER LIFTING EQUIPMENT.


**STRONG  MADE™**

BY SAVANT MANUFACTURING, INC.


[www.savantmfg.com](http://www.savantmfg.com)

# #SP125-AL

2008 YAMAHA RHINO 700FI

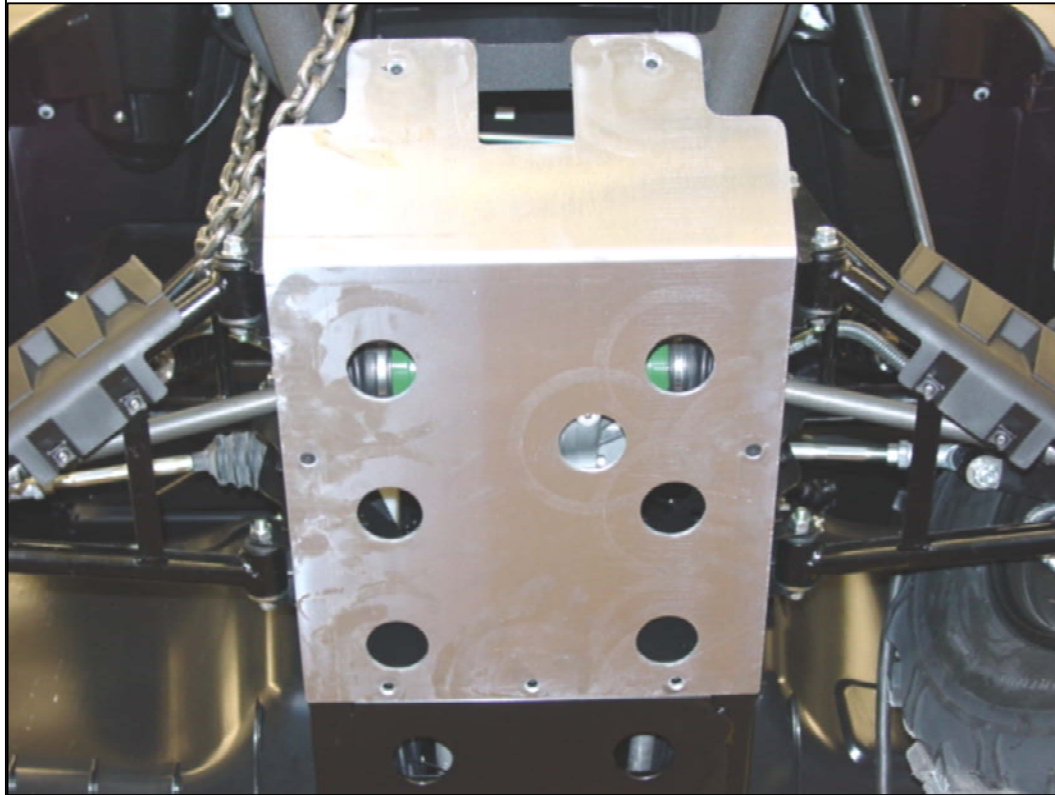

1ST STEP MOUNT THE FRONT GUARD WITH SEVEN OF THE 1/4 X 1 TORX SCREWS IN THE EXISTING HOLES.

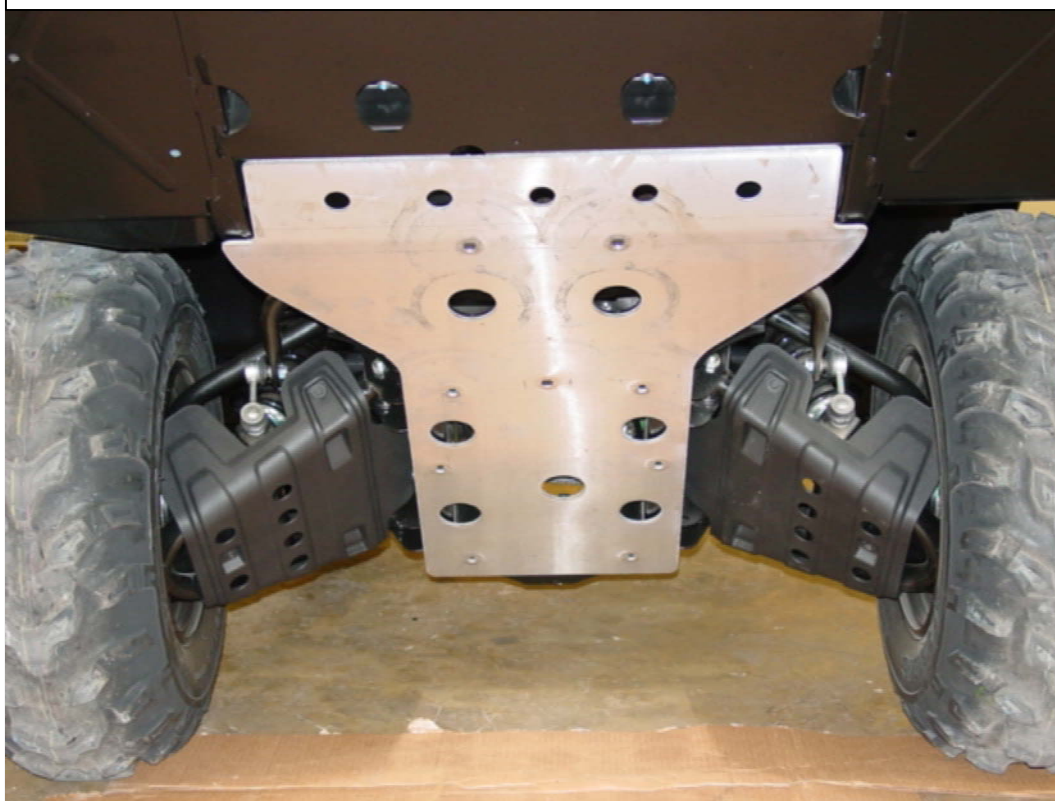

2ND STEP MOUNT THE REAR GUARD WITH ELEVEN OF THE 1/4 X 1 TORX SCREWS IN THE EXISTING HOLES. SOME HOLES MAY HAVE TO BE DRILLED.

