

4=1/4 X 1 TORX SCREWS

6=1/4 X 1 1/4 TORX SCREWS

6=1/4 LOCK NUTS

12=1" X 3/16 ZINC WASHERS


THIS PROCESS IS MUCH EASIER IF THE FRONT OF THE MACHINE IS LIFTED. CAREFUL WHEN LIFTING MACHINE USE PROPER LIFTING EQUIPMENT.




#SP126-AL

2008 YAMAHA RHINO 700FI

MUST DRILL 7/32 HOLES IN THE ROUND TUBE FOR THESE SCREWS.

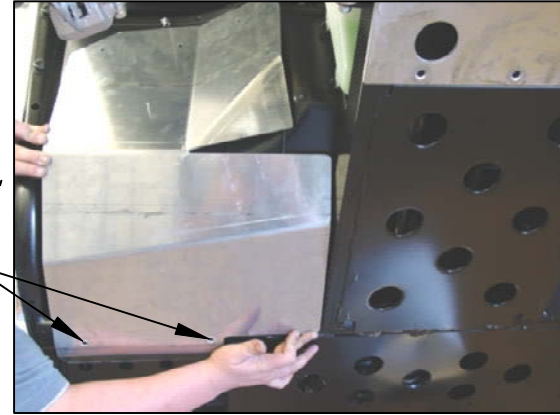

MOUNT THE SIDE GUARD WITH TWO OF THE 1/4 X 1 TORX SCREWS AND THREE OF THE 1/4 X 1 1/4 TORX SCREWS ZINC WASHERS AND 1/4" LOCK NUTS. SOME HOLES WILL HAVE TO BE DRILLED.



THIS IS WHERE THE 1/4 X 1 1/4" TORX SCREWS 1/4 LOCK NUTS AND 1" ZINC WASHERS WILL BE USED.

INSIDE OF THE FLOOR BOARDS. USE THE ZINC WASHERS AND 1/4 X 1 1/4' TORX HERE.

UNDERBELLY NEAR WHEEL USE THE 1/4 LOCK NUTS AND ZINC WASHERS HERE.

MUST DRILL THROUGH THE PLASTIC TO INSTALL.

REPEAT THE SAME PROCEDURE FOR THE OTHER SIDE SKID MOUNTING.

