


30=1/4 X 1 TORX SCREWS
4=1" ZINC WASHERS

MUST PRE DRILL 7/32" HOLE IN
FRAME FOR ALL THE 1/4" TORX
SCREWS.

USE PROPER LIFTING
EQUIPMENT WHEN LIFTING
THE MACHINE TO INSTALL
THE KIT.
MUST REMOVE THE STOCK
PLASTIC GUARDS. INSTALL
THE GUARDS IN THE ORDER
NUMBERED USE STOCK
HARDWARE THAT WAS
REMOVED. USE 1/4 TORX
HEAD SCREWS EVERY
WHERE THERE IS A TAPERED
HOLE IN THE SKIDS.



SP132-AL
ALUM. SKID POLARIS
RANGER 800 4X4 2010

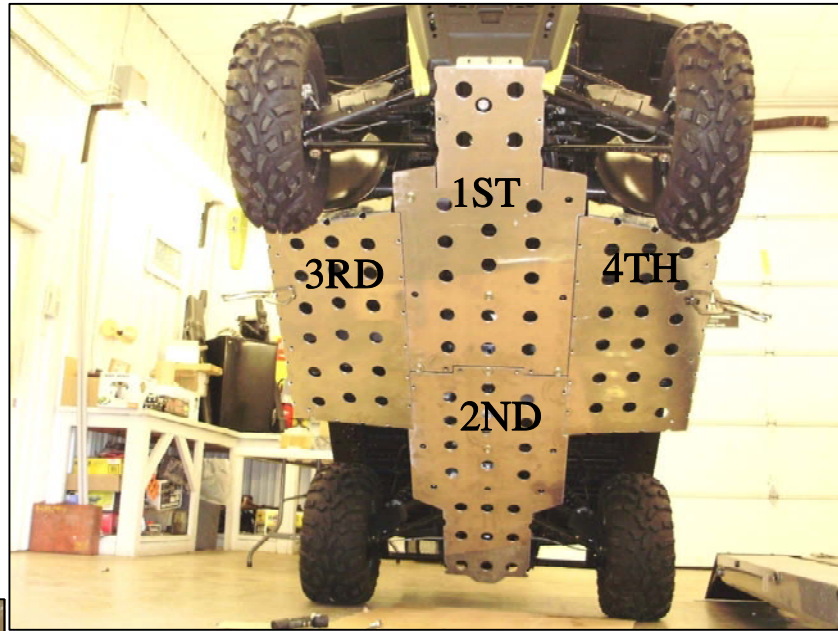

PLACE TWO OF THE 1" ZINC
WASHERS UNDER EACH OF THE
OUTER HOLES ON THE SIDE SKIDS.
THEN INSERT THE SCREW INTO
THE HOLES THAT WERE DRILLED
AND FASTEN EACH SCREW.



PLACE TWO OF THE 1" ZINC
WASHERS UNDER EACH OF THE
OUTER HOLES ON THE SIDE SKIDS.
THEN INSERT THE SCREW INTO
THE HOLES THAT WERE DRILLED
AND FASTEN EACH SCREW.

