


2=1/4X3/8 U-BOLTS  
4=1/4X1/2 U-BOLTS  
12=1/4 FLAT WASHERS  
12=1/4 LOCK NUTS



EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURNING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURNING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.

**SS100**  
88-92  
HONDA 300 4X4

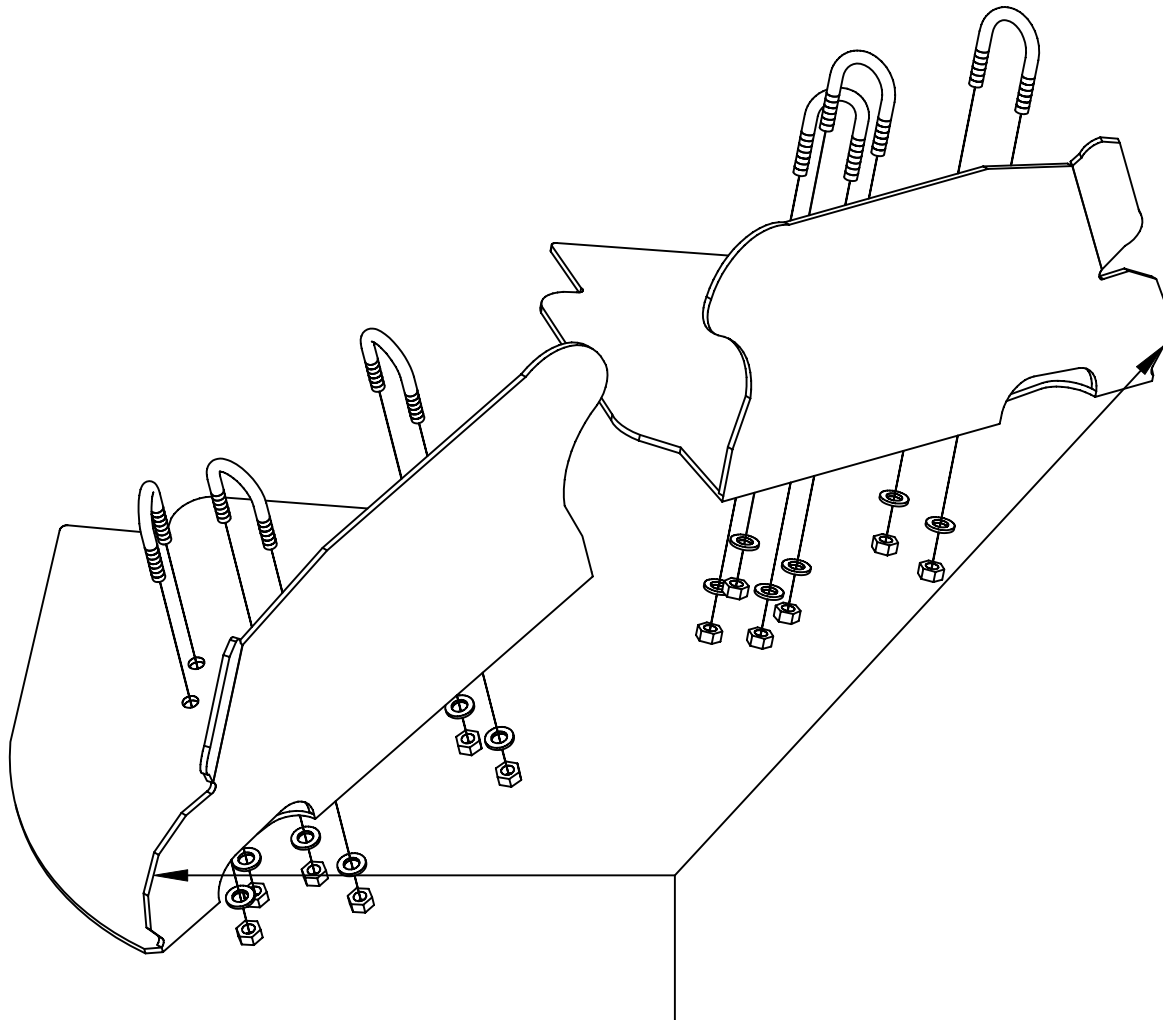

**THE SS100 WILL BOLT UNDER THE A-ARMS WITH THESE ENDS FACING THE INSIDE OF THE RIMS**

SAVANT'S MFG PH. # 1-800-326-6880

EMAIL ADDRESS [www.savantmfg.com](http://www.savantmfg.com)