


- 12 = 1/4 LOCK NUTS-A
- 12 = 1/4 SAE WASHERS-B
- 6 = 5/16 SAE WASHERS-C
- 6 = 1/4 X 1/2 U-BOLTS-D
- 6 = #16LB TINNER RIVETS-E



#SS122H HONDA 350,400,450S,450ES,500 FRONT A-ARMS ONLY.

THESE HOLES AND SPACERS
OR DESIGNED FOR WATER TO
WASH THROUGH AND CLEAN OUT BETTER,

THESE BARS REPRESENT
THE A-ARMS OF THE
ATV.
THE SPACERS SHOULD
BE PLACED BETWEEN
THE A-ARM AND THE
SS122H.

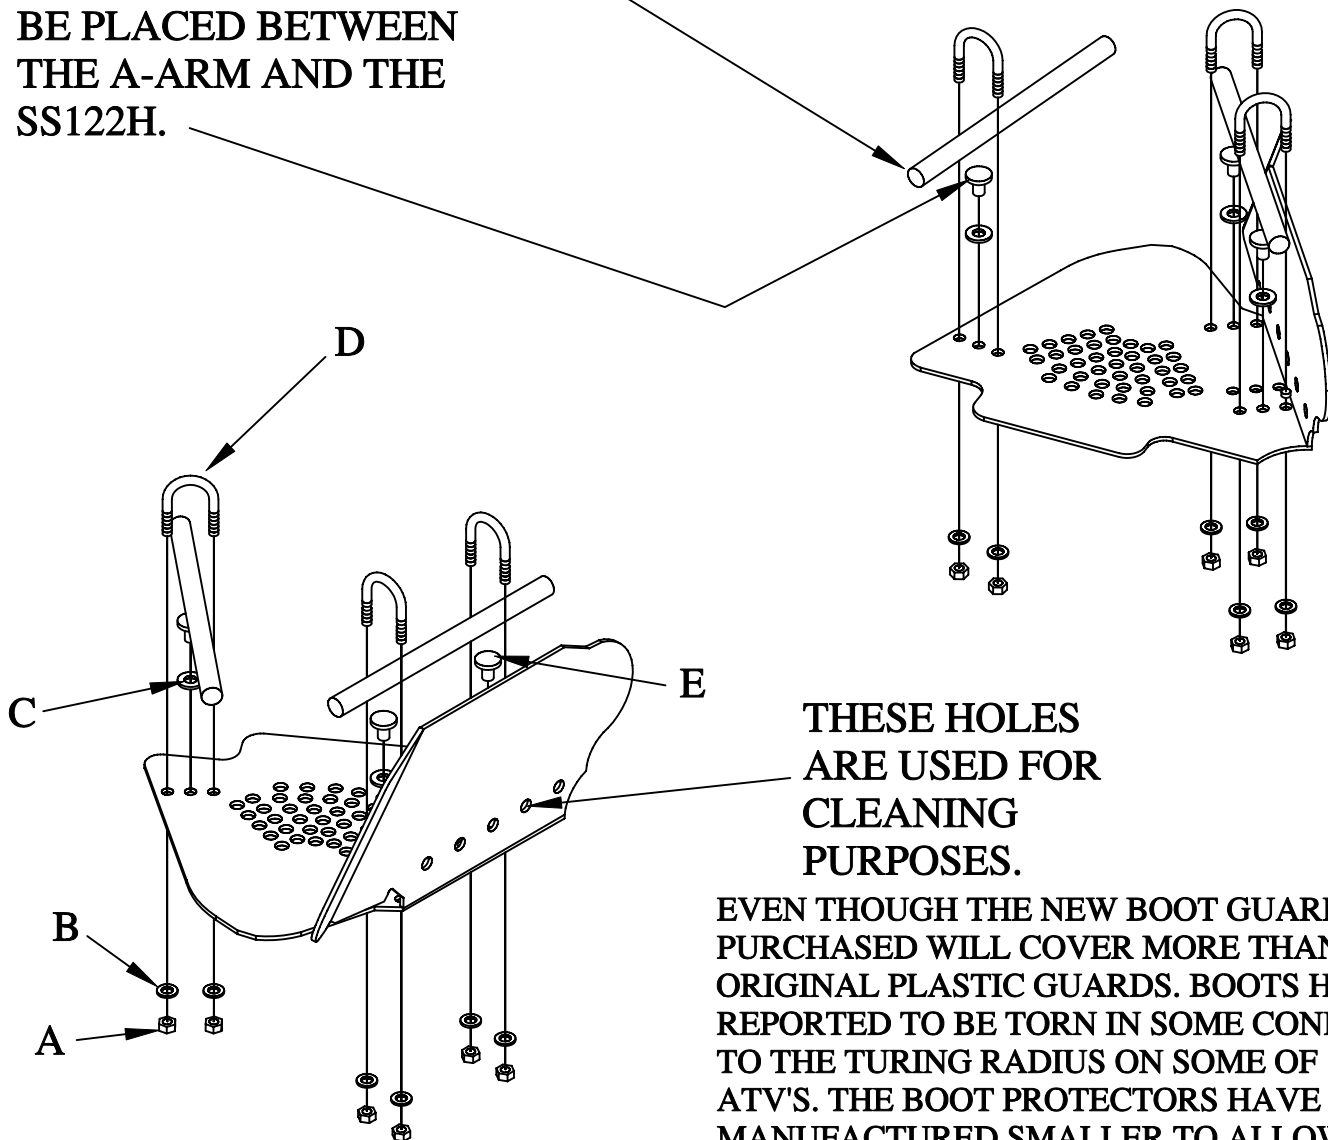

THESE HOLES
ARE USED FOR
CLEANING
PURPOSES.

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.