


- 12 = 1/4 Lock Nuts = A
- 12 = 1/4 SAE Flat Washers = B
- 6 = 1/4 x 3/8 U-Bolts = C



SS126

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.

The U-Bolts (C) go from the top of the swing arms and goes through the top of the Stick Stopper. Next put the washers (B) and Lock Nuts (A) on the U-Bolts (C). Do not over tighten U-Bolts! May brake the U-Bolts or may bend Stick Stoppers (Torque no more then 5 Foot Lbs). if you bend the Stick Stoppers they may rub or tear the CV boots. After installing the Stick Stoppers turn the tires to the left and to the right. Check the rims and CV boots for any type of rubbing before riding the ATV.

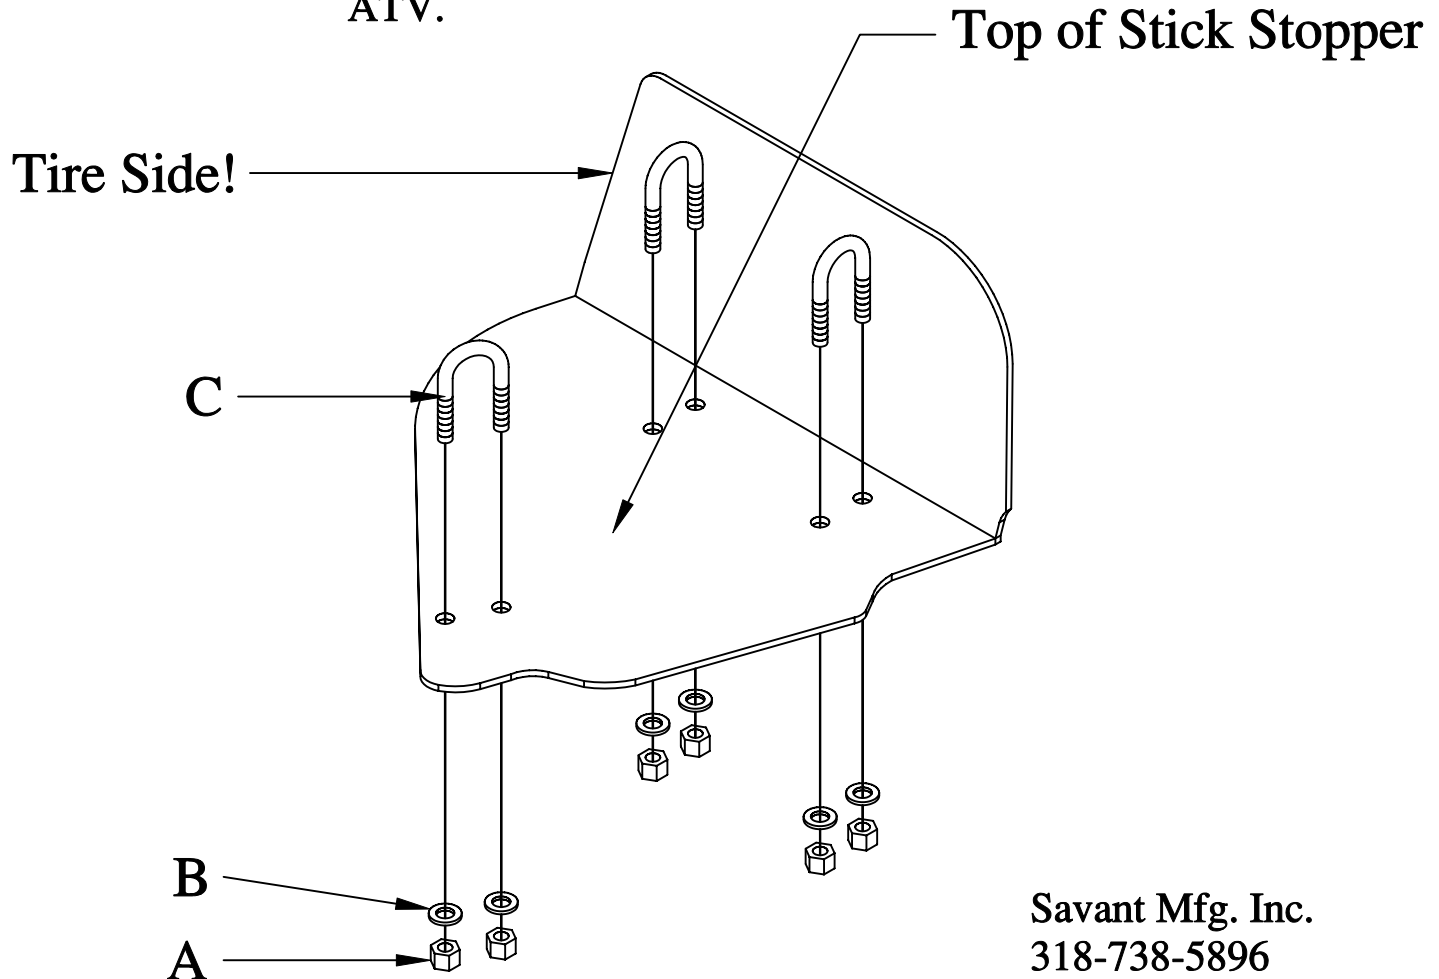

Savant Mfg. Inc.
318-738-5896
www.savantmfg.com