

6=1/4X3/4 U BOLTS-A
 12=1/4 LOCK NUTS-B
 12=1/4 SAE FLAT
 WASHERS-C
 6=1/4X1 SQUARE
 U-BOLTS-D




#SS129 POLARIS 500 600 700
 SPORTSMAN REAR STICK
 STOPPER.


EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.

THE SS129 MOUNTS ON TOP OF THE REAR A ARM, U BOLTS COME FROM UNDER THE A ARM . MAKE SURE THAT ALL U-BOLTS ARE CLEAR OF ALL BRAKE LINES TO THE REAR BRAKE CALIBER.

SOME SPORTSMAN 500 600 700 4X4 WILL HAVE ROUND A-ARMS AND SOME WILL HAVE SQUARE A-ARMS. USE THE ROUND OR SQUARE U-BOLTS DEPENDING ON WHAT MODEL THAT YOU HAVE.

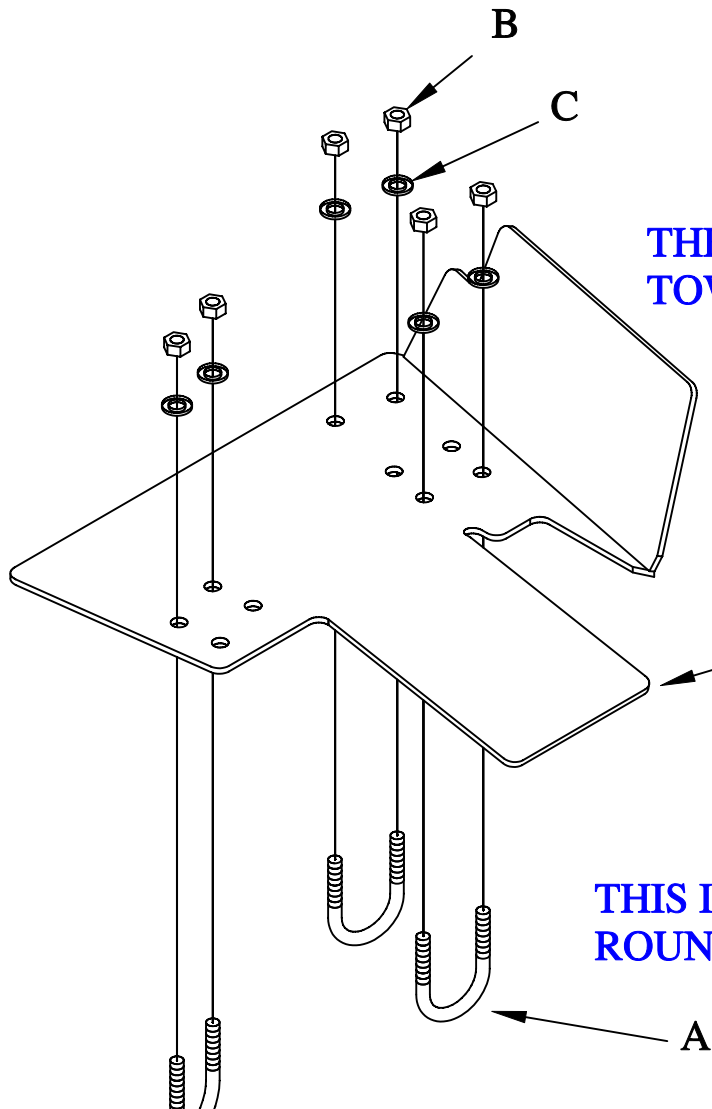

THESE ENDS TOWARD THE RIMS

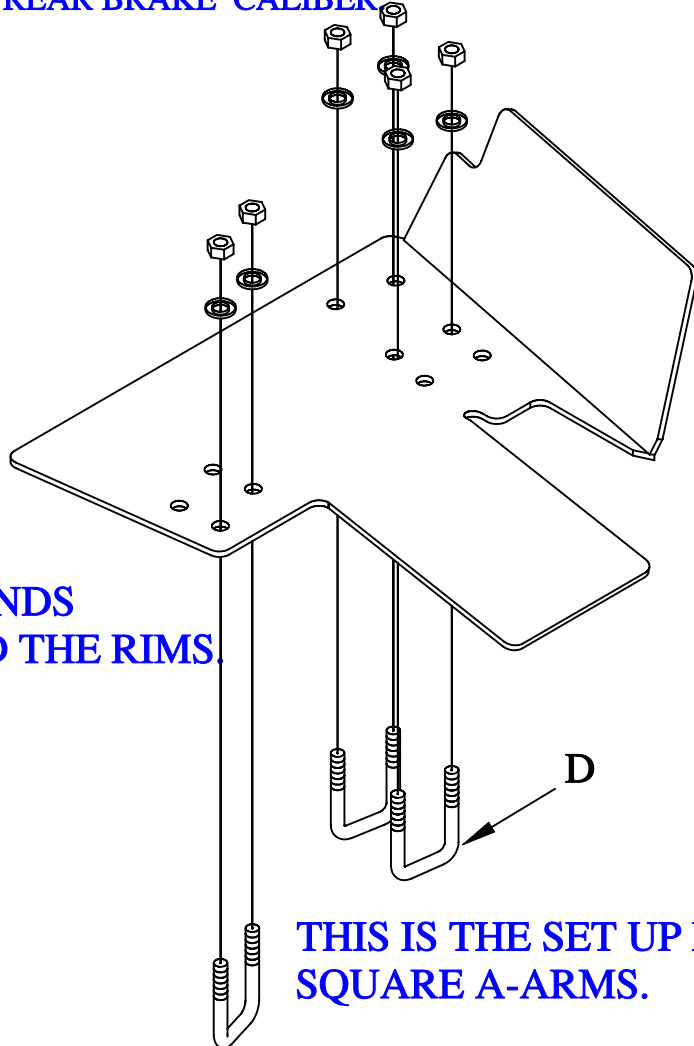

THIS IS THE SET UP FOR SQUARE A-ARMS.

PAY ATTENTION TO WHAT HOLES THAT YOU ARE USING FOR WHAT SET UP.

THIS IS THE SET UP FOR THE ROUND A-ARMS.

ANY QUESTIONS CALL:1-800-326-6