

8=1/4 LOCK NUTS
16=1/4 SAE WASHERS
4=1/4X2 BOLTS-C
4=1/4X2 1/4 BOLTS-D




2=1/4X1 1/2 FLAT
BAR-9 5/16 LONG
WITH 5/16X1/2
HOLES PER PAIR.

2=1/4X1 FLAT BAR
4 3/4 LONG WITH
5/16X1/2 HOLES
PER PAIR.

#SS130

THE FLAT BARS WILL SANDWICH
ON TOP OF THE A ARM AS SHOWN
IN THE PICTURE.

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURNING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURNING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.

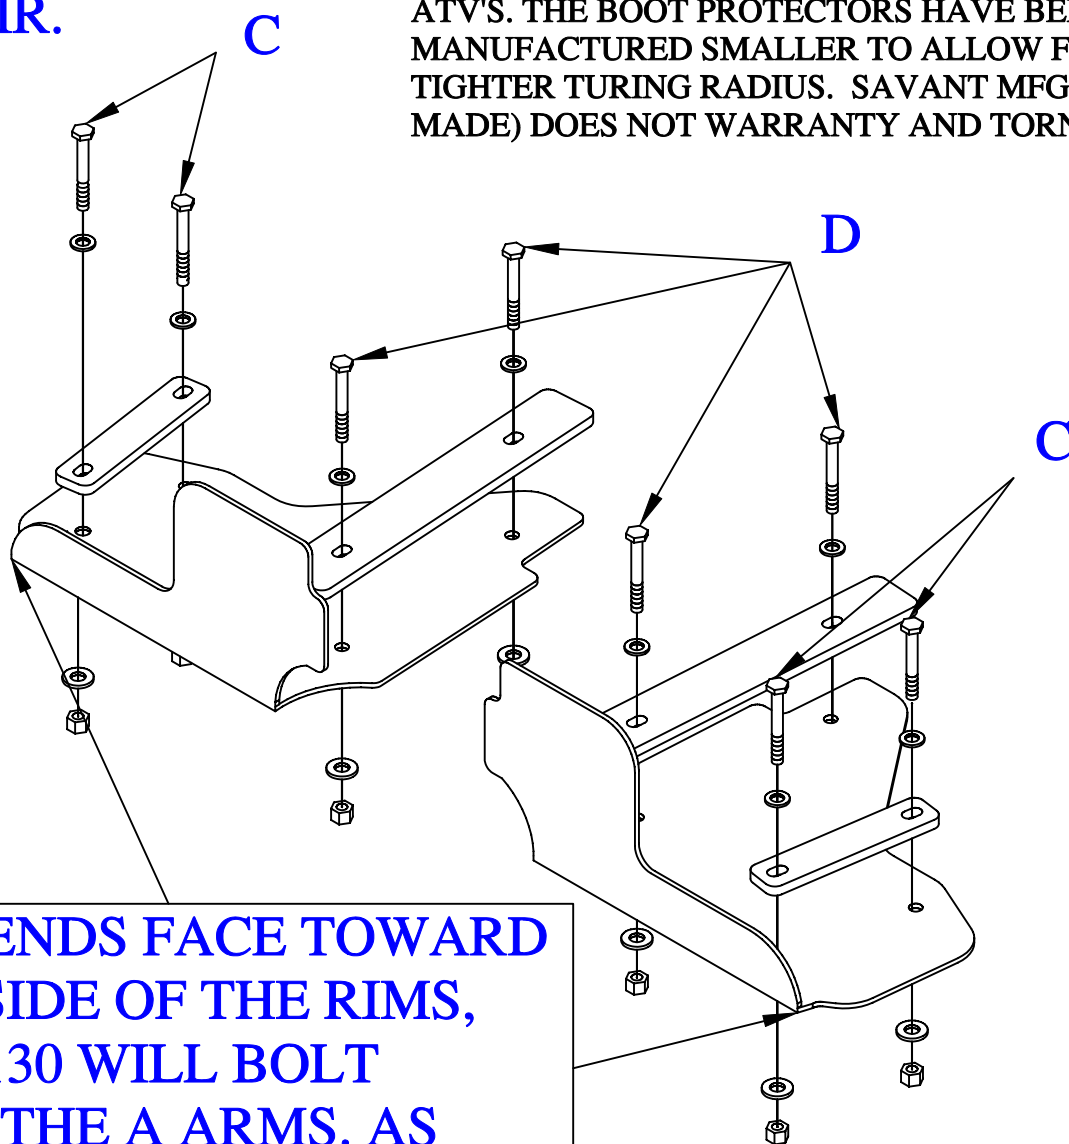

THESE ENDS FACE TOWARD
THE INSIDE OF THE RIMS,
THE SS130 WILL BOLT
UNDER THE A ARMS. AS
SHOWN IN THE PICTURE .