




- 12=1/4 LOCK NUTS-A
- 6=1/4 X 1/2 U-BOLTS-B
- 12=1/4 SAE WASHERS-C
- 6=#16 TANNER RIVITS-D
- 6=5/16 SAE WASHERS-E

# # SS134H

KAWASAKI 650 V-TWIN 2002

THE SS134 WILL BOLT UNDER THE A-ARMS. MUST REMOVE THE FACTORY PLASTIC GUARDS.

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.

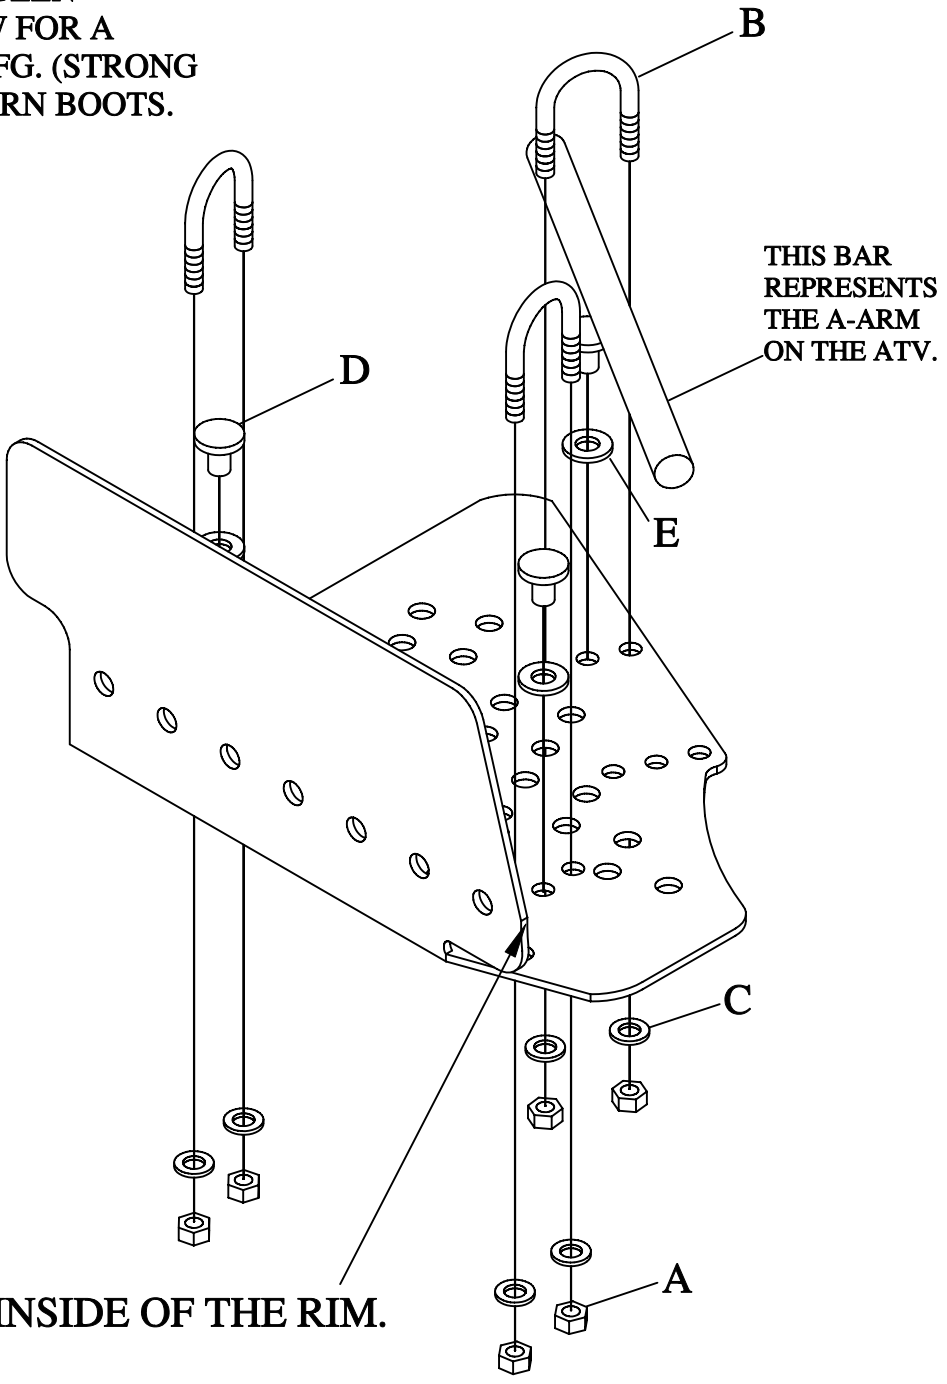

THESE ENDS WILL FACE THE INSIDE OF THE RIM.