



- A-1/4 LOCK NUTS=12
- B-1/4X1/2 U-BOLTS=6
- C-1/4 WASHERS=12
- 1/4 x 1 U-BOLTS=4


ONLY FOR MODELS WITH  
UPDATED A-ARMS.

THE LOWER A-ARMS WERE UPDATED  
FOR THE 2006 AND SOME 2005  
MODELS. USE THE 1/4 X 1 U-BOLTS TO  
SUBSTITUTE FOR THE 1/4 X 1/2  
U-BOLTS FOR THESE DIFF. A-ARMS.

# SS137

KAWASAKI 360 2003

THE SS137 WILL BOLT UNDER  
THE A-ARMS. MUST REMOVE THE  
FACTORY PLASTIC GUARDS.

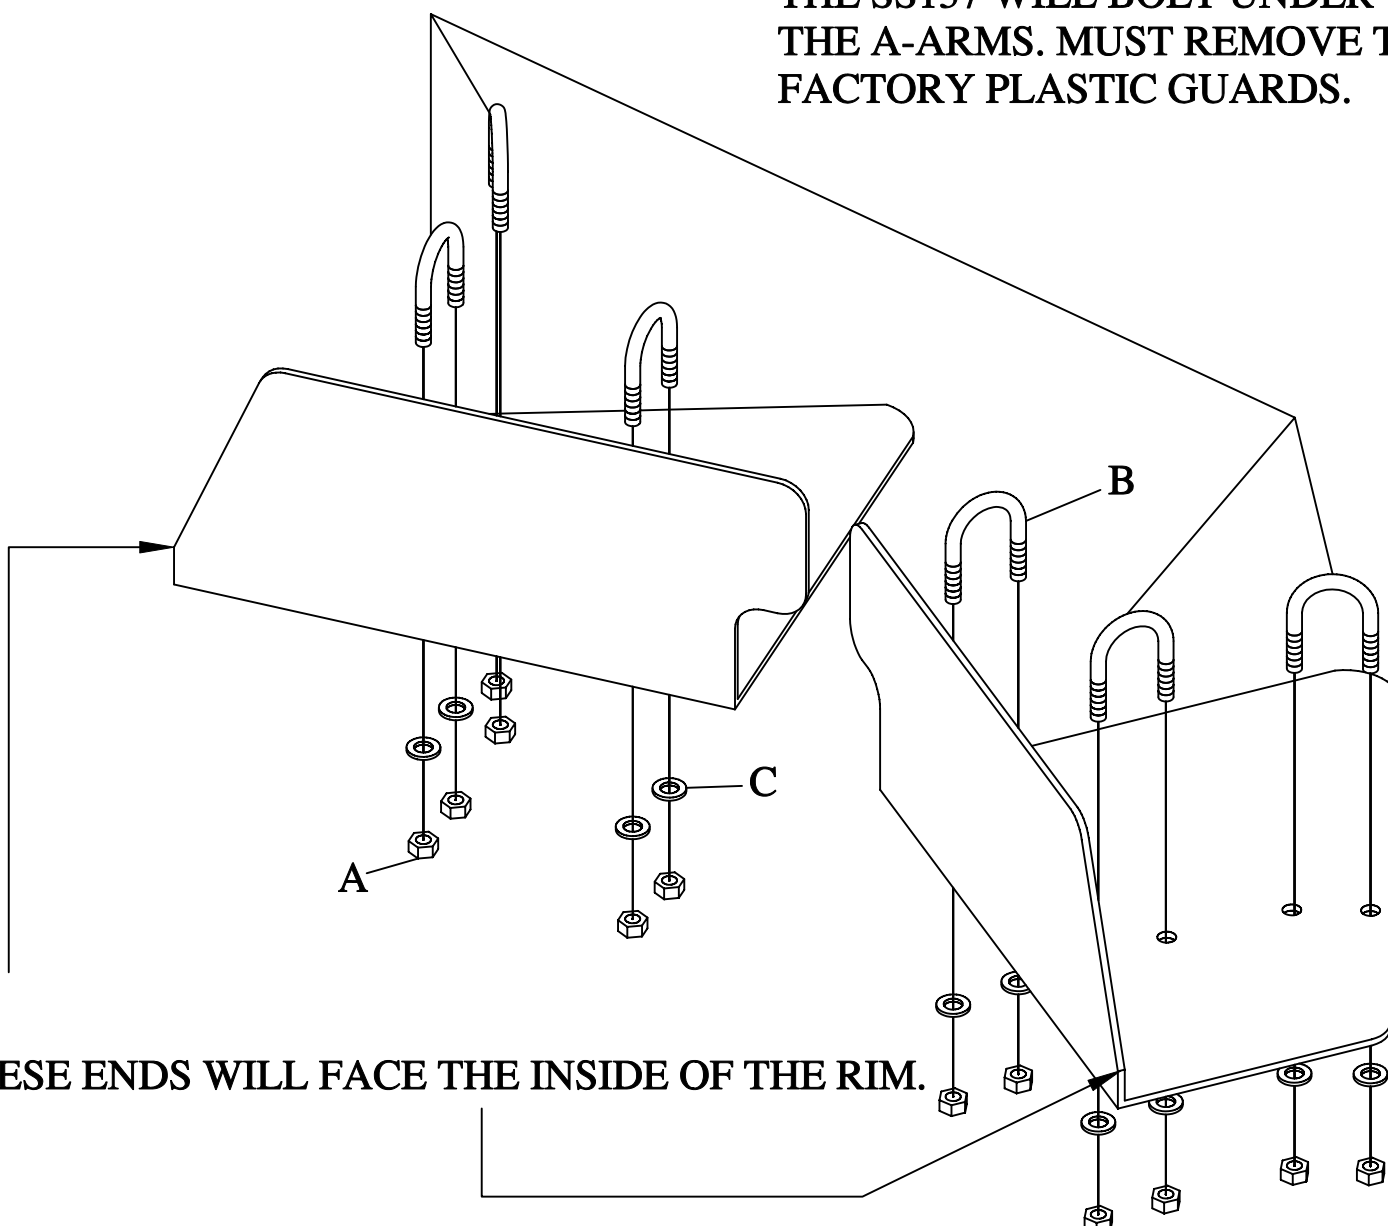

THESE ENDS WILL FACE THE INSIDE OF THE RIM.