


6=1/4X1/2 U-BOLTS-A  
12=1/4 LOCK NUTS-B  
12=1/4 WASHERS-C



# # SS138

2002 ARTIC CAT 500I STANDARD-AUTO

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.

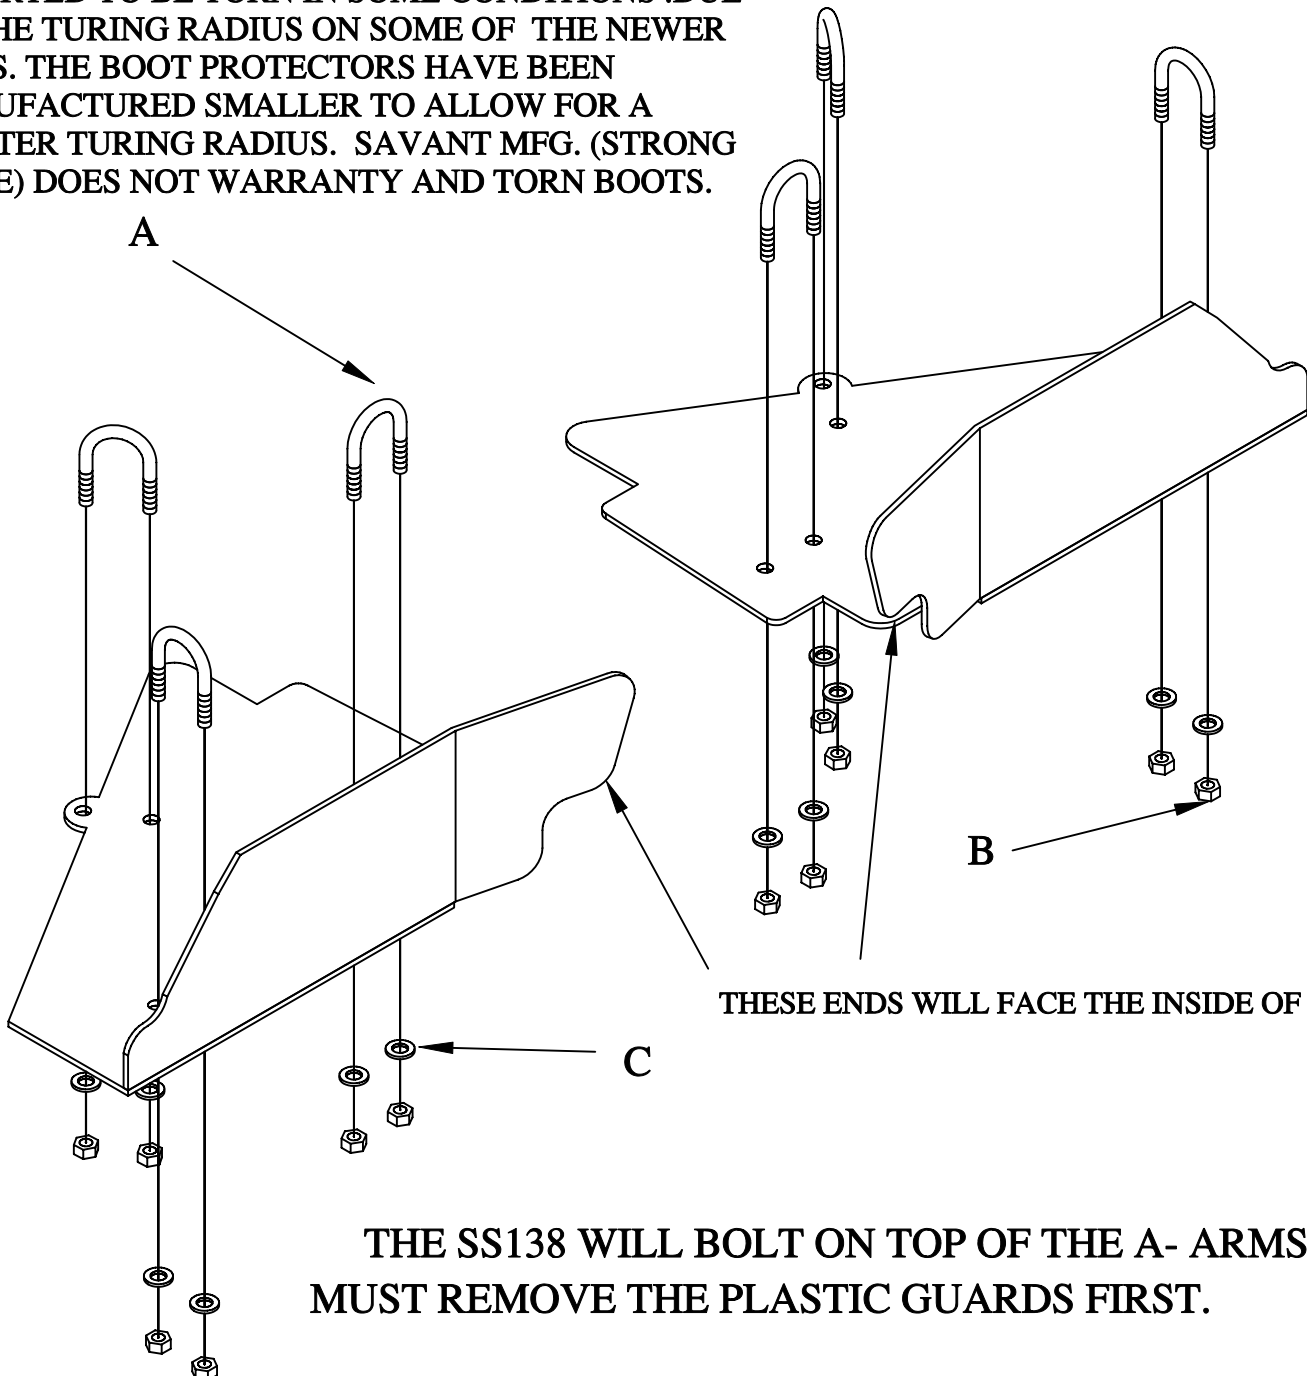

THESE ENDS WILL FACE THE INSIDE OF THE FRAME

THE SS138 WILL BOLT ON TOP OF THE A- ARMS.  
MUST REMOVE THE PLASTIC GUARDS FIRST.