


USE THE ORIGINAL BOLTS
AND NUTS JUST REMOVE
THE PLASTIC GUARDS
AND INSTALL SS145.



#SS145

THESE ENDS FACE THE INSIDE OF THE RIMS.

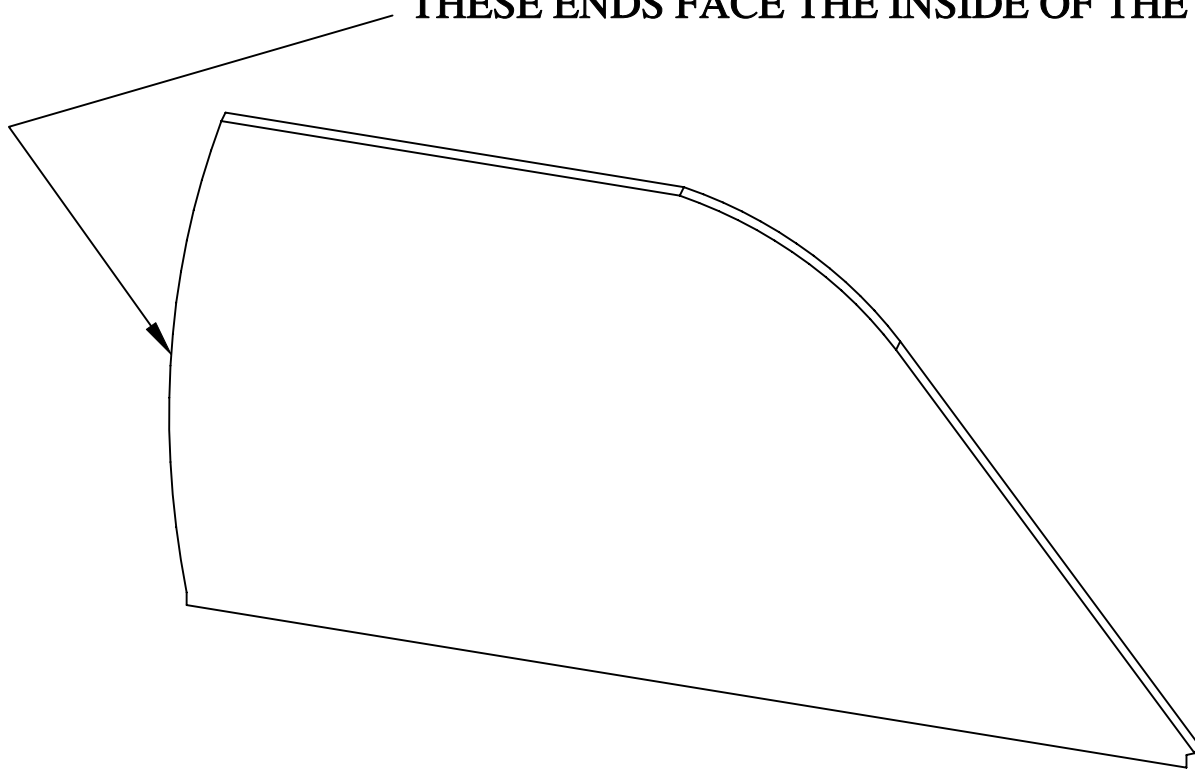

MANUFACTURED BY SAVANT MFG.