

- 4=1/4 X 1 3/4 BOLTS-A
- 4=1/4 X 1 BOLTS-B
- 8=3/16 X 1 WASHERS-C
- 8=1/4 LOCK NUTS-D
- 16=1/4 USS WASHERS-E




SS172H
 REAR GUARDS POLARIS
 HAWKEYE 300 4X4.
 SPORTSMAN 300/400 2009

THESE WASHERS ARE USED AS SPACERS TO BE PLACED UNDER THE SQUARE TUBING ON THE A-ARM.

ONCE MOUNTED MAKE SURE ALL BRAKE LINES ARE NOT RUBBING ON THE GUARDS ANYWHERE...

THESE ENDS WILL FACE THE INSIDE OF THE RIMS ONCE THEY HAVE BEEN MOUNTED UNDER THE A-ARMS.

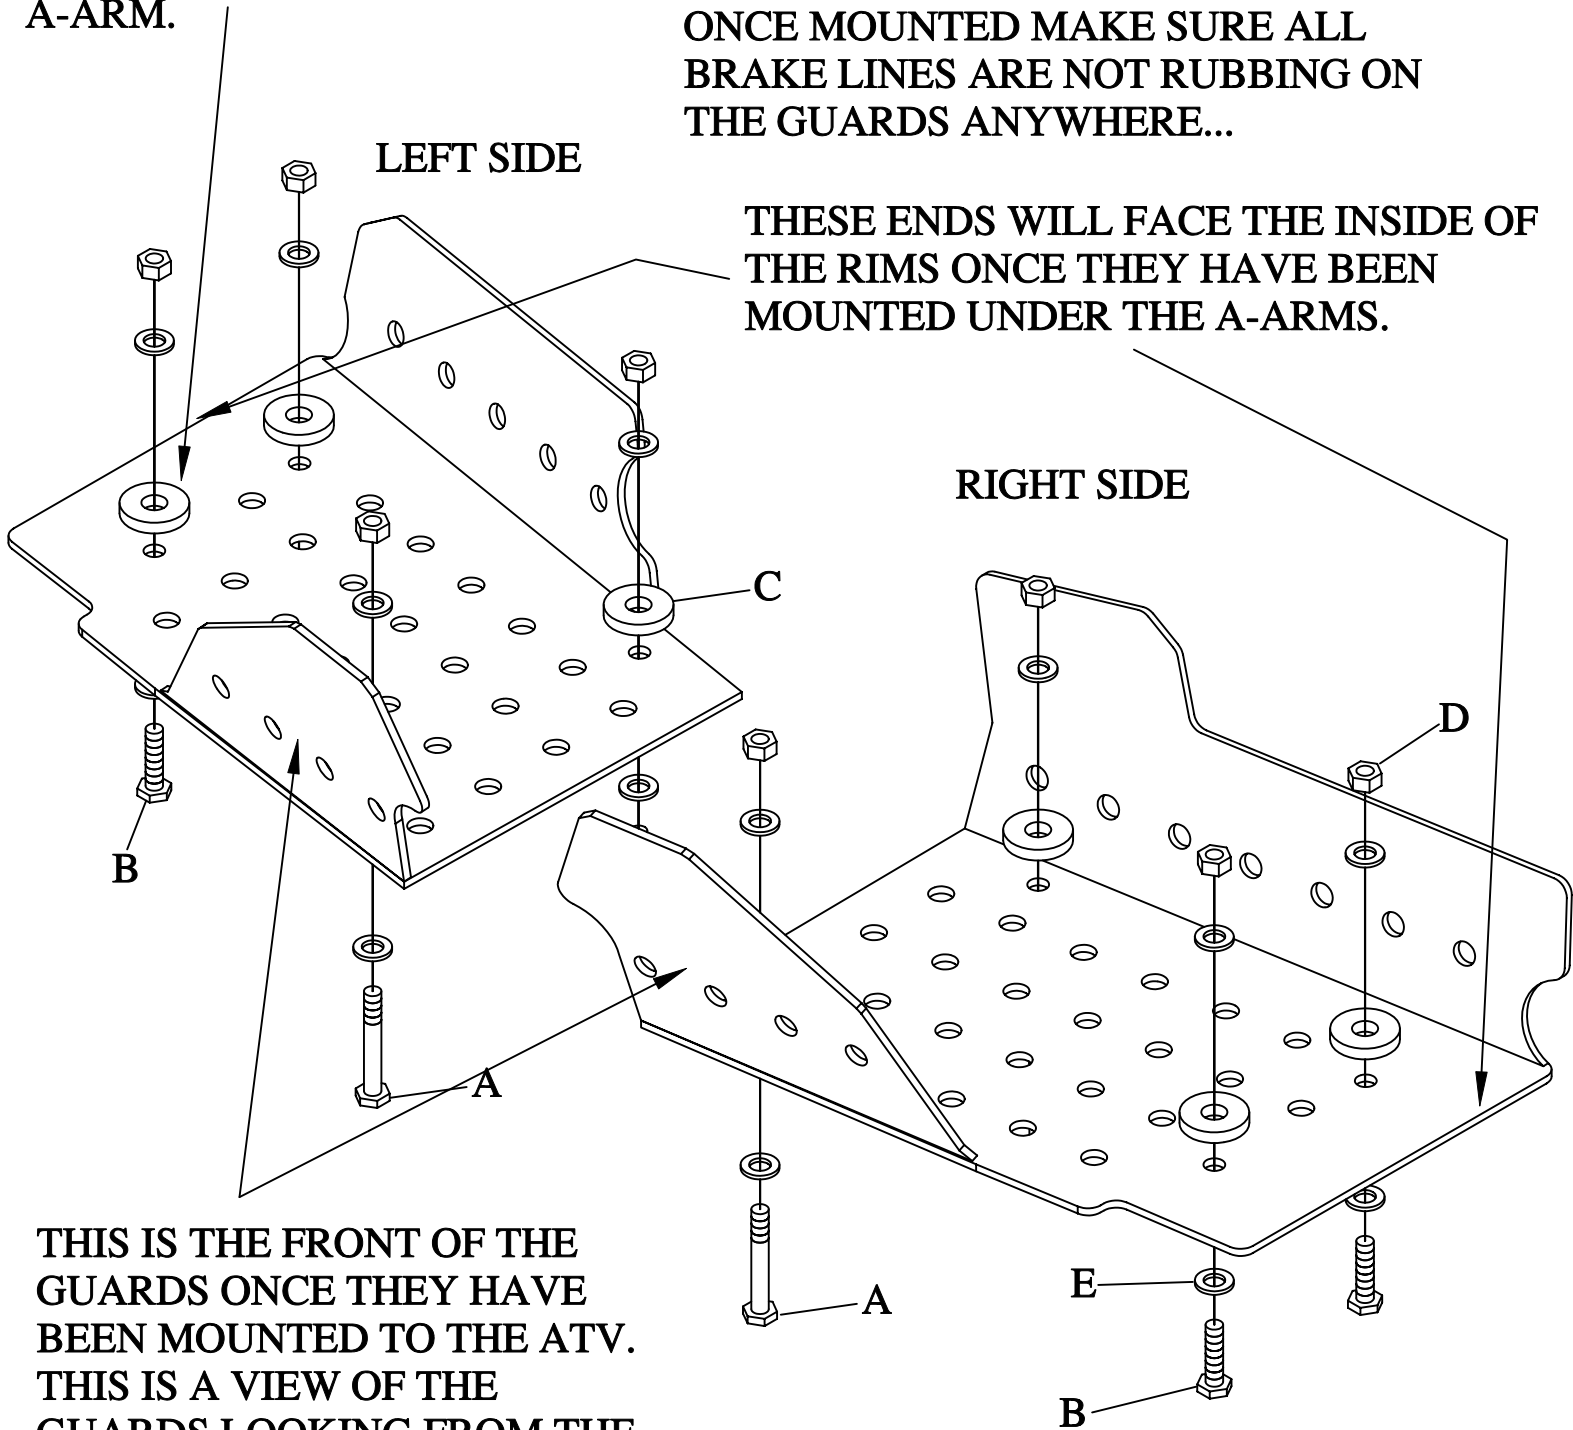

THIS IS THE FRONT OF THE GUARDS ONCE THEY HAVE BEEN MOUNTED TO THE ATV. THIS IS A VIEW OF THE GUARDS LOOKING FROM THE REAR OF THE MACHINE.