

- 8=1" X 3/16" WASHERS-A
- 8=1/4 X 2 1/4 BOLTS-B
- 8=1/4 LOCK NUTS-C
- 8=1/4 USS WASHERS-D




SS174H-AL

POLARIS RZR 800 4X4 REAR ALUM GUARDS

MUST REMOVE ALL PLASTIC GUARDS.

THESE ARE SHIMS THAT GO BETWEEN THE GUARD AND THE A-ARMS.

THIS END WILL FACE THE INSIDE OF THE RIM ONCE MOUNTED.

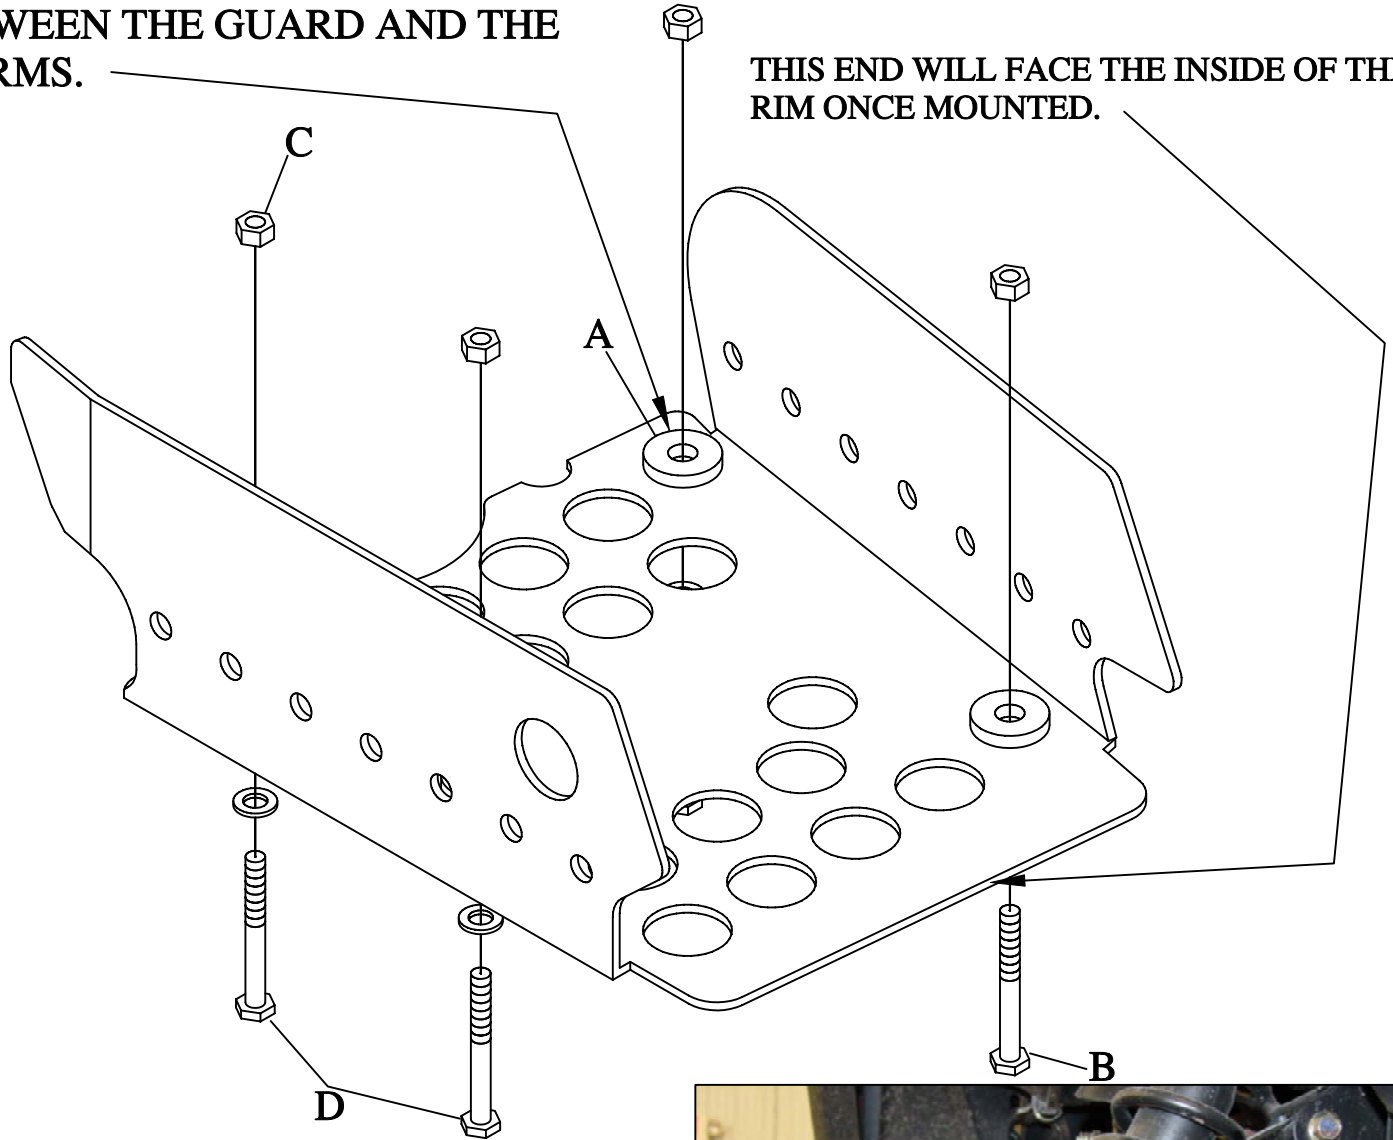

THE INSTALLATION OF THE GUARDS ARE MUCH EASIER IF THE WHEEL IS REMOVED FROM THE MACHINE. PROPER LIFTING EQUIPMENT IS NEEDED TO LIFT THE MACHINE.

REMOVE THIS NUT AND PUSH THE BOLT BACK THEN MOUNT THE GUARD TO THE A-ARM. REPLACE THE NUT ONTO THE BOLT AFTER THE GUARD HAS BEEN INSTALLED.

