

8=1" X 3/16" WASHERS-A

8=1/4 X 2 1/4 BOLTS-B

8=1/4 LOCK NUTS-C

8=1/4 USS WASHERS-D




**MUST REMOVE ALL PLASTIC GUARDS.**

# # SS174H

**POLARIS RZR 800 4X4 REAR GUARDS**

**THESE ARE SHIMS THAT GO BETWEEN THE GUARD AND THE A-ARMS.**

**THIS END WILL FACE THE INSIDE OF THE RIM ONCE MOUNTED.**

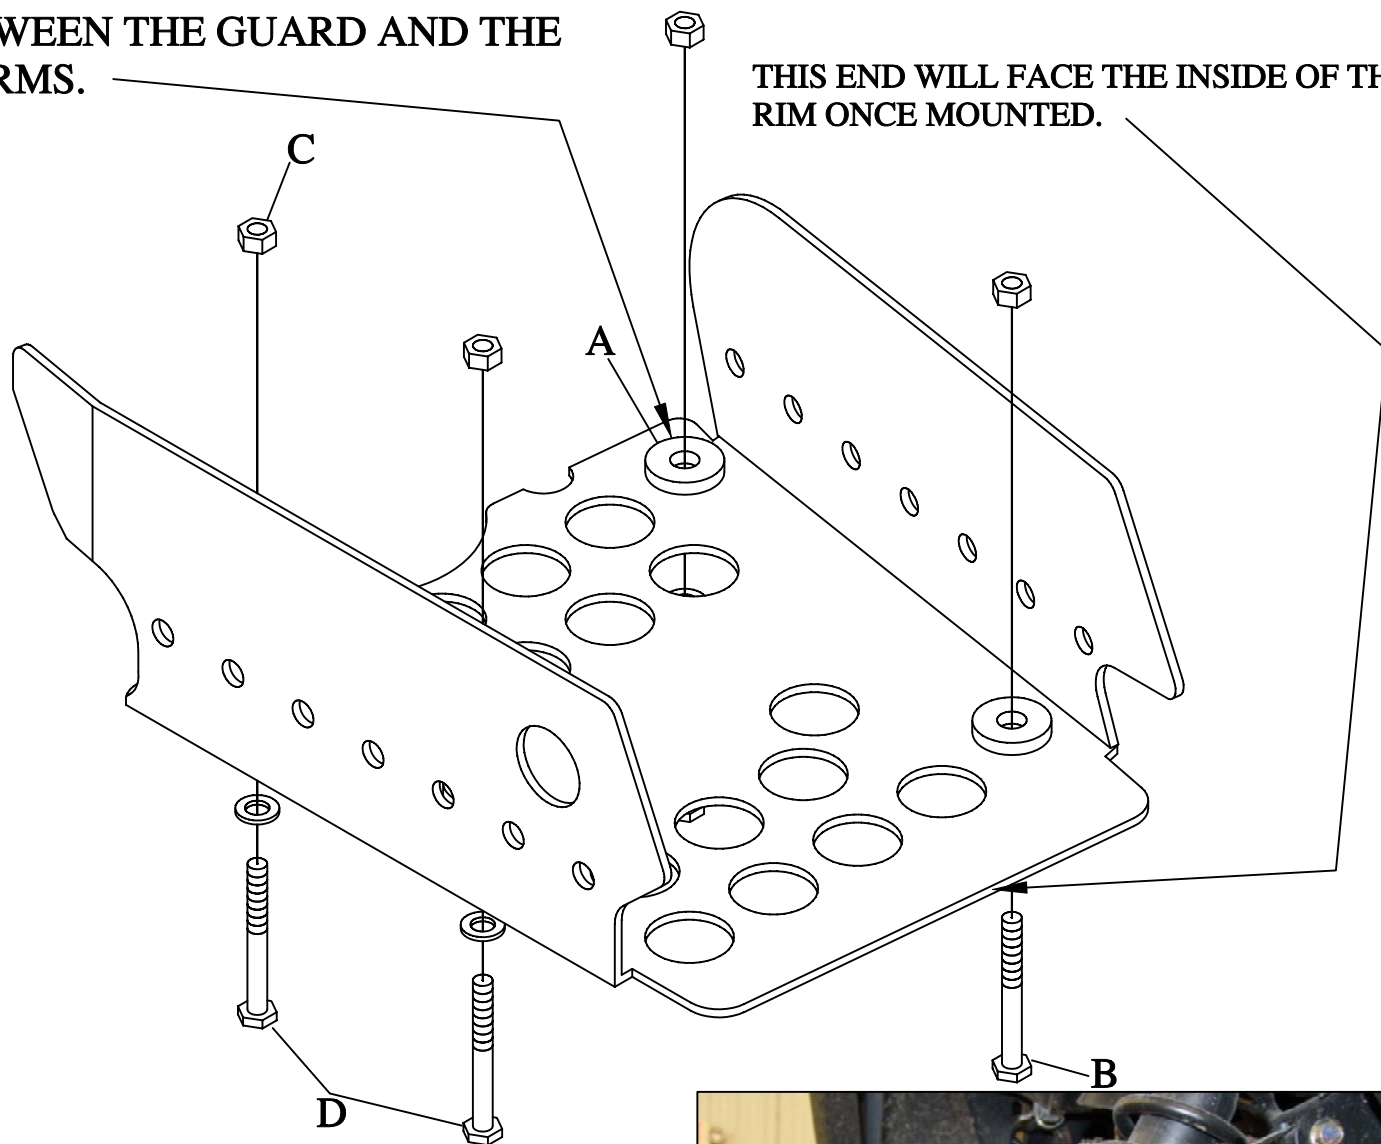

**THE INSTALLATION OF THE GUARDS ARE MUCH EASIER IF THE WHEEL IS REMOVED FROM THE MACHINE. PROPER LIFTING EQUIPMENT IS NEEDED TO LIFT THE MACHINE.**

**REMOVE THIS NUT AND PUSH THE BOLT BACK THEN MOUNT THE GUARD TO THE A-ARM. REPLACE THE NUT ONTO THE BOLT AFTER THE GUARD HAS BEEN INSTALLED.**

