


6=1/4X3/8 U-BOLTS-A
12=1/4 LOCK NUTS-B
12=1/4 SAE WASHERS-C
6=TANNER RIVETS-D
6=5/16 SAE WASHERS-E



SS175H

YAMAHA WOLVERINE 450 4X4

**MUST REMOVE THE FACTORY
PLASTIC GUARDS...**

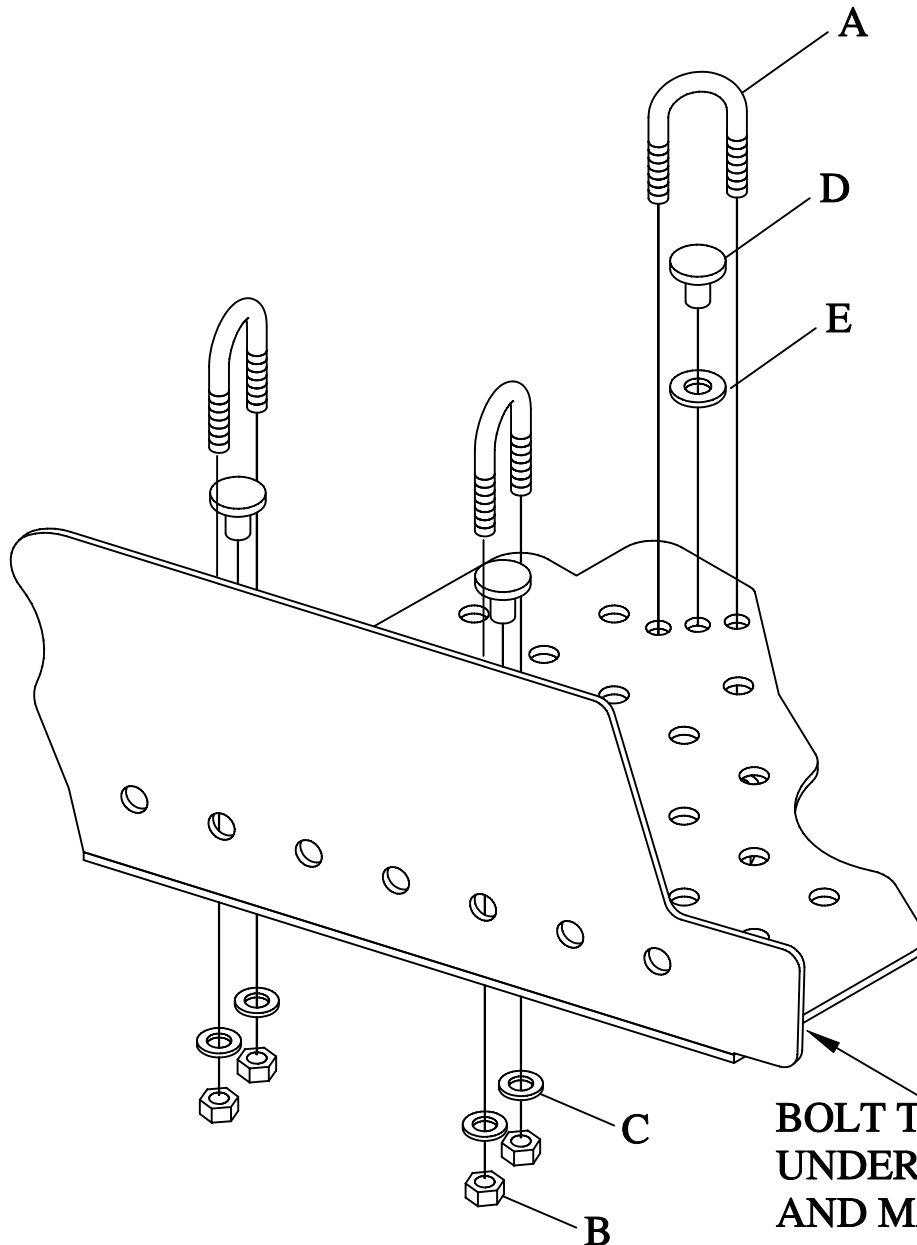

**BOLT THE GUARDS
UNDER THE A-ARMS
AND MAKE SURE
THIS END FACES
THE INSIDE OF THE
RIM.**