

- 6= #16 TANNER RIVETS-A
- 6= 5/16 SAE WASHERS-B
- 12= 1/4 LOCK NUTS-C
- 12= 1/4 SAE WASHERS-D
- 6= 1/4 X 1/2 U-BOLTS-E




SS187H

RUFF & TUFF 4X4 HUNTER
EDITION FRONT GUARDS.

MAKE SURE ALL BRAKE LINES
ARE CLEAR FROM TOUCHING
ANY PART OF THE GUARDS.

THIS UBOLT WILL MOUNT ON
THE TOP SIDE OF THE SMALL
SUPPORT BAR BETWEEN THE
A-ARMS. THIS MAKES IT
BOLT IN A DESIGNATED
POSITION ON THE A-ARM.

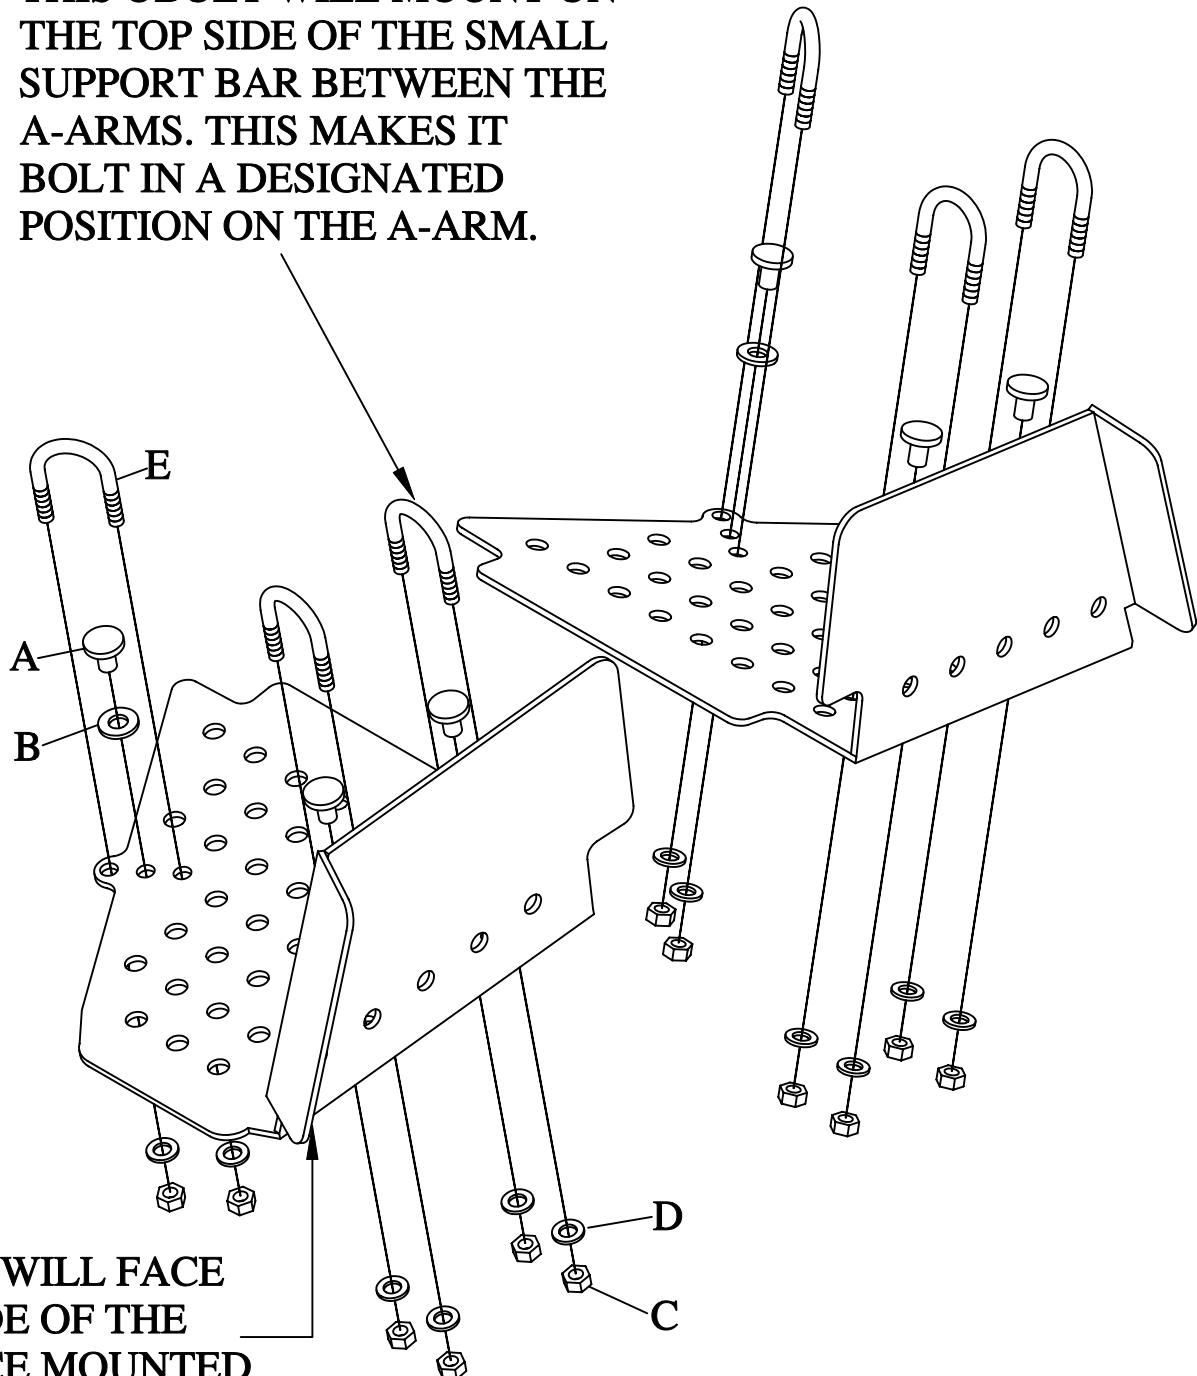

THIS END WILL FACE
THE INSIDE OF THE
RIME ONCE MOUNTED
UNDER THE A-ARMS.