

6= #16 TANNER RIVETS-A

6=5/16 SAE WASHERS-B

12=1/4 LOCK NUTS-C


12=1/4 SAE WASHERS-D

6=1/4 X 1/2 U-BOLTS-E

**MAKE SURE ALL BRAKE LINES ARE CLEAR FROM TOUCHING ANY PART OF THE GUARDS. USE A ZIP TIE TO SECURE AWAY FROM GUARD WHERE TOUCHING MAY BE A PROBLEM.**

**MUST MOUNT THIS UBOLT ON THE TOP SIDE OF THE SMALL BRACKET THAT THE STABILIZER BAR MOUNTS ON. THIS IS THE DESIGNATED POSITION ON THE A-ARM FOR THE GUARD. ONCE MOUNTED THE GUARD SHOULD BE PUSHED UP TOWARD THE FRAME AS FAR AS POSSIBLE ON THE A-ARM.**

THIS END FACES THE INSIDE OF THE RIM ONCE MOUNTED UNDER THE A-ARM.

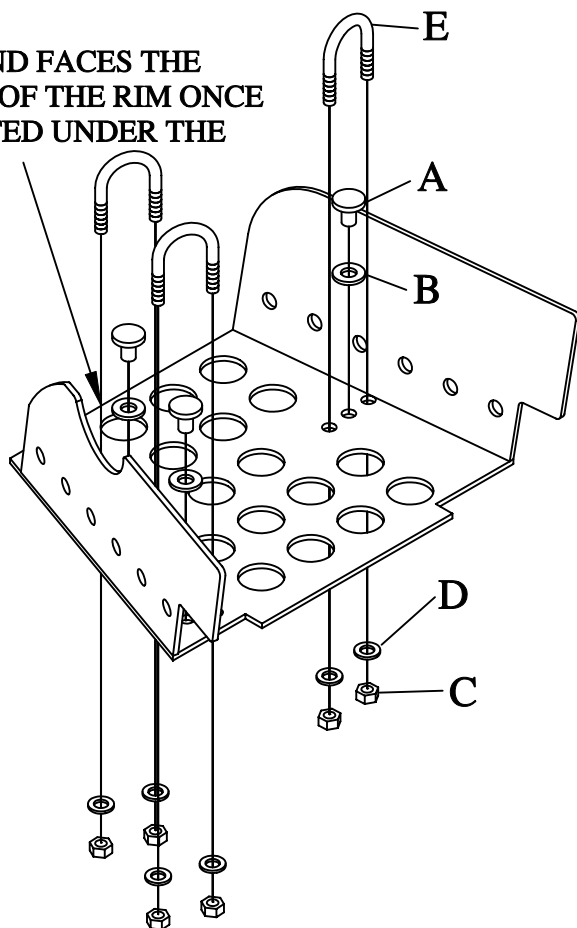

**STRONG  MADE™**

BY SAVANT MANUFACTURING, INC.

[www.savantmfg.com](http://www.savantmfg.com)

# # SS188H

RUFF & TUFF 4X4 HUNTER EDITION REAR GUARDS.

