




- 2= QC100 CLIPS-A
- 2=1" ZINC WASHERS-B
- 2=5/16 X 1 BOLTS-C
- 8=#16 TANNER RIVETS-D
- 10=5/16 SAE WASHERS-E
- 2=6MM X 25MM X 1 BOLTS-F
- 10=1/4 USS WASHERS-G
- 4=1/4 LOCK NUTS-H
- 4=1/4 X 1 BOLTS-I
- 2=1/4 GALV. SPACERS 1/4 LONG.

SS192H


HONDA BIG RED FRONT GUARDS

MUST LEAVE THE PLASTIC GUARDS ON THE STEERING KNUCKLES.

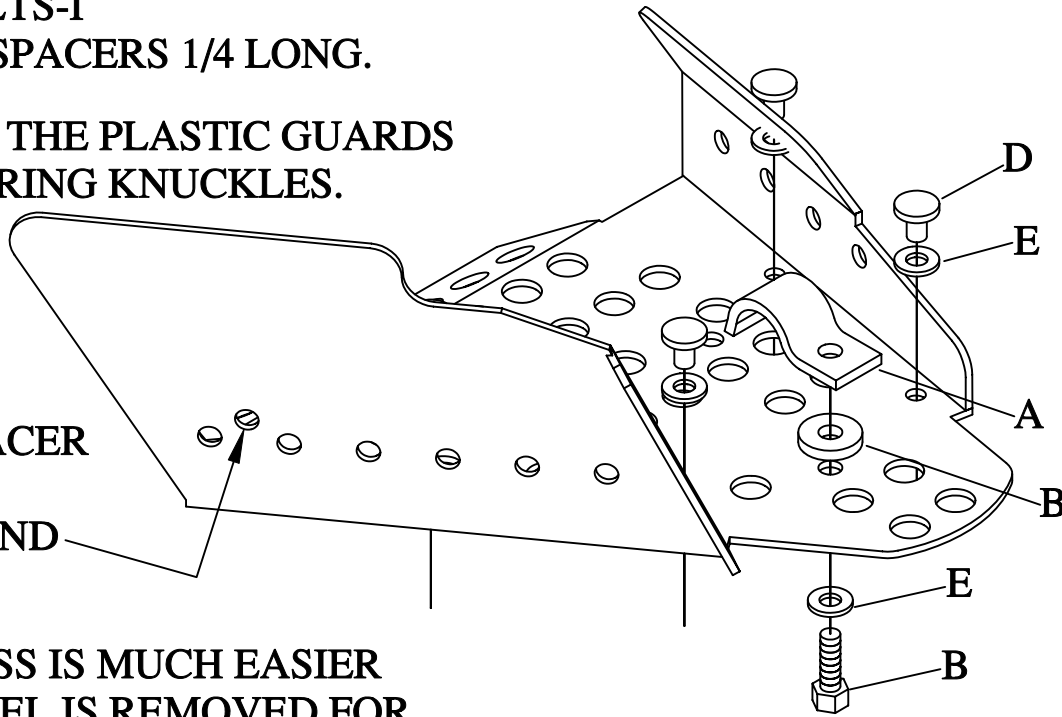

1/4 GALV. SPACER
USED AS A
SPACER BEHIND
THIS HOLE.

**THE PROCESS IS MUCH EASIER
IF THE WHEEL IS REMOVED FOR
THE MACHINE.**

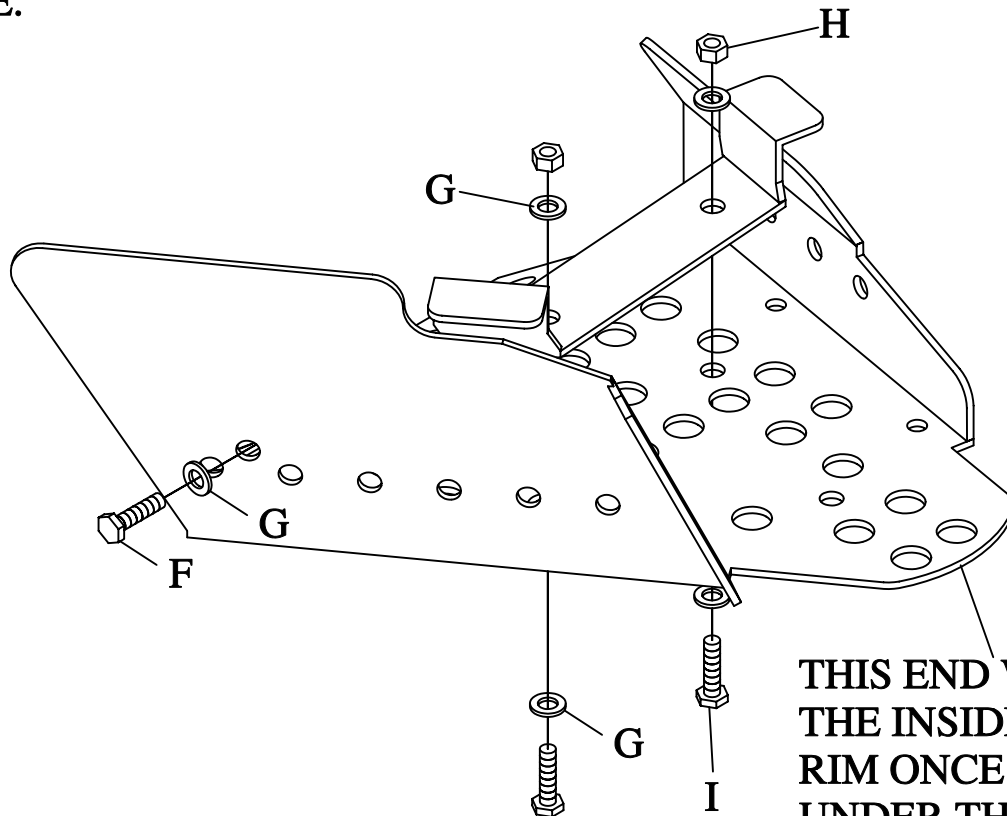

**THIS END WILL FACE
THE INSIDE OF THE
RIM ONCE MOUNTED
UNDER THE LOWER
A-ARMS.**