


- 4=QC101 CLIPS-A
- 4=5/16 X 1 BOLTS-B
- 8=5/16 SAE WASHERS-C
- 4= #16 TANNER RIVETS-D
- 2=6MM X 1 X 25MM BOLTS-E
- 2=1/4 USS WASHERS-F
- 6=1 X 3/16 ZINC WASHERS-G



SS194H
POLARIS SPORTSMAN
XP 550 4X4 FRONT GUARDS.

REMOVE THE STOCK PLASTIC GUARDS TO INSTALL THE NEW METAL GUARDS.

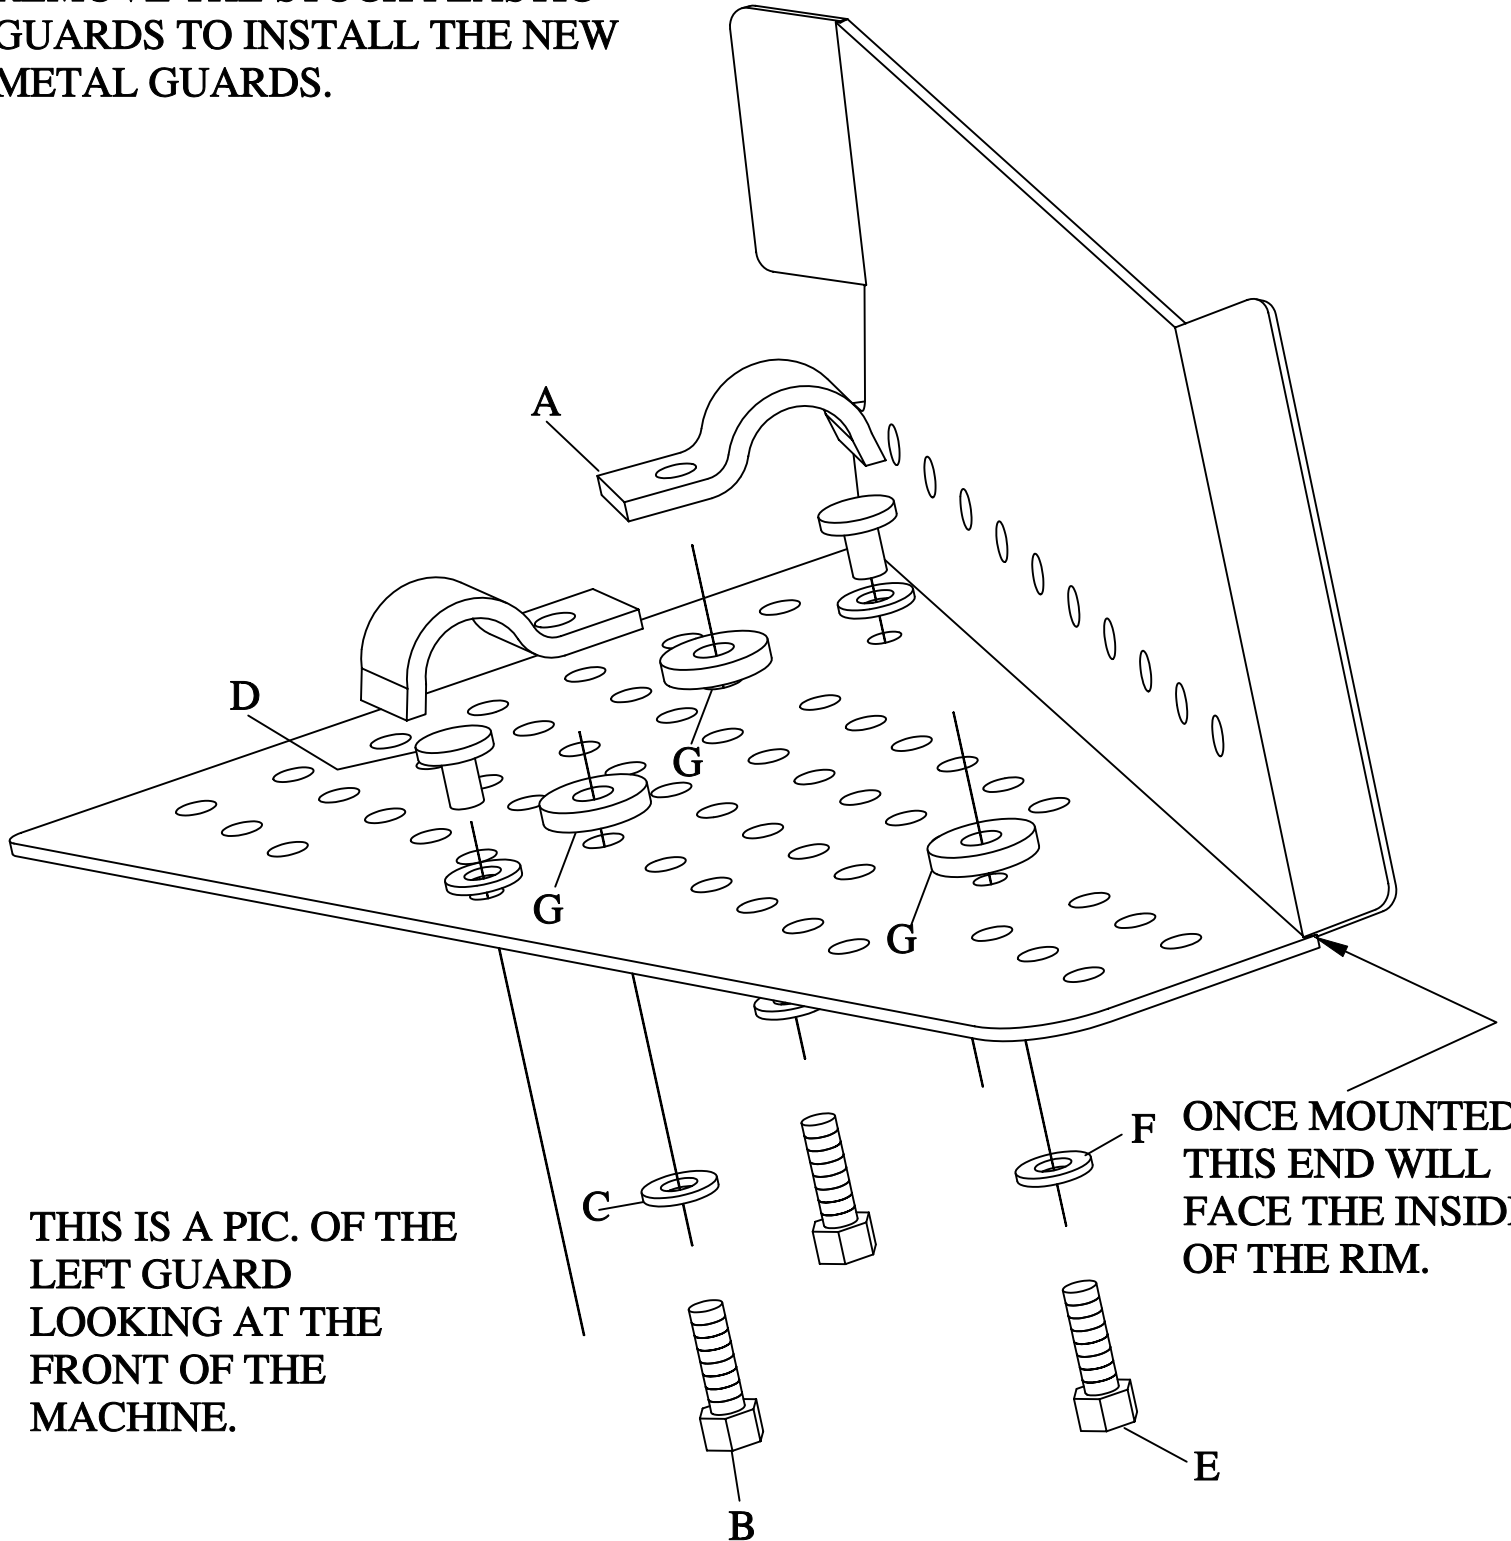

THIS IS A PIC. OF THE LEFT GUARD LOOKING AT THE FRONT OF THE MACHINE.

ONCE MOUNTED THIS END WILL FACE THE INSIDE OF THE RIM.