

6=1/4 X 1 SQUARE U-BOLTS
12=1/4 LOCK NUTS
12=1/4 SAE WASHERS




MUST REMOVE THE PLSTIC GUARDS TO INSTALL THE REAR METAL GUARDS.

SS198H

POLARIS SPORTSMAN 500HO 2009

THE SS198H WILL MOUNT ON TOP OF THE LOWER CONTROL ARM. USE THE 1/4 X 1 SQUARE U-BOLTS AND INSERT THE INTO THE HOLES FROM THE BOTTOM UPWARDS. SECURE THE GUARD WITH THE 1/4 SAE WASHERS AND THE 1/4 LOCK NUTS.

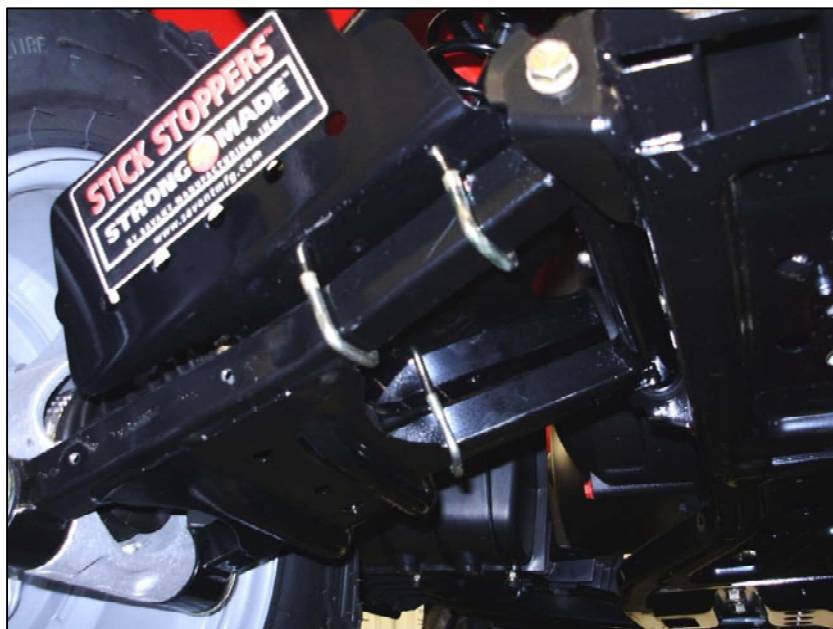

THIS IS A PIC. OF THE GUARD ONCE IT HAS BEEN MOUNTED ON TOP OF THE LOWER CONTROL ARM. REPEAT THE SAME PROCEDURE FOR THE OPPOSITE SIDE.