

- 2=1/4" GALV. SPACERS 9/16" LONG-A
- 2=1/8 X 1 X 7/8 ROUND CLIPS-B
- 4=5/16 X 1 BOLTS-C
- 6=5/16 LOCK NUTS-D
- 12=5/16 SAE WASHERS-E
- 2=5/16 X 2 1/2 BOLTS-F

MUST PURCHASE THE SS170H'S BEFORE YOU CAN MOUNT THE SS207H'S. INSTALL THE SS170H'S TO THE ATV BEFORE INSTALLING THE SS207H'S ONTO THE SS170H'S.



**CAUTION: ALL HARDWARE MUST BE USED ON THE SS170H'S FOR THE SS207H'S TO FIT CORRECT.**



# # SS207H

REAR ADD ON GUARDS FOR SS170H'S HONDA RANCHER 420 4X4'S THESE PICTURES ARE OF THE RIGHT SIDE SITTING ON THE ATV. THESE ARE THE TWO BOLT HOLES THAT WILL BE USED ON THE GUARD TO MOUNT THE SS207H .

THIS IS A PICTURE OF THE SS207H MOUNTED TO THE SS170H GUARD OFF THE MACHINE.

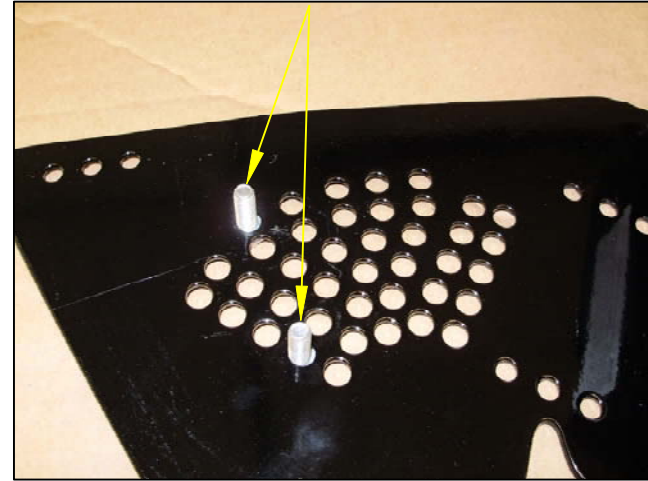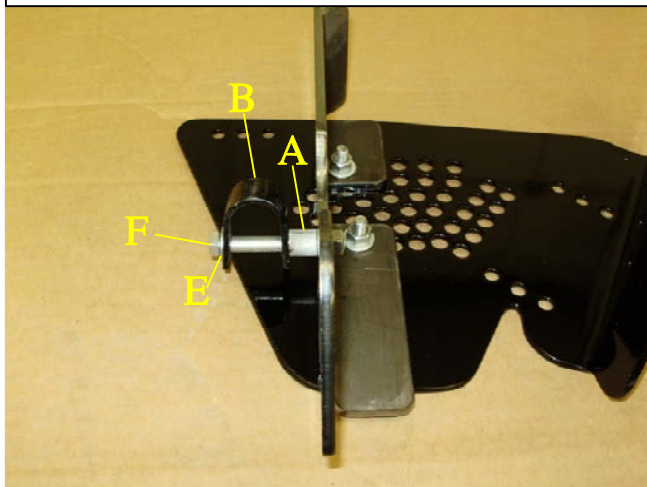

REAR VIEW ONCE MOUNTED TO THE SS170H AND ON THE ATV.

