




- 4=1/4 X 1/2 U-BOLTS-A
- 2=1/4 X 1 U-BOLTS-B
- 6=#16 TANNER RIVETS-C
- 6=5/16 SAE WASHERS-D
- 2=1/4 GALV. SPACERS
- 7/16" LONG-E
- 14=1/4 USS WASHERS-F
- 14=1/4 LOCK NUTS-G
- 2=1/4 X 1 1/4" BOLTS-H


# #SS208H

YAMAHA GRIZZLY 700FI 4X4  
(FRONT BOOT GUARDS WITH LIFT KIT)

**REMOVE THE PLASTIC GUARDS BEFORE INSTALLING THE NEW METAL GUARDS.**

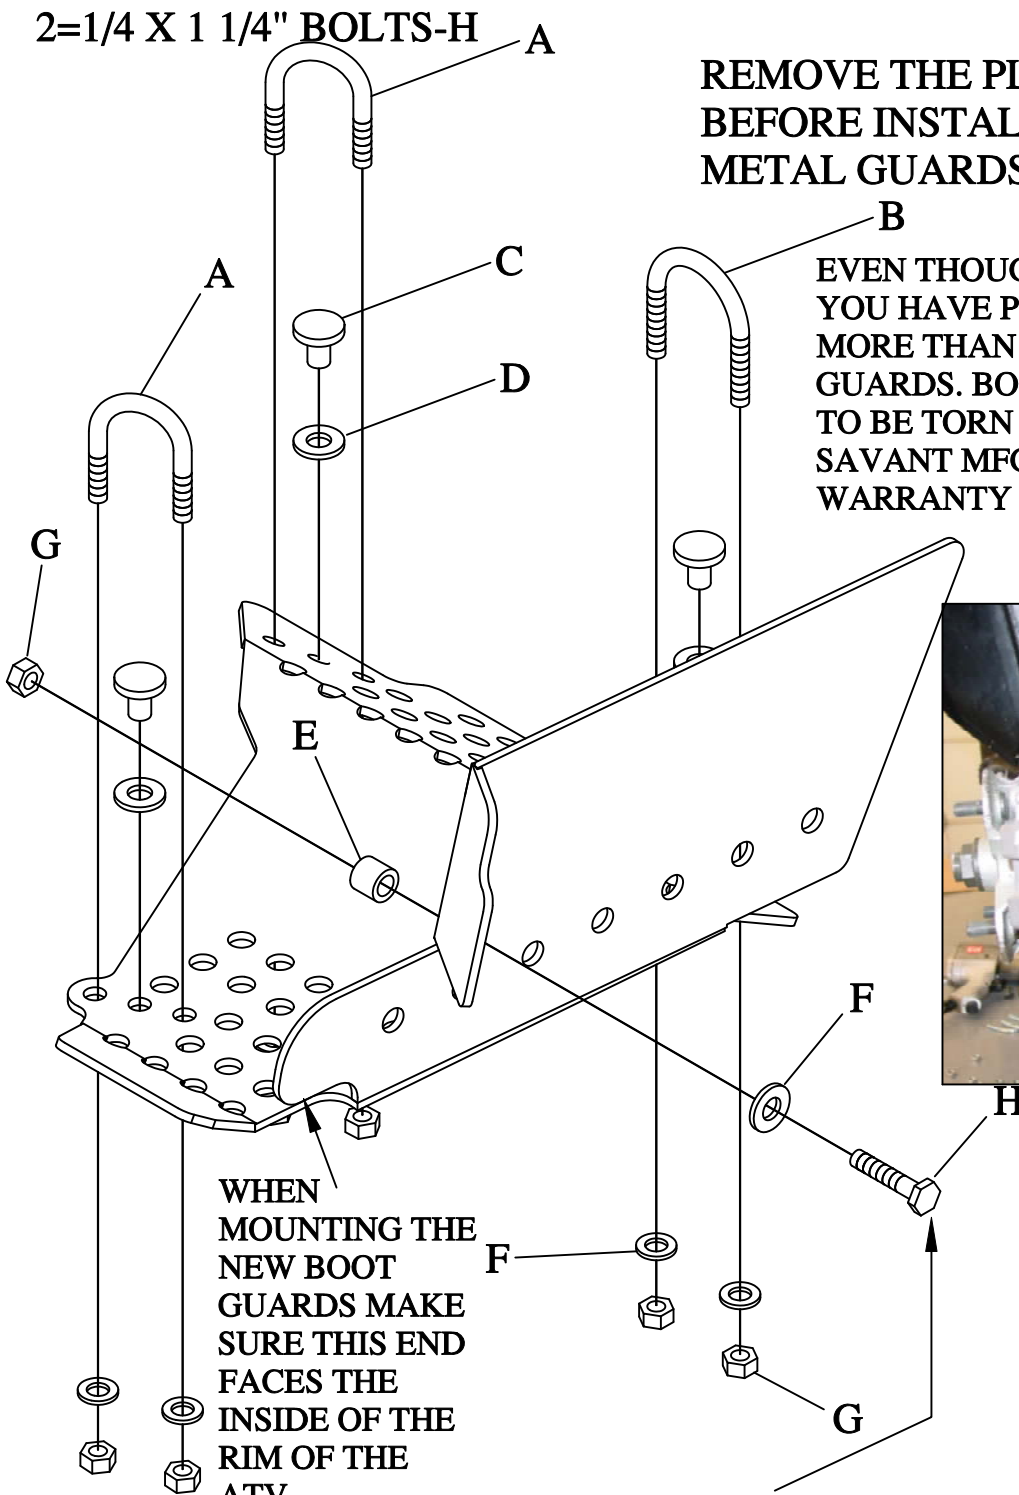

**B**  
EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY ANY TORN BOOTS.

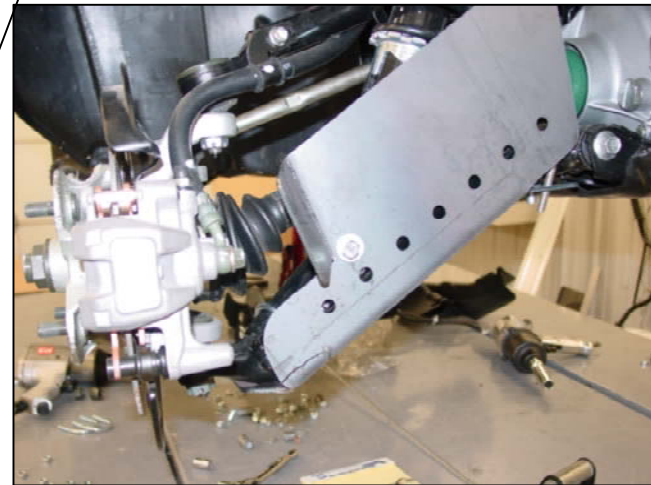

WHEN MOUNTING THE NEW BOOT GUARDS MAKE SURE THIS END FACES THE INSIDE OF THE RIM OF THE ATV.

**THIS BOLT WILL BOLT INTO THE BOTTOM SHOCK MOUNT.**