

SS217H

KAWASAKI TERYX4 800 REAR GUARDS


- 6=1/4X1 1/4 BOLTS-A
- 6=5/16 SAE WASHERS-B
- 6=1/4 LOCK NUTS-C
- 6=TANNER RIVITS-D
- 2=SPACER #2 3/4"LONG-E
- 2=SPACER #3 5/8"LONG-F
- 2=SPACER#6 3/8"LONG-G



EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS .DUE TO THE TURNING RADIUS ON SOME OF THE NEWER ATV'S. THE BOOT PROTECTORS HAVE BEEN MANUFACTURED SMALLER TO ALLOW FOR A TIGHTER TURNING RADIUS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY AND TORN BOOTS.



PLACE THE WASHER WITH THE RIVIT INTO THESE HOLES ON GUARD.

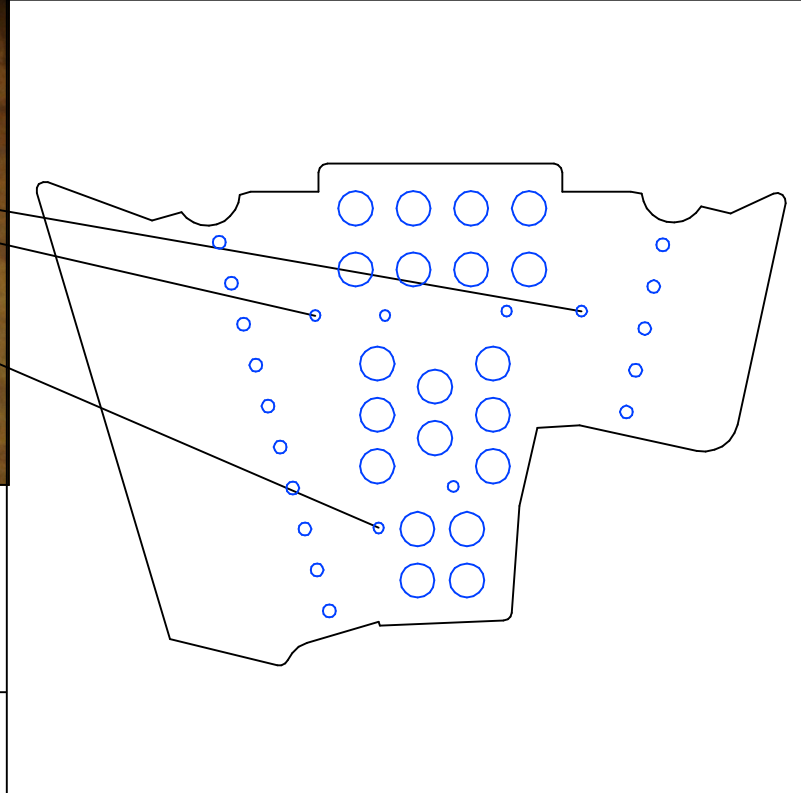

MOUNT UNDER ARM USING THE BOLTS LOCK NUTS. MUST HAVE SPACERS IN CORRECT PLACES WHEN MOUNTING. USE THEM BETWEEN GUARD AND MOUNTING STRAP OF ARM.

FINISHED MOUNTED GUARD (THIS IS THE BACK RIGHT SIDE SITTING ON MACHINE)

