





- 4=1/4 X 1/2 U-BOLTS-A
- 2=1/4 X 1 U-BOLTS-B
- 6=#16 TANNER RIVETS-C
- 6=5/16 SAE WASHERS-D
- 2=3/8 SPACERS 3/8" LONG-E
- 12=1/4 USS WASHERS-F
- 12=1/4 LOCK NUTS-G
- 2=10MM NUTS-H
- 2=10MMX60MM BOLTS-I

#SS222H

2014 YAMAHA GRIZZLY 700FI 4X4
(FRONT BOOT GUARDS WITH LIFT KIT)

REMOVE THE PLASTIC GUARDS BEFORE INSTALLING THE NEW METAL GUARDS.

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY ANY TORN BOOTS.

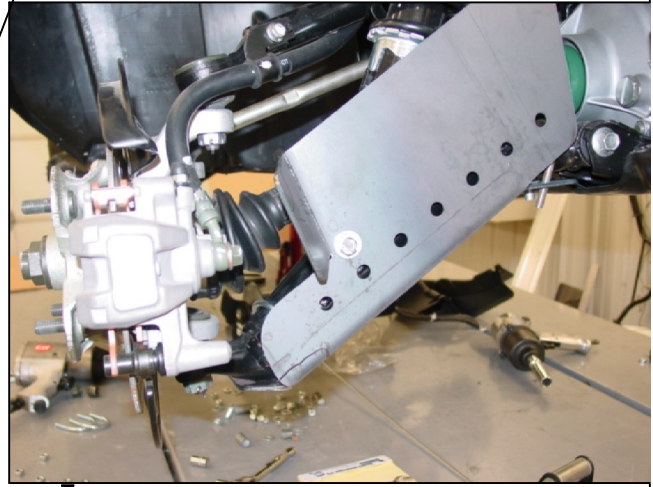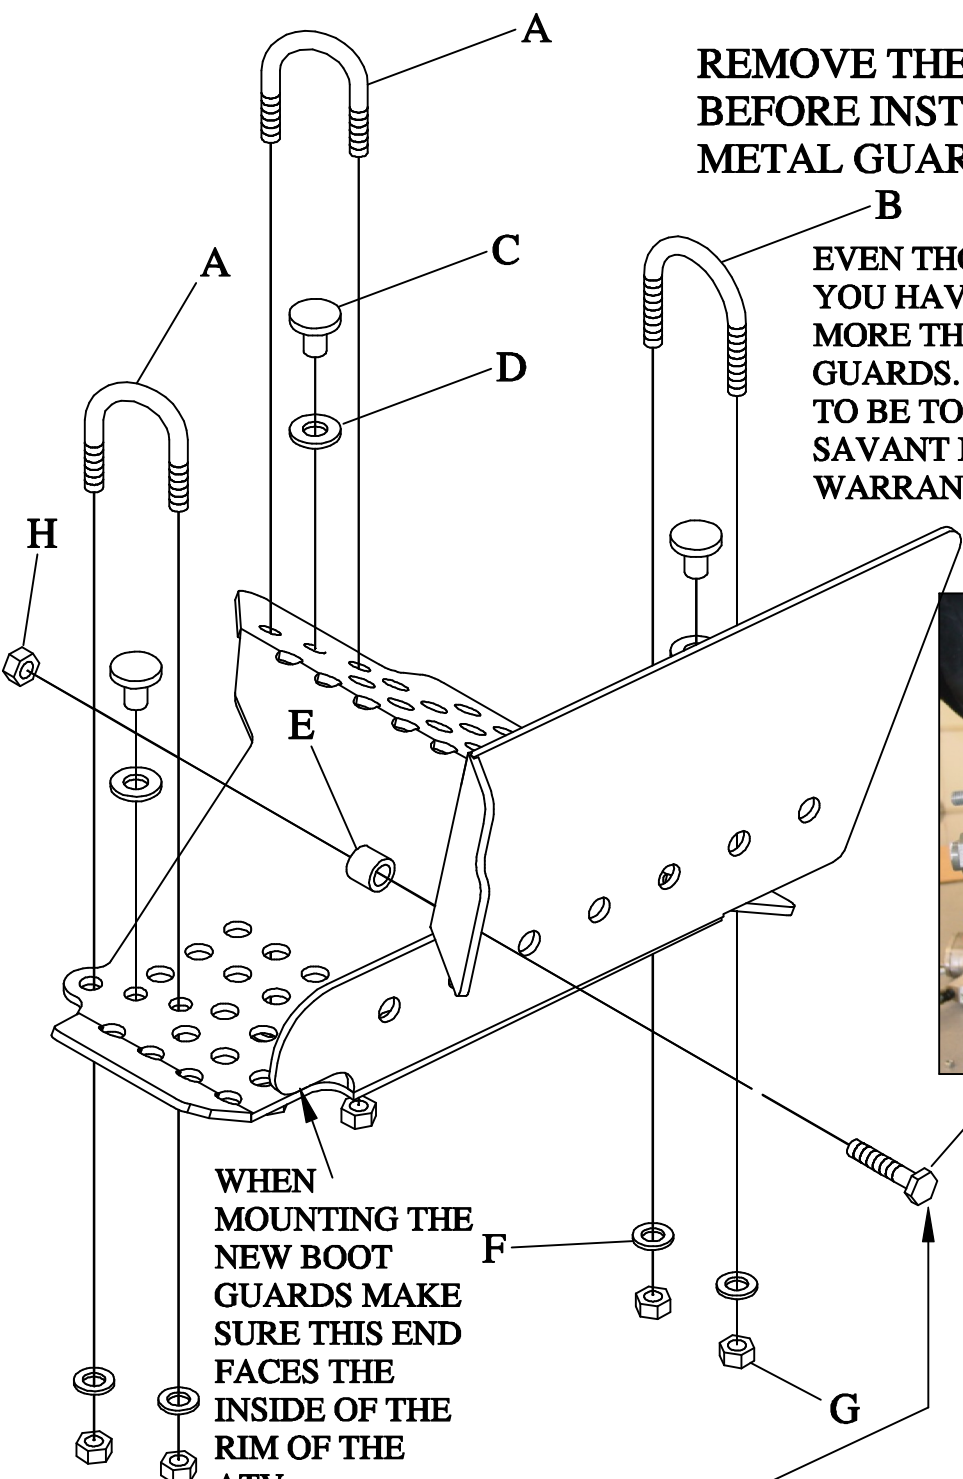

WHEN MOUNTING THE NEW BOOT GUARDS MAKE SURE THIS END FACES THE INSIDE OF THE RIM OF THE ATV.

PICTURE OF GUARD MAY VARY FROM WHAT YOU HAVE RECEIVED BECAUSE OF UPDATES ETC...

THIS BOLT WILL BOLT THROUGH THE BOTTOM SHOCK EYE REMOVE THE STOCK BOLT AND REPLACE WITH THE 60MM BOLT AND NUT.