

- 4=6MM X 25MM BOLTS-A
- 2=1/4 X 1 BOLTS-B
- 2=1/4 LOCK NUTS-C
- 6=1/4 SAE WASHERS-D
- 6=#16 TANNER RIVETS-E
- 6=5/16 SAE WASHERS-F
- 6=1/4" GALV SPACERS 3/8" LONG-G




#SS224H

FRONT GUARDS FOR YAMAHA VIKING 700

REMOVE ALL PLASTIC GUARDS TO INSTALL THE NEW METAL GUARDS.

PLACE THE RIVETS ALONG WITH THE 5/16 SAE WASHERS INTO EACH ONE OF THE HOLES. THESE WILL BE USED A SHIMS TO HELP WITH THE CLEANING OUT OF MUD ETC..

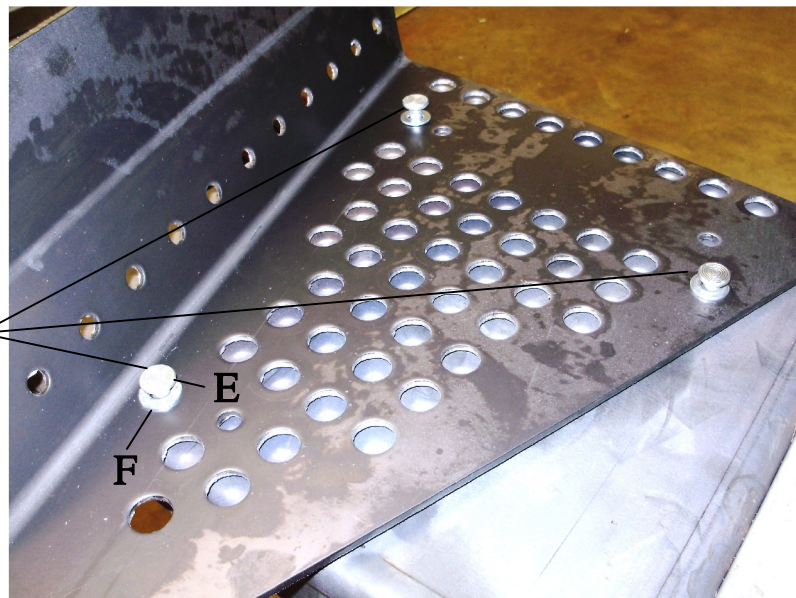

PLACE THE GALV. SPACERS OVER THE 6MM BOLTS TO MOUNT THE GUARDS TO THE CONTROL ARMS THESE WILL BE USED A SPACERS.



BOLT THE GUARDS TO THE ARMS WITH 6MM BOLTS WITH 1/4 WASHERS THE BOLTS WILL BOLT INTO STOCK LOCATIONS ON THE ARMS.

THIS END HAS BEEN TRIMMED ON THE UPDATED MODELS.

