




# #SS225H

YAMAHA VIKING 700 4X4 REAR GUARDS.

- 4=1/4X1 U-BOLTS-A
- 8=1/4 LOCK NUTS-B
- 4=ALUM RIVETS-C
- 4=5/16 SAE WASHERS-D
- 2=6MMX1MM BOLTS-E
- 10=1/4 SAE WASHERS-F
- 2=3/16X1 ZINC WASHERS-G

PLACE THE RIVETS AND WASHERS INTO THE MIDDLE HOLE OF THE TWO SETS OF HOLES IN THE TOP PART OF GUARD.

PLACE THE 3/16 X 1 WASHER OVER THE SINGLE HOLE AT THE BOTTOM OF THE GUARD. THIS WILL ACT AS A SPACER JUST LIKE THE TOP RIVETS DO ON THE GUARD.

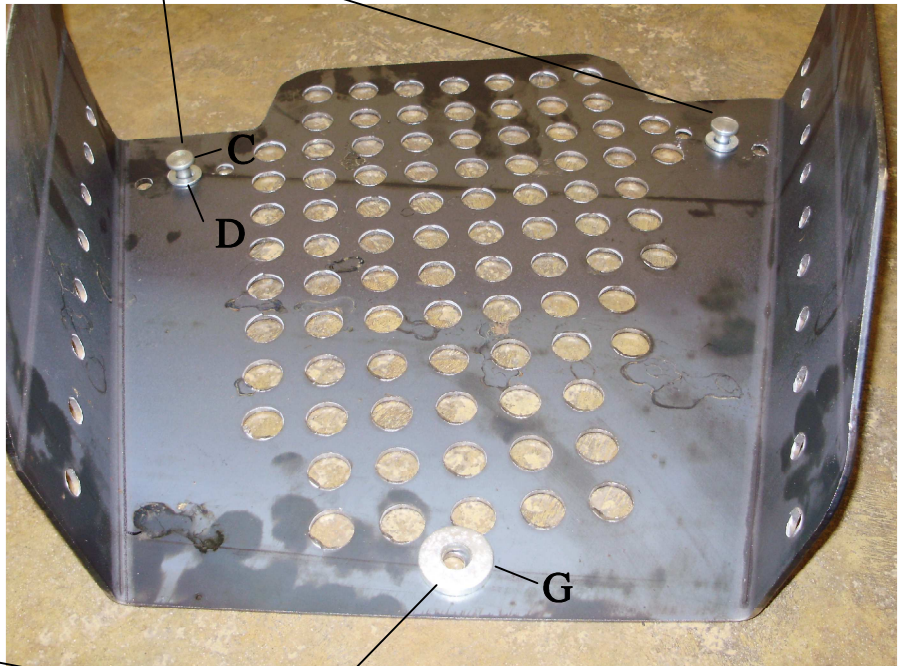

THIS A PIC OF THE REAR LEFT SIDE MOUNTED.

MAKE SURE THIS END IS FACING THE REAR LOOKING AT MACHINE. ALSO THIS EAR WILL BE FACING THE FRAME RAIL.

REPEAT SAME PROCEDURE FOR MOUNTING THE GUARD FOR THE RIGHT SIDE.

USE THE 6MM BOLT HERE TO MOUNT THE GUARD TO THE ARM.

