

- 4=#16 TANNER RIVITS-A
- 4=5/16 SAE WASHERS-B
- 2=3/16 X 1 FLAT WASHERS-C
- 10=1/4 LOCK NUTS-D
- 4=1/4 X 1 YELLOW U-BOLTS-E
- 10=1/4 USS WASHERS-F
- 2=1/4 X 7/8 BOLTS-G




# #SS240H

YAMAHA KODIAK 700 REAR BOOT GUARDS

EVEN THOUGH THE NEW BOOT GUARDS YOU HAVE PURCHASED WILL COVER MORE THAN THE ORIGINAL PLASTIC GUARDS. BOOTS HAVE BEEN REPORTED TO BE TORN IN SOME CONDITIONS. SAVANT MFG. (STRONG MADE) DOES NOT WARRANTY ANY TORN BOOTS.



THIS IS A PIC OF A DIFFERENT MACHINE BUT IT WILL BOLT THE SAME ON THE KODIAK 700.

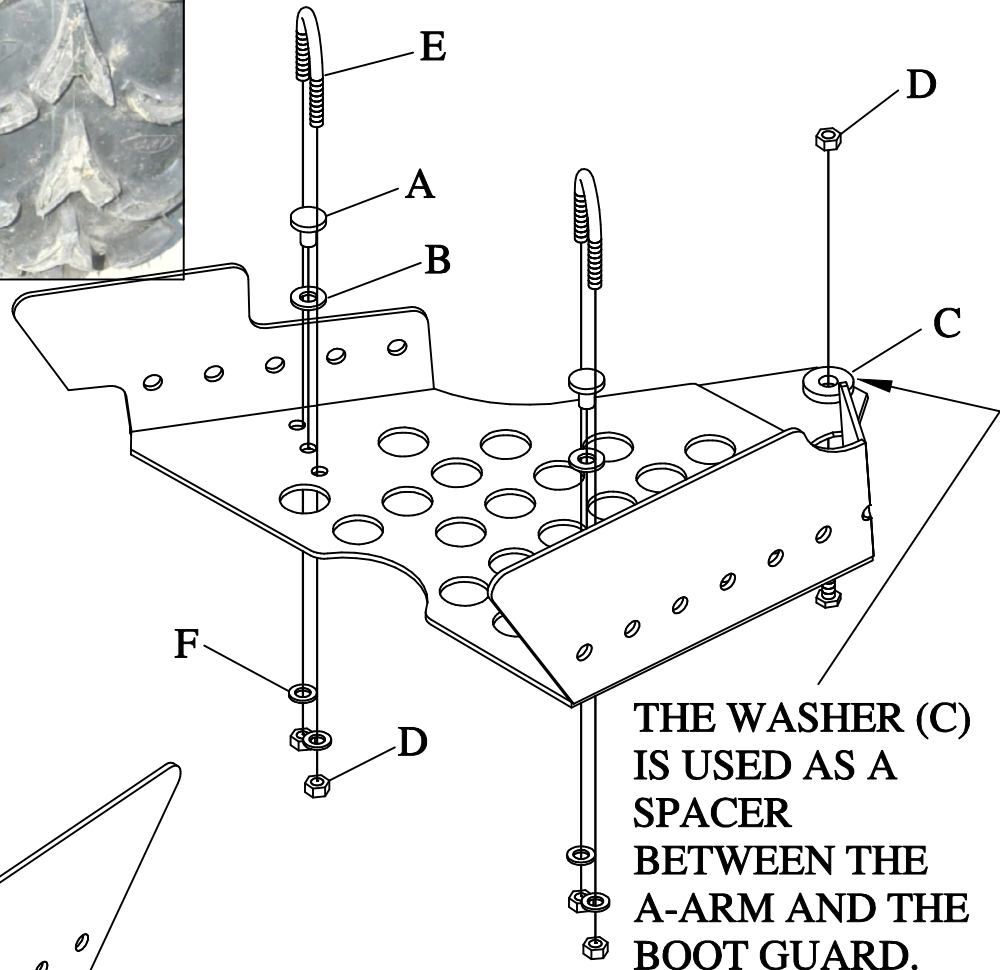

THE WASHER (C) IS USED AS A SPACER BETWEEN THE A-ARM AND THE BOOT GUARD.

REMOVE ALL PLASTIC GUARDS BEFORE INSTALLING THE BOOT GUARDS.

THIS END WILL FACE THE INSIDE OF THE RIM ONCE THE GUARD HAS BEEN INSTALLED UNDER THE A-ARM.

