

6=ALUM. TANNER RIVETS  
12=1/4 LOCK NUTS  
6=1/4X1 SQUARE LONG U-BOLTS 2 3/8 LEGS  
6=5/16 SAE WASHERS



# SS243H

HONDA PIONEER 1000 REAR

PLACE THE RIVETS WITH THE WASHERS INTO THE MIDDLE HOLE OF THE THREE. THIS WILL ACT AS A SPACERS.


REVIT

WASHER



PLACE THE GUARD UNDER THE CONTROL ARM WITH THE RIVETS AND WASHERS IN PLACE. THE LARGER BENT LIP WILL FACE THE INSIDE OF THE RIM ONCE MOUNTED.

1/4 LOCK NUTS

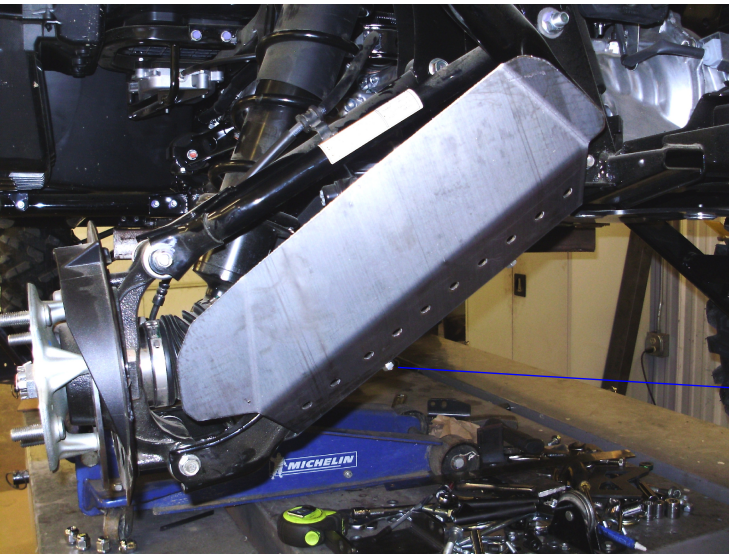

ONCE GUARD IS IN PLACE INSERT THE U-BOLTS IN FROM THE TOP THROUGH THE GUARD AND SECURE FROM THE BOTTOM WITH 1/4 LOCK NUTS.

U-BOLTS

THIS IS A PIC OF THE LEFT SIDE REAR. THE PROCESS WILL BE THE SAME FOR THE RIGHT SIDE WHEN MOUNTING.

