

- 3=5/16X1 3/4 BOLTS
- 3=5/16 SAE WASHERS
- 3=5/16 LOCK WASHERS
- 3=5/16 NUTS
- 4=1/4 NUTS
- 4=1/4 SAE WASHERS
- 4=1/4 LOCK WASHERS
- 4=1/4X7/8 BOLTS




THIS PLATE IS DESIGNED TO FIT THE RAMSEY 2500LB AND ALSO THE WARN 2000LB 2500LB WINCHES.

RAMSEY'S WINCH IS SUPPLIED WITH A ROLLER FAIRLEAD. THE WARN WILL COME WITH A HAWSE FAIRLEAD. THIS DEPENDS ON THE WINCH THAT IS PURCHASED. BOTH THE ROLLER OR HAWSE FAIRLEAD WILL MOUNT IN THAT SPECIFIC POSITION.

298019-R52

POLARIS MAGNUM 325 2X4

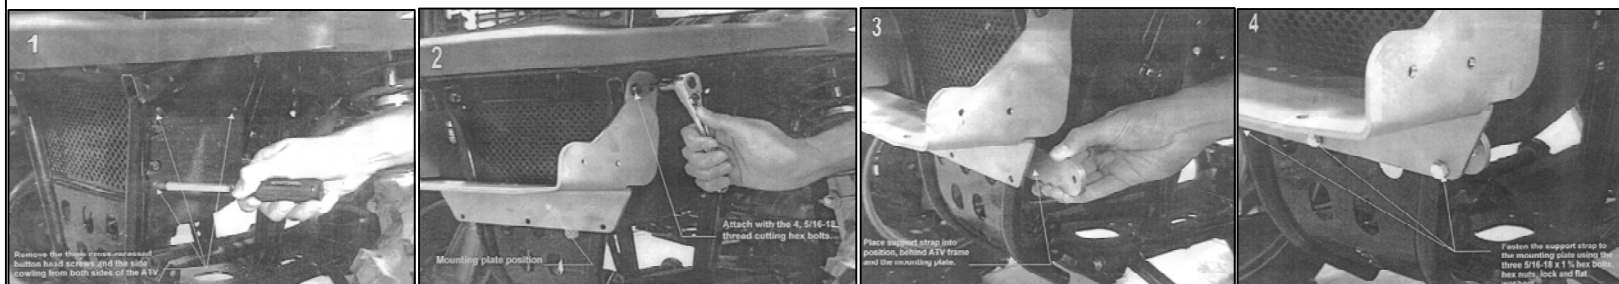

REMOVE THE PLASTIC COWLINGS. THEY ARE ATTACHED BUY THREE CROSS RESESSED BUTTON HEAD SCREWS SEE ILLUSTRATION 1.

PLACE MOUNTING PLATE IN TO POSITION AS ILLUSTRATED. ATTACH THE TOP WITH THE 4 1/4X7/8 BOLTS SUPPLIED FASTEN THEM WITH THE 1/4 LOCK WASHERS AND NUTS.

PLACE THE SUPPORT STRAP INTO POSTION. AND LINE THE HOLES UP TO RUN THE 5/16X1 3/4 BOLTS THROUGH

FASTEN ALL BOLTS AND NUTS BEFORE MOUNTING WINCH.

THE WINCH WILL MOUNT IN THE TRAY. THEN MOUNT THE ROLLER FAIRLEAD IN THE HOLES PROVIDED IN THE FRONT OF THE PLATE. USE THE HARDWARE THAT CAME WITH THE WINCH FOR THIS STEP.

IF THE HAWSE FAIRLEAD FROM WARN IS USED IN PLACE OF THE ROLLER FAIRLEAD USE THE BOLTS AND NUTS THAT OR ON THE HAWSE.